

Driver Position Memory Setting

This function memorizes for two drivers (driver 1 and 2) the positions of following components: Driver Electric Seat, Exterior Electric Rearview Mirror and Electric Tilt and Telescopic Steering Wheel (if equipped).

The button locates on the panel of driver door. Please set according to the following procedures:

- 1). Adjust following components to the required position: Driver Electric Seat, Exterior Electric Rearview Mirror and Electric Tilt and Telescopic Steering Wheel (if equipped).
- 2). Press the button and hold 3s.
- 3). Buzzer will sound 2 times to confirm the setting has been saved to the memory. Repeat the above steps to set the second position. Note! Memory button 2 shall be pressed!

LAUNCH