

Engine Oil Service Lamp Reset

Without Navigator

Vehicles are built with computer system, which has an indicator of "Replace Engine Oil" to inform car owners when to replace engine oil and filter. The system is based on engine turns and temperature instead of mileage. According to the driving condition, mileages to replace engine oil may differ greatly. To make sure the engine oil life monitoring works correctly, the system must be reset after each engine oil replacement.

When the engine oil life is calculated to have shortened, it prompts to replace engine oil. "Replace Engine Oil" indicator will also light up. At this time, engine oil shall be replaced soon. If vehicle is driven in excellent condition, it is possible that no engine oil replacement will be indicated by the engine oil life monitoring system after one year. But engine oil and filter shall be replaced at least once a year. Meanwhile, the system must be reset. If the system is reset by accident, engine oil must then be replaced within 5000km (3000miles) since the last replacement. Note! Engine oil life monitoring system must be reset after replacement of engine oil and filter.

- 1). Press CLR button at the right side of Driver Information Center (DIC) display screen, confirm "Replace Engine Oil" information.
- 2). Press Top/Down arrow on INFO button at the right side of Driver Information Center (DIC) display screen, enter DIC menu.
- 3). Press CLR button when "100% ENGINE OIL LIFE" brightly displays. The percentage will change to 100, which means engine oil life indicator has been reset. Otherwise, repeat the above steps.
- 4). Turn off ignition key. If "Replace Engine Oil" displays again when starting vehicle, it means the system reset has failed. Reset again!

With Navigator

- 1). Press the MULTIFUNCTIONAL button next to OK at right top corner of the display screen to confirm engine oil replacement information. This will clear information from display screen and reset.
- 2). Press "PWR/VOL" to power on the system. PWR/VOR locates at left bottom side of the Driver Information Center (DIC) display screen.
- 3). Press INFO button at left side of the display screen to enter menu "Vehicle Information".

- 4). Turn the "TUNE/SEL" knob at right bottom side of the display screen until "Engine Oil Life" brightly displays. Press the knob to select.
- 5). Press the MULTIFUNCTION button next to RESET at right top corner of the display screen when it displays "100% Engine Oil Life". The percentage will change to 100, which means engine oil life indicator has been reset. Otherwise, repeat the above steps.
- 6). Turn off ignition key. If "Replace Engine Oil" displays again when starting vehicle, it means the system reset has failed. Reset again!

LAUNCH