

Remote Key Matching

When adding new remote key and clearing lost key from memory, following procedure shall be performed:

- 1). Insert ignition key to ignition switch cylinder and turn from position 1 to position 3 (Figure 2). Turn the key 8 times from position 1 to position 3 within 10s. When the 8th turning completed, ignition switch shall be at position 3.
- 2). Vehicle door will lock and unlock to indicate Program Mode activated.
- 3). Press any button on the remote key (max. 6 can be programmed) within 20s, vehicle door will lock and unlock to indicate the remote key has been successfully programmed.
- 4). Repeat above steps for other remote keys.
- 5). When all remote keys are programmed, wait 20s or turn ignition switch to position 1 to quit Program Mode.

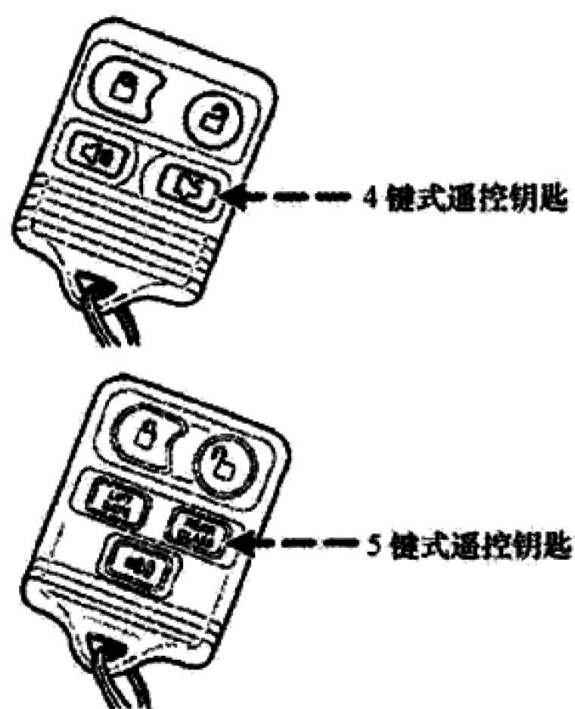


Figure1 Remote Key

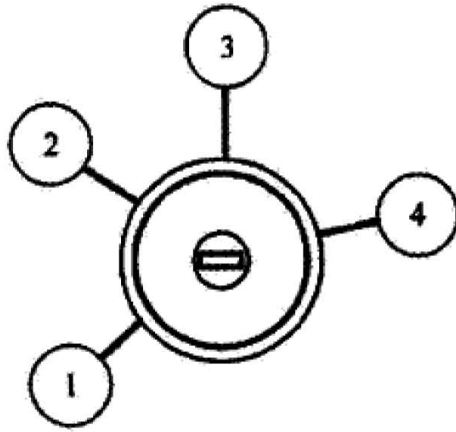


Figure2 Ignition Switch Position

LAUNCH