

## Driver Position Memory Setting

It is able to set and memorize two Electric Seat and Exterior Electric Rearview Mirror Positions and Steering Wheel Angles. Please set according to the following procedures:

- 1). Adjust Electric Seat, Exterior Electric Rearview Mirror and Steering Wheel Angle to the first favorable position, then press SET button;
- 2). LED light on SET button will light up shortly;
- 3). When the LED light is illuminated, press button 1 to memorize the position;
- 4). Adjust Electric Seat, Exterior Electric Rearview Mirror and Steering Wheel Angle to the second favorable position, then press SET button;
- 5). LED light on SET button will light up shortly;
- 6). When the LED light is illuminated, press button 2 to memorize the position.

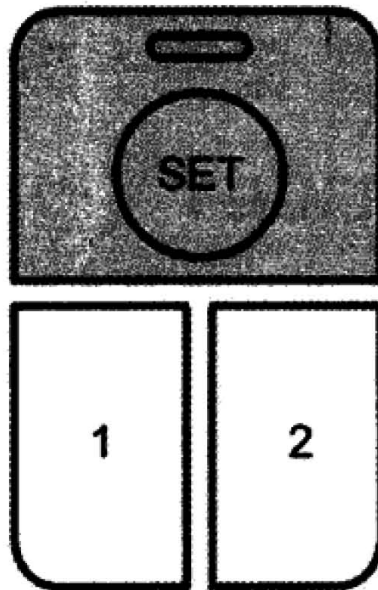


Figure of Position Memory Button