

B2215 FRONT CONTROL MODULE INTERNAL

- 1). When Monitored:
With the ignition on.
- 2). Set Condition:
The Front Control Module detects an internal fault.

Possible Causes
FRONT CONTROL MODULE

Diagnostic Test

- 1). REPLACE THE FRONT CONTROL MODULE IF DTC IS ACTIVE
With the scan tool, read the active FCM DTC's.

Does the scan tool display this DTC as active?

Yes >> Replace and program the Front Control Module in accordance with the service information.

Perform BODY VERIFICATION TEST – VER 1.

No >> If the DTC is stored, check for an intermittent condition. Visually inspect the related wiring harness connectors.

Look for broken, bent, pushed out, or corroded terminals.