

Activation of the PAC Camera View

Tested Model: VOLVO XC40 2023

Function Description:


This routine activates the view of the PAC (Parking Assistance Camera). The PAC displays images on the CCD (Center Console Display). The image includes part of the bumper and the tow-bar (if existing).



Execution Conditions:

- Set the vehicle usage mode to "Enabled" or higher.

Procedure:

1. On a PAD 5, choose [Diagnose], and then choose [Volvo] for testing.

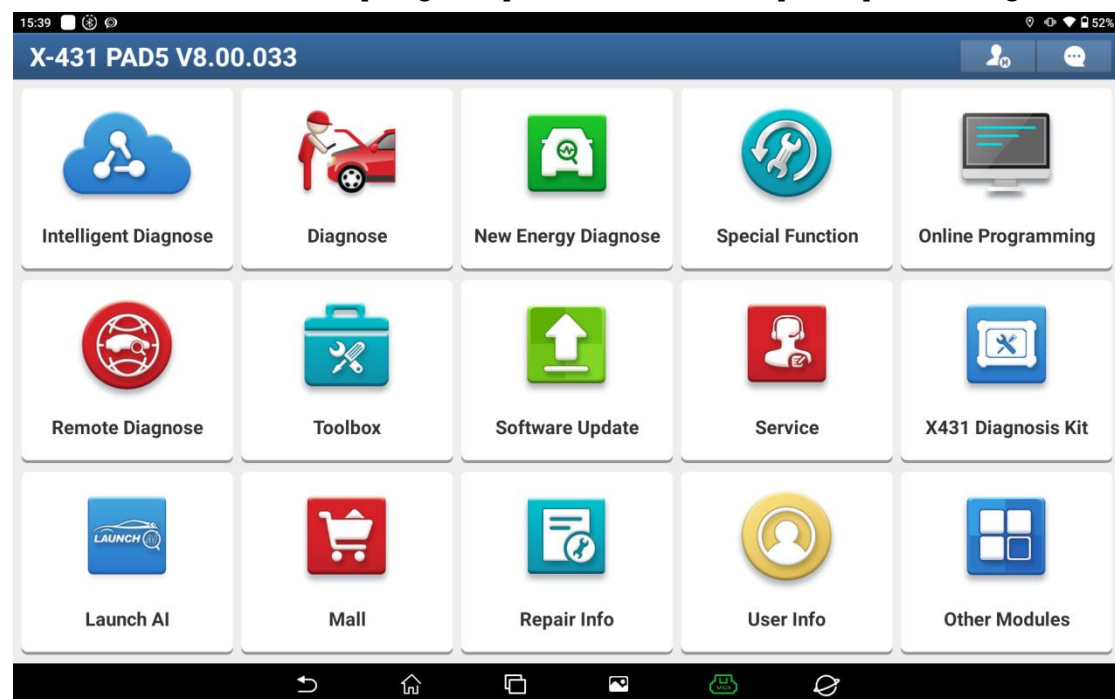

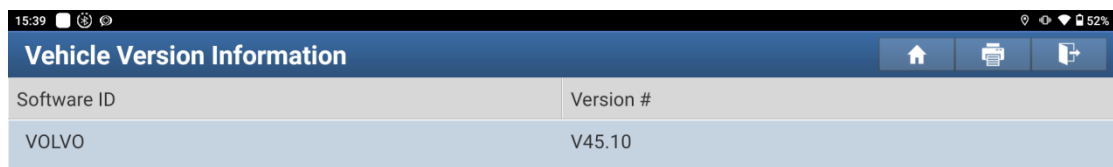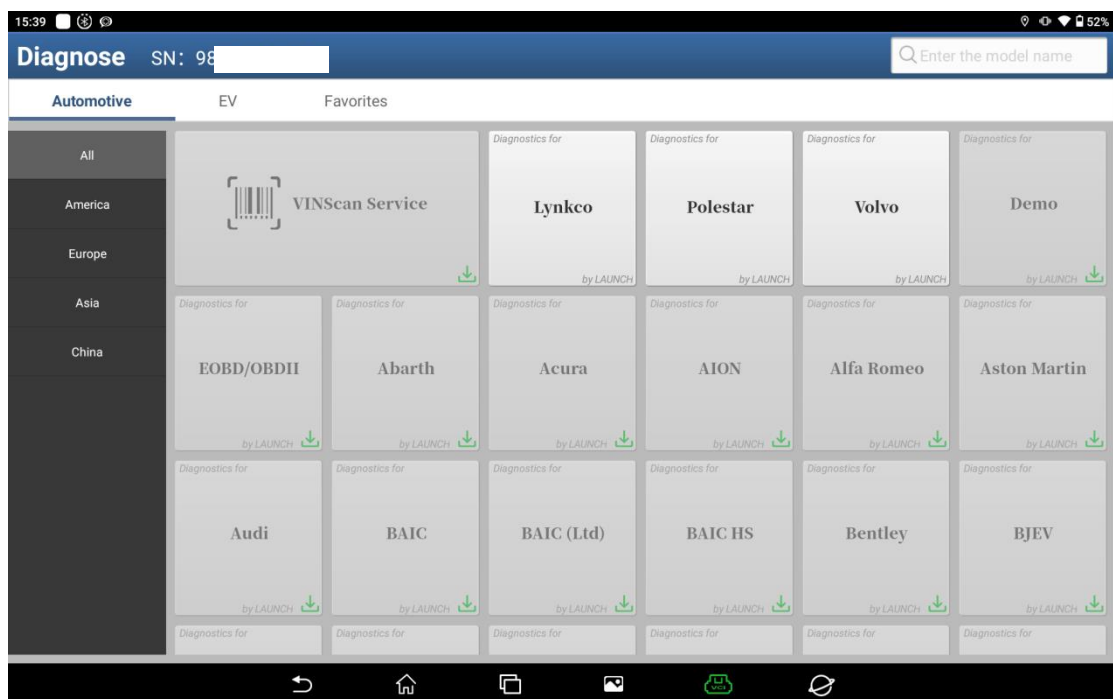

VOLVO/LYNK&CO/POLESTAR Diagnostic Software V45.10

Software Instruction

Summary For The Covered Ecu:

Engine Control Module, Fuel System/Combined System, Transmission Control Module, Anti-lock Braking System, Supplemental Inflatable Restraint System, Burn Warm-Up Module, Central Electrical Module, Upper Electronic Module, Rear Electronic Module, Driver Information Module, Passenger Door Module, Climate Control Module, Phone Module, Information Control Module, Parking Brake Module, Headlight Control Module, Combined Instrument Panel, etc. systems.

Summary For The Covered Basic Function:



- Reading ECU Information
- Reading DTCs
- Clearing DTCs
- Reading Vehicle Running Data
- Vehicle Component Operation Test

Summary For The Covered Special Function:


- **ECM (Gas Engine)**
Throttle matching
Reset adjusted value
- **DIESEL ENG (Diesel Engine)**
Reset adjusted value




2. Choose [Automatically Search] to enter automatic identification. Then carefully read the prompts, turn on the ignition switch as instructed, and click "OK".

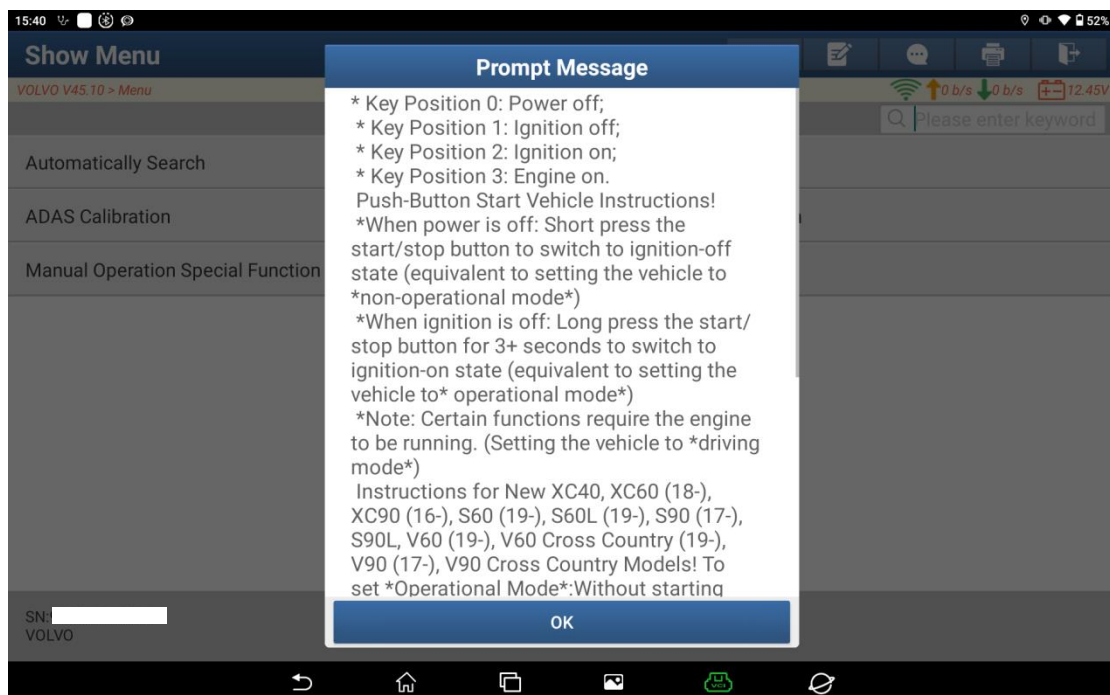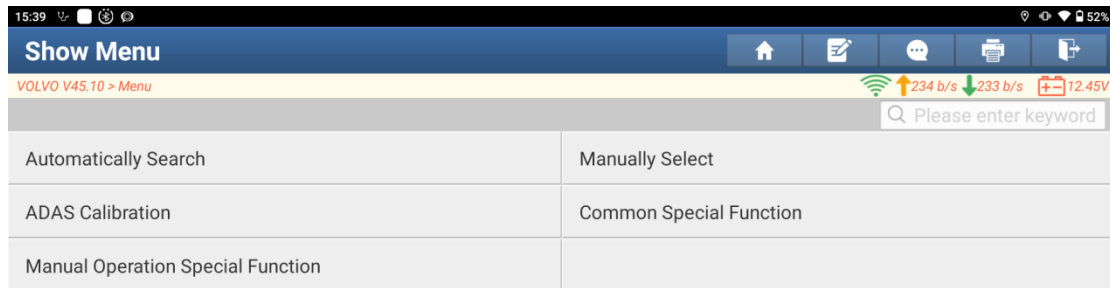

3. Choose the DOIP or CAN communication method.

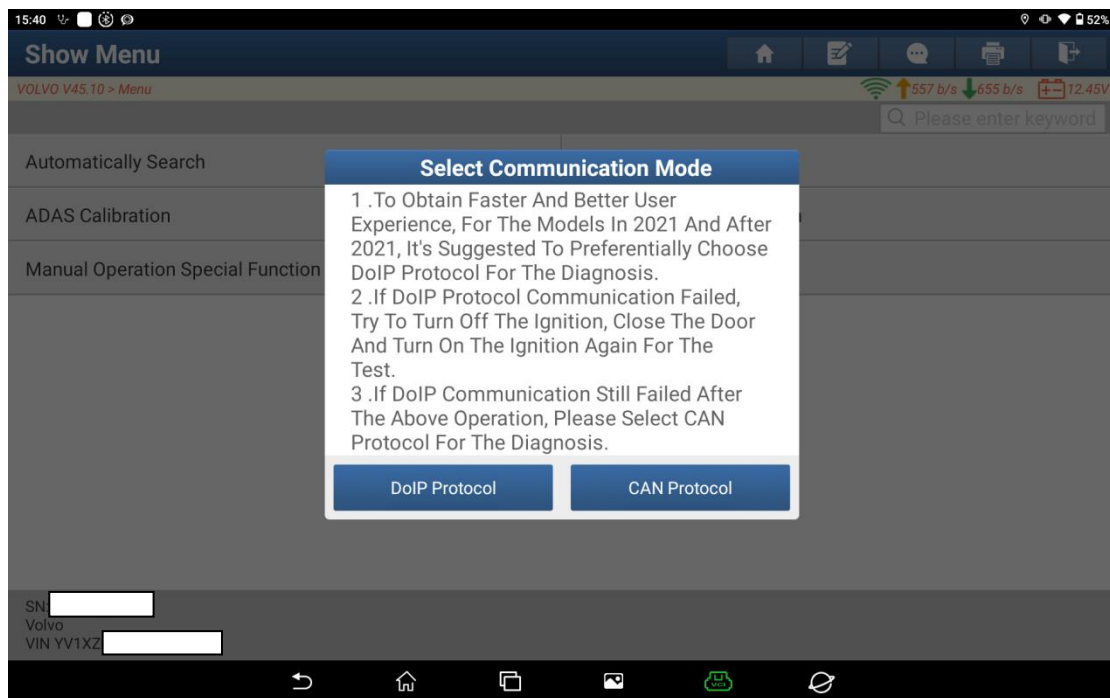


4. Choose the PAC system from the topology or system list and click "ENTER".

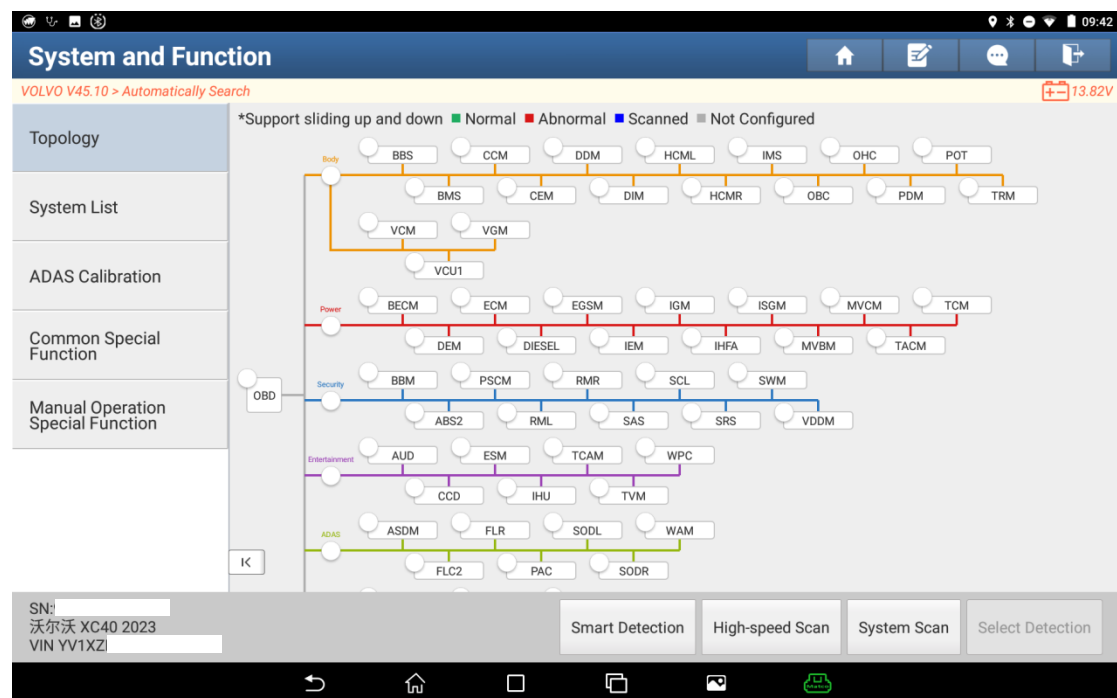





5. Choose [Special Function] on the system function interface.

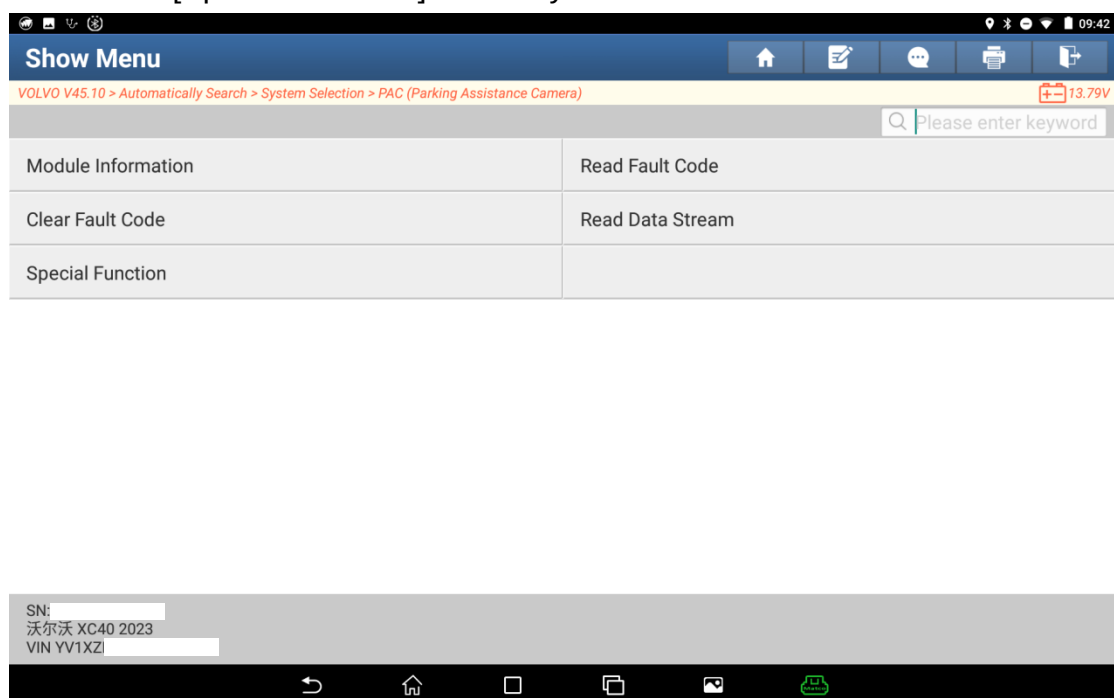


6. Carefully read the prompts, activate the vehicle usage mode as instructed, and click "OK".

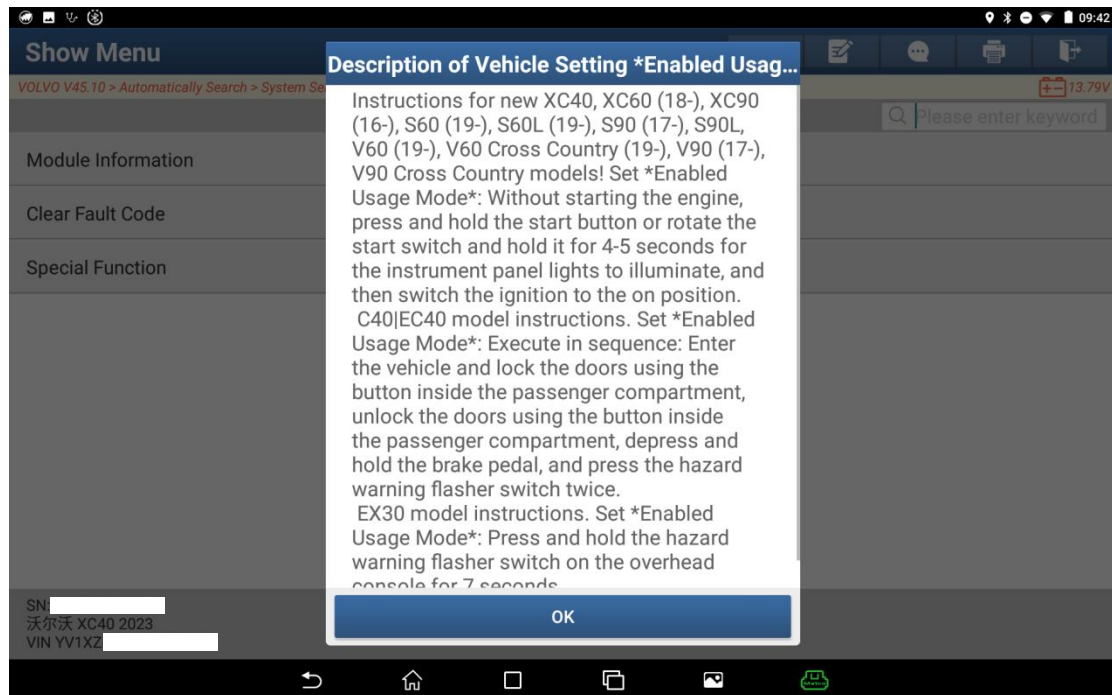


7. On the special function list interface, choose [Activation Of The PAC Camera View].

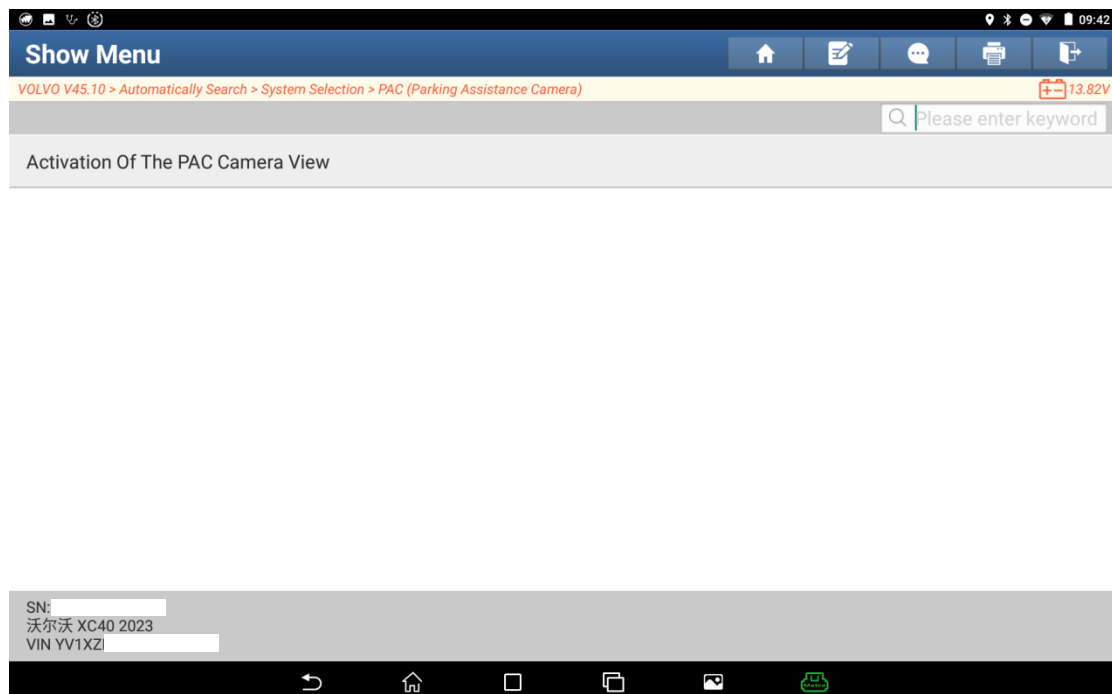


8. Carefully read the prompts, set the vehicle usage mode as instructed, and then choose "Activation PAC Camera View" to activate the PAC camera view.

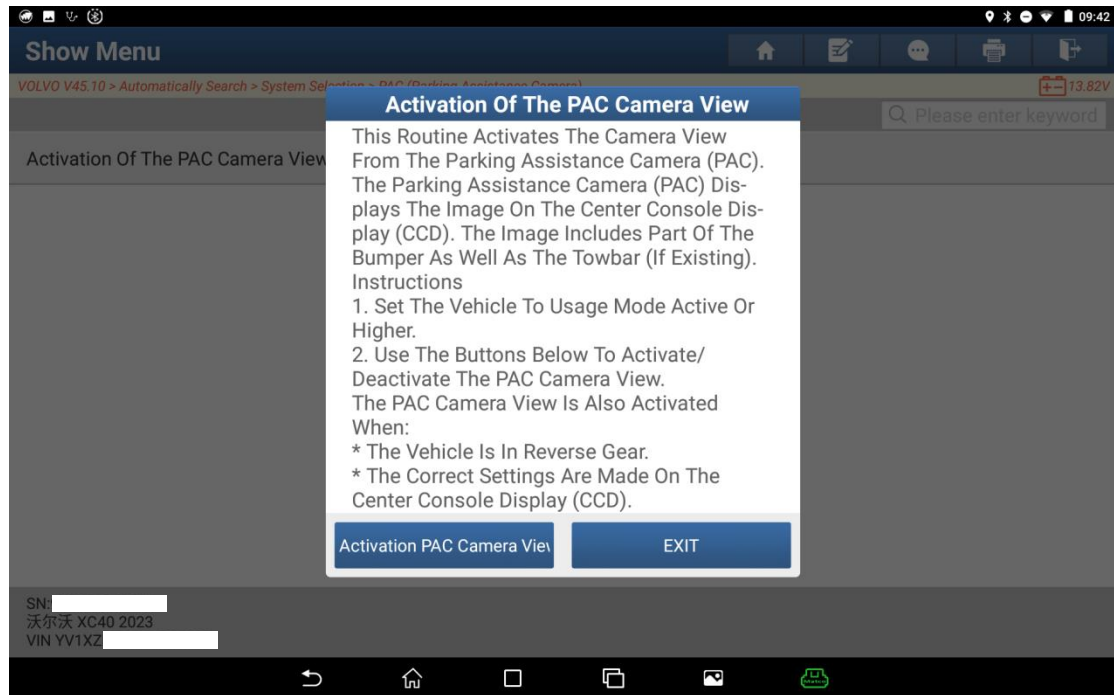


9. View the function execution result.

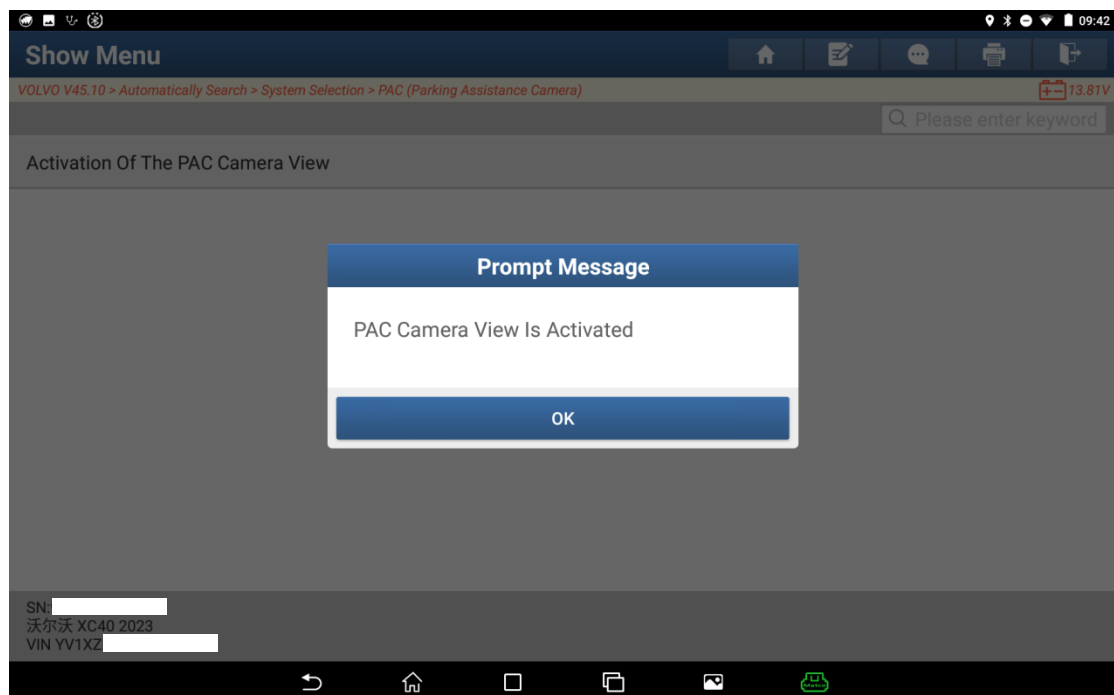

10. Choose "Deactivate PAC Camera View" to deactivate the PAC camera view.

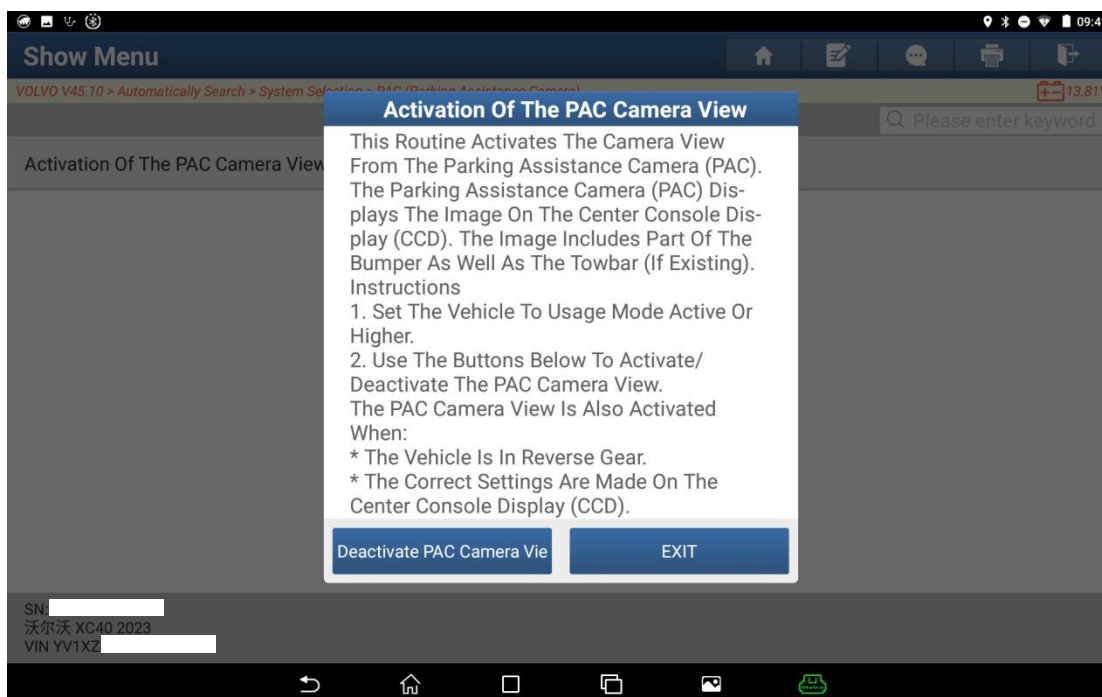

11. View the function execution result.

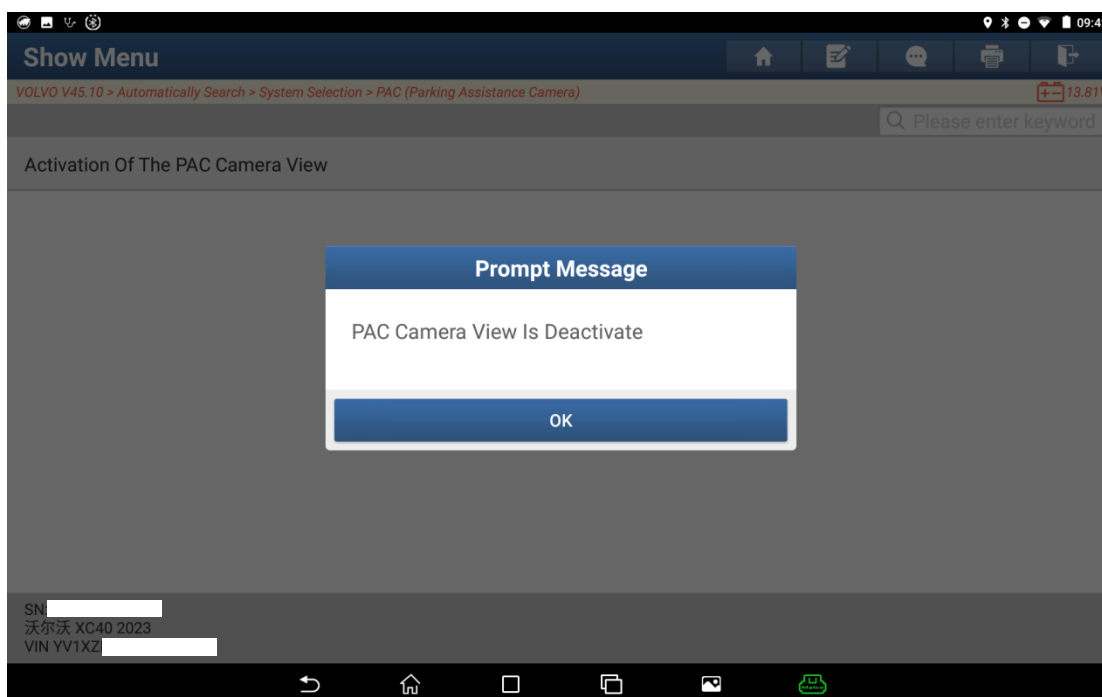

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.