

B1557: Wheel Speed Sensor and Its Circuit Malfunction

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • Wheel speed sensor circuit • ABS control module • Wheel speed sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	<p>DTC check</p> <p>1) Connect scan tool to DLC with ignition switch turned OFF.</p> <p>2) Check ABS for DTC.</p> <p>Is there DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036?</p>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.