

B1563: A/C Refrigerant Pressure Sensor and/or Its Circuit Malfunction

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • A/C refrigerant pressure sensor circuit • A/C refrigerant pressure sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	<p>DTC check</p> <p>1) Connect scan tool to DLC with ignition switch turned OFF.</p> <p>2) Check ECM for DTC.</p> <p>Are there DTC P0532 or P0533?</p>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.