
P0010: Camshaft Position Actuator Circuit (for engine with VVT system)

Wiring Diagram

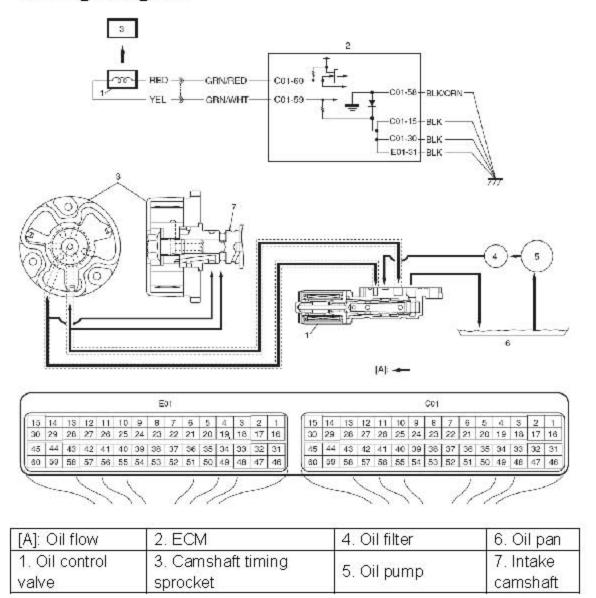

Circuit Description

Actual valve timing fails to become close to target advance level of each function although advance control function or retarded advance control function is at work.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Monitor signal of oil control valve is different from	 Oil control valve
command signal. (Circuit open or short)	
(1 driving cycle detection logic)	Oil control valve
	circuit
	•ECM

DTC Confirmation Procedure

- 1) Clear DTC. Refer to "DTC Clearance".
- 2) Start engine and keep it at idle for 10 seconds.
- 3) Check DTC. Refer to "DTC Check".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Oil control valve electrical circuit check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for proper connection at "C01-60" and "C01-59" terminals of ECM connector. 3) If OK, measure resistance between "C01-60" and "C01-59" terminals of ECM connector. Is resistance below 10 Ω?	Go to Step 3.	Go to Step 8.
3	Oil control valve electrical circuit check Was resistance more than 6.5 Ω in Step 2?	Go to Step 4.	Go to Step 7.
4	Oil control valve electrical circuit for power short check 1) Turn ON ignition switch. 2) Measure voltage between "C01-60" terminal of ECM connector and engine ground. Is voltage below 1 V?	Go to Step 5.	"RED", "GRN/RED", "YEL" or "GRN/WHT" wire is shorted to power supply circuit.

Step	Action	Yes	No
5	Oil control valve electrical circuit for ground short check 1) Disconnect connector from oil control valve with ignition switch turned OFF. 2) Measure resistance between "C01-60" terminal of ECM connector and engine ground. Is resistance infinity?	Go to Step 6.	"GRN/RED" wire is shorted to ground circuit.
6	Oil control valve electrical circuit for ground short check 1) Measure resistance between "C01-59" terminal of ECM connector and engine ground. Is resistance infinity?	Go to Step 7.	"GRN/WHT" wire is shorted to ground circuit.
7	Oil control valve electrical circuit for short check 1) Disconnect connector from oil control valve with ignition switch turned OFF. 2) Measure resistance between "C01-60" and "C01-59" terminals of ECM connector. Is resistance infinity?	Go to Step 8.	"GRN/RED" wire is shorted to "GRN/WHT" wire.
8	Oil control valve electrical circuit check 1) Disconnect connector from oil control valve with ignition switch turned OFF. 2) Measure resistance between "C01-60" terminal of ECM connector and "GRN/RED" wire terminal of oil control valve connector and between "C01-59" terminal of ECM connector and "GRN/WHT" wire terminal of oil control valve connector. Is resistance below 1 Ω?	Go to Step 9.	"GRN/RED" wire or "GRN/WHT" wire circuit is open or high resistance.
9	Oil control valve check Check oil control valve referring to "Oil Control Valve Inspection (For Engine with VVT) in Section 1D". Is resistance within specified value?	Substitute a known-good ECM and recheck.	Faulty oil control valve.