

U0073: Control Module Communication Bus Off

Refer to "Troubleshooting for CAN-DTC in Section 1A".


U0100: Lost Communication with ECM / PCM "A"

Refer to "Troubleshooting for CAN-DTC in Section 1A".


Inspection of TCM and Its Circuits

TCM and its circuits can be checked at TCM wiring connectors by measuring voltage, pulse signal and resistance.

- 1) Remove TCM (1) from vehicle referring to "Transmission Control Module (TCM) Removal and Installation".
- 2) Connect TCM connectors (2) to TCM.
- 3) Check voltage and/or pulse signal at each terminal of connectors connected using voltmeter (3) and oscilloscope (4).

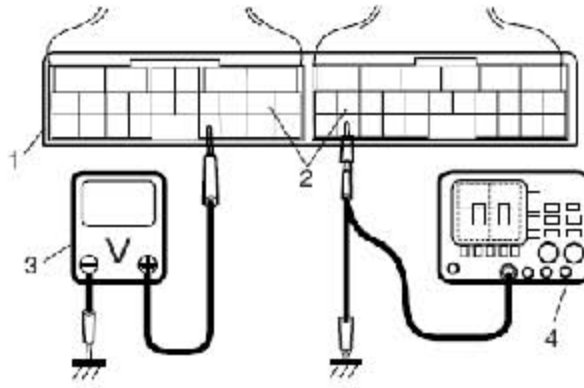

Terminal arrangement of TCM coupler (Viewed from harness side)

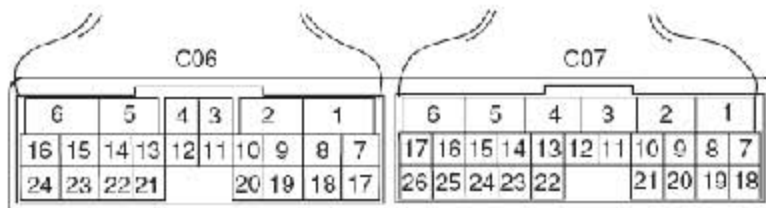

LAUNCH