

Engine Oil Service Lamp Reset

- 1). Turn on the ignition switch.
- 2). Open the hood.
- 3). Open the driver door.
- 4). Maintenance resetting information will be displayed on the instrument cluster.
- 5). Fully depress the accelerator and brake pedals and hold them for 60s.
- 6). Turn off the ignition switch.

Note: If maintenance information is not cleared, repeat the above procedure.

LAUNCH