Operation Method for the Reset of the Detection of Water in Fuel of 2013 Land Rover New Freelander 2

Product model	Date	Number
X-431 series	20160505	

Actual Measured Vehicle Model:

- Land Rover Freelander 2 Diesel, 2013, VIN=SALFA2BD7EH3****.
- The engine MIL is on; sometimes, the engine is hard to ignite, which shall go to the workshop to repair. After replaced the diesel lattice and drained the water, carry out the reset of the detection of water in fuel.

Operation method:

1).Select Land Rover V32.82 or above;

=	Selec	ct Version	Login
Vehicle		Version	
LANDROVER		V32.90	
	LandR	over V32.90	
		nission/ SRS/ Instrument/ ABS, etc.	
Software can test LandRover E			
Software can test LandRover E			
Software can test LandRover t			
Software can test LandRover E	ā	(⊻

2). It indicates the operator info. Confirm the vehicle model is correct;

\equiv	Show Menu								
LANDROVER V32,90 > mer	າຍ								
Automatically Search									
Manually Select Manually Reset Servic	Operator information The mode supports the follor 1. Range Rover(2006 -) 2. Range Rover Sport 3. Discovery 3 4. Discovery 4 5. Freelander 2 6. Defender(2007 -) 7. Range Rover Evoque For other vehicle models, bac Press OK to continue, or press	ck to the Manual Sele	ct mode to tes	t					
Sew S	Cancel	Pint	ок		() Hela				
	4	0	D						

3). Check the vehicle info, and click Yes to continue, select system selection

=			how Menu				Login		
LANDROVER V32.90 > met	μ.								
Automatically Search									
Manually Select	Vehicle information	яп							
Manually Reset Servic	Brand: Land Rover Model: L359 Model Name: New Freelander Engine:DW12 - 2. 2 DIESEL (High power) ModelYear: 2014 Trim:STANDARD 4wd								
		Na			Ves				
New S	3		Print			(i) Helo			
Here		4	0	Ö					

	Show M	lenu		Login
n > New Freelar	nder > 2014 > D	W12 - 2. 2 DIESEL	(High power)	
				(i)
4	10000			Help
	h > New Freela	h > New Freelander > 2014 > Di	Print	h > New Freelander > 2014 > DW12 - 2. 2 DIESEL (High power)

4).Select Special Function;

=		Show	Menu			Login
LANDROVER V32.90 > Automatically Sea	rch > New Freel	ander > 2014 >.	.L (High power) > S	System Selection	> PCM (Powertrain cont	rol module)
Read DTC						
Clear fault memory						
Read Data Stream						
Version Information						
Special Function						
Rew Session			Print		(j) Help	***
, tan ocoaron	<	0	D			

5). Select "Reset of the Detection of Water in Fuel". This procedure is required after drained the water to reset the mileage and the distance, which is related to the monitoring of water in fuel. The water must be drained manually from the fuel system before this normal procedure runs. Then click Confirm to continue;

			Login					
LANDROVER V32.90 > Aut Diesel fueling adaptio	tomatically Search > New Fre on re-initialization	elander > 2014 >L (High	power) > Syste	m Selection > PCM (F	² owertrain control module)			
Diesel particulate filte	er differential pressure s	ensor replacement						
Exhaust gas recirculat	Operator information							
Oxygen sensor	This routine is required to reset the values of mileage and distance, which relates to the monitoring of water within the fuel. The water must be manually drained from the fuel system prior to running this routine.							
Oxidation catalyst	Cancel		0	č.				
Reset water in fuel de	tection							
Turbine shut-off valve								
	3	-			0			
New S	Session <	O	σ					
	104092							

6). Turn the ignition on (Position 2), then click Confirm to continue;

\equiv	Show Menu Login								
LANDROVER V32.90 > Auto Diesel fueling adaption		ew Freelander > 2	014 >L (High po	wer) > Sysier	n Selection > PCM (P	owertrain control module)			
Diesel particulate filte	r differential press	ure sensor repl	acement						
Exhaust gas recirculat	Operator informati Set the ignition swi		n 2)						
Oxygen sensor									
Oxidation catalyst			OK						
Reset water in fuel det	ection								
Turbine shut-off valve									
NewS	3		Print						
(46M-2		⊲	0	0					

7). This procedure is the "Reset of the Detection of Water in Fuel", then click Confirm to continue;

	Show Menu Login									
LANDROVER V32.90 > Automatically Search > New Freelander > 2014 > _L (High power) > System Selection > PCM (Powertrain control module) Diesel fueling adaption re-initialization										
Diesel particulate filter differential pressure sensor replacement										
Exhaust gas recirculat	Exhaust gas recirculat Water in fuel Reset water in fuel detection									
Oxygen sensor										
Oxidation catalyst	Cancel		C	ж						
Reset water in fuel det	lection									
Turbine shut-off valve										
New Se		Pr	n.		() Help					
	<	0	٥							

8). The Reset of the Detection of Water in Fuel is completed, then click Confirm to continue;

		Show	Menu			Login
LANDROVER V32.90 > Automatically Search Diesel fueling adaption re-initializati		lander > 2014 >.	.L (High po	wer) > Syste	em Selection > PCM	(Powertrain control module)
Diesel particulate filter differential p	ressure ser	nsor replacen	nent			
Exhaust gas recirculat Water in fuel Complete.						
Oxygen sensor						
Oxidation catalyst		0	ĸ			
Reset water in fuel detection						
Turbine shut-off valve						
New Session			Print			(1) Help
	\triangleleft	0		Ö		

9). Turn the ignition off (Position 0) as indicated, then click Confirm to continue;

\equiv			Show Menu			Login
LANDROVER V32.90 > Auto Diesel fueling adaption		New Freelander >	2014 »L. (High po	ower) > Syste	m Selection > PCM (F	Powertrain control module)
Diesel particulate filter	differential pres	sure sensor rep	placement			
Exilia dor gao recircular	Ignition state Set the ignition sw	vitch to off(positi	ion 0)			
Oxygen sensor			-			
Oxidation catalyst			ок			
Reset water in fuel det	ection					
Turbine shut-off valve						
New Se	a Ession		Print			(i) Help
		\triangleleft	0			

10). Turn the ignition on (Position 2) as indicated, then click Confirm to continue;

\equiv	Show Menu Login									
LANDROVER V32.90 > Aut Diesel fueling adaptio			2014 >	L (High po	wer) > Syster	m Selection > PCM	I (Powertrain control module)			
Diesel particulate filte	r differential pre	ssure sensor re	placem	ent						
Exhaust gas recircula	Ignition state Set the ignition st	witch to on(posit	ion 2)							
Oxygen sensor										
Oxidation catalyst			01	ĸ						
Reset water in fuel de	tection									
Turbine shut-off valve										
	S ession			Print			() Help			
Alenie		⊲	0		D					

11). It indicates to clear all DTCs of the vehicle in the next step. Continue? Click Yes to continue;

\equiv	Show Menu				Login	
LANDROVER V32.90 > Auto Diesel fueling adaption		iew Freelander ⇒ 2	014 >L (High p	iower) > Syste	m Selection > PCM (P	owertrain control module)
Diesel particulate filter differential pressure sensor replacement						
Exhaust gas recirculat	Clear fault memor	y			2.	
Oxygen sensor	The next procedure will be to carry out a complete vehicle diagnostic trouble code clear. Do you wish to continue?					
Oxidation catalyst		No		Ye	5	
Reset water in fuel detection						
Turbine shut-off valve						
(C.	3		÷			(1)
New S		⊲	Print	Ö		Help

12). Turn the ignition off (Position 0) as indicated, then click Confirm to continue;

=	Show Menu	Login
LANDROVER V32.90 > Automati Diesel fueling adaption re-i	ically Search > New Freelander > 2014 > _L (High power) > System Selection > PCI initialization	M (Powertrain control module)
Diesel particulate filter diff	ferential pressure sensor replacement	
ennauer gao reen oura	tion state the ignition switch to off(position 0)	
Oxidation catalyst	ОК	
Reset water in fuel detection	on	
Turbine shut-off valve		
See Sessio	n Print	() Help
	⊲ o ⊡ 🗖	

13). Turn the ignition on (Position 2) as indicated, then click Confirm to continue;

			Show Menu			Login
LANDROVER V32.90 > Automatically Search > New Freelander > 2014 >L (High power) > System Selection > PCM (Powertrain control module)						
Diesel fueling adaption re-initialization						
Diesel particulate filter differential pressure sensor replacement						
Exhaust gas recirculat	Ignition state					
Set the ignition switch to on(position 2)						
Oxygen sensor						
Oxidation catalyst			ОК			
Reset water in fuel detection						
Turbine shut-off valve						
G	6					(i)
New S	ession		Print		_	Hinlp
		\triangleleft	0			

14).It indicates "Control module procedure successfully completed", then click Confirm to continue;

Ξ	Show Menu	Login			
LANDROVER V32.90 > Aut Diesel fueling adaptio	omatically Search > New Freelander > 2014 >L (High power) > System Selection > PC n re-initialization	M (Powertrain control module)			
Diesel particulate filte	r differential pressure sensor replacement				
Exhaust gas recirculat	Diagnostic trouble code clear and read Control module procedure completed successfully.				
Oxygen sensor					
Oxidation catalyst	ок				
Reset water in fuel detection					
Turbine shut-off valve					
(H	ession Print	(î) Help			
	d o 🗖 🗖				

15). Turn the ignition off (Position O) as indicated, and then click Confirm; At this time, the special function Reset of the Detection of Water in Fuel completed.

=	Show Menu	Login
	natically Search > New Freelander > 2014 >L (High power) > System Selection > PC	7M (Powertrain control module)
Diesel fueling adaption	re-initialization	
Diesel particulate filter	differential pressure sensor replacement	
Exhaust gas recirculat	Ignition state	
S	Set the ignition switch to off(position 0)	
Oxygen sensor		
Oxidation catalyst	ок	
		-
Reset water in fuel dete	ection	
Turbine shut-off valve		
G C	÷	1
New Ser	ssion Print	Help
	⊲ ∘ ⊏ 🔼	

LAUNCH is dedicated to pursuing good functions and addressing customer needs. Follow LAUNCH, you will "make a little progress every day"!

