Infiniti Replacement of Rear Brake Pad QX30 2017

Test model:

2017 Infiniti Qx30

Steps:

1. Turn on the ignition switch, connect the diagnostic connector, select Infiniti software, Select "Automatically Search"

<u>ب</u>	💡 🛪 🕕 🐨 📶 💼 67% 14:17
Show Menu	A 🖶 🗗
INFINITI V44.71 > Menu	🔁 12.24V
Automatically Search	Manually Select
Full system diagnosis	Programming/code setting
Maintenance	

Infiniti			
	\triangleleft	0	

2. Determine whether the vehicle information is normal and select "confirmed".

上		🕈 🕸 🛣 🗐 🕈 🖓 🖓 🕈 🖓
Vehicle Confirmation		
INFINITI V44.71 > Automatically Search		🗄 12.24V
VIN		
SJKDH53E1HA037687		~
Area		
North America		~
Country		
North America Common		~
Vehicle		
Exit	indeterminate	Confirmed
Infiniti		

3. Select "System Selection"

	🕈 🕈 🕩 🗣 📶 💼 67% 14:18
Show Menu	A ā P
INFINITI V44.71 > Automatically Search > North America > North America Comm	on > INFINITI QX30 > H15 > /2017 - > 🕮 12.24V
Health Report	System Scan
System Selection	NATS (Nissan Anti-theft System)
Configuration	Online programming/configuration

Infiniti			
	\Diamond	0	

4. Select "EHS/PKB"

N9 V	≱ 🕕 😪 📶 🔒 66% 14:22
Show Menu	
INFINITI V44.71 > Automatically Search > North America > North America Comm	on > INFINITI QX30 > H15 > /2017 - > System Selection > 💼 11.99V
ENGINE	ABS
METER/M&A	BCM
AIR BAG	HVAC
TRANSMISSION	MULTI AV
EHS/PKB	EPS/DAST 3
AIR PRESSURE MONITOR	INTELLIGENT KEY
AUTO DRIVE POS.	ALL MODE AWD/4WD
Infiniti	
⊲ (

5. Select "Actuation Test"

- 1	* 🕕 🐨 iiii 🛢 66% 14:22
Show Menu	
INFINITI V44.71 > Automatically Search > North America > North America Comm	on > INFINITI QX30 > H15 > /2017 - > System Selection > EHS/PKB 🖽 11.98V
Module Information	Read Fault Code
Clear Fault Code	Read Data Stream
Actuation Test	Special Function

Infiniti			
	\Diamond	0	

6. Select "move to assembly position "to display the prompt message

山 (1) な	≱ 🕩 🐨 📶 🔒 66% 14:22
Show Menu	A ē P
INFINITI V44.71 > Automatically Search > North America > North America Comm	on > INFINITI QX30 > H15 > /2017 - > System Selection > EHS/PKB 🖽 11.98V
Move to assembly position	Check left electric parking brake actuator motor
Check right electric parking brake actuator motor	ELECTRIC PARKING BRAKE

Infiniti			
	\bigtriangledown	0	

7. Click "YES"

■ ●				* •	😨 .ँगी 🛢 66% 14:22
Show Menu			A		P
INFINITI V44.71 > Automatically Search > Nort	h America > North America Comm	on > INFINITI QX30 > H15 > /2	2017 - > System Sel	ection > EHS/P	KB 🖽 12.10V
Move to assembly position		Check left electric par	king brake actu	ator motor	
Check right electric parking brake ad	ctuator motor	ELECTRIC PARKING B	RAKE		
	Syste	m info			
	The Vehicle Must Be At A Standstill. Secure the vehicle to prevent it rolling away. Release parking brake. Both actual values must have the status 'OPEN'.				
	NO	YES			
Infiniti					
	⊲ (

8. Select no monitoring data

国 领 W	* 0	😪 ाँ॥ 💼 66% 14:22
Show Menu 🔒		ŀ
INFINITI V44.71 > Automatically Search > North America > North America Common > INFINITI QX30 > H15 > /2017 - > System Se	lection > EHS/P	KB 🖽 12.27V
Monitoring data		
No Monitoring data		

Infiniti			
	\bigtriangledown	0	

■ 12 Vz		孝 🕕 😪 📶 盲 66% 14:22
Active Test	i P	
INFINITI V44.71 > Automatically Search > North America > North America Common > INFINITI Q	X30 > H15 > /2017 - > System Se	lection > EHS/PKB 🖽 12.33V
Name	Value	Unit
Move to assembly position		
MONITOR		
Status of RH EPB	apply 1	
Status of LH EPB	apply 1	

Move assy posi			Deactivate assy posi	
Infiniti				
		\triangleleft	0	

9. Select 'move assy posi', now the rear brake pad in assembly position. Next step, remove the rear brake caliper and replace the rear brake pad. Once the replace brake pad process done, Please proceed to step 10.

🗷 🦙 ひ 🔭 🔭 🕅 🖥 66% 14				
Active Test				
INFINITI V44.71 > Automatically Search > North America > North America Common > INFINITI Q	X30 > H15 > /2017 - > System Se	lection > EHS/PKB 🛅 11.97V		
Name	Value	Unit		
Move to assembly position	Apply PKB			
MONITOR				
Status of RH EPB	w back			
Status of LH EPB	w back			

Move assy posi			Deactivate assy posi	
Infiniti				
		4	0	

10. Select activate assy posi, Release PKB is displayed, and the process is completed

L 👘 V		≵ 🕩 😭 ភ្នំ∥ 🛢 66% 14:24
Active Test	^	Ē
INFINITI V44.71 > Automatically Search > North America > North America Common > INFINITI Q	X30 > H15 > /2017 - > System Se	lection > EHS/PKB 🛅 12.01V
Name	Value	Unit
Move to assembly position	Release PKB	
MONITOR		
Status of RH EPB	apply 1	
Status of LH EPB	apply 1	

Move assy posi			Deactivate assy posi		
Infiniti					
		4	0		