# CHRYLSER Wrangler(JL) Enable HV Battery Contactors for Service

**Supported equipment:** Launch's full range of comprehensive diagnostic equipment


**Current equipment: PAD 5** 


Function description: Enable HV (Hybrid Vehicle) battery contactors

for service on CHRYSLER Wrangler(JL)

Tested model: CHRYSLER/2023/Wrangler(JL), VIN: 1C4HJXEGXPW5\*\*\*\*\*

1. On a PAD 5, choose [Local Diagnose] and then [CHRYSLER] to test.

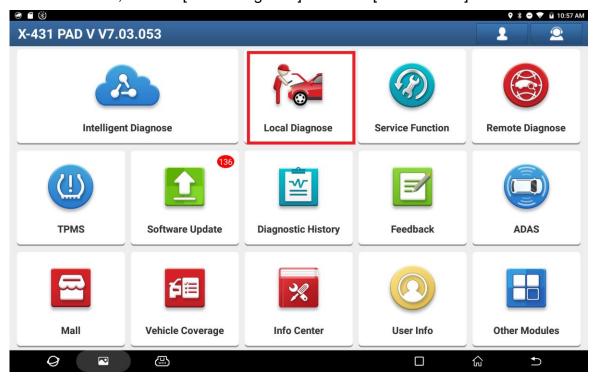

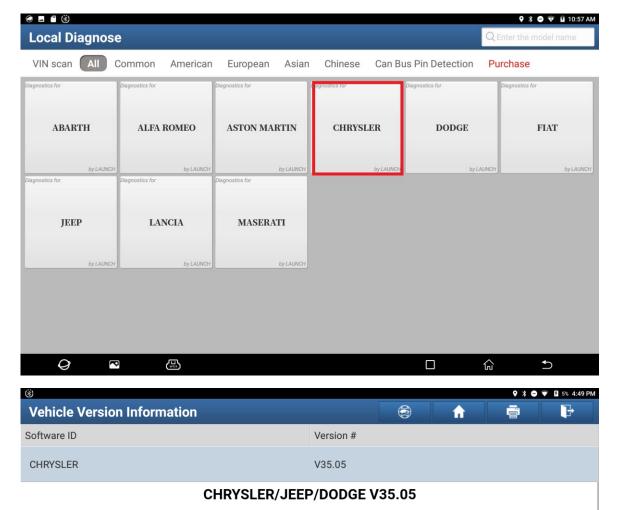

#### Introduction

#### **ECU Coverage:**

Engine, Automatic Transmission, Anti-lock Brake, Airbag, Body, A/C, Dashboard, Memory Seat, Trap-door, Steering Angle, Wireless Control Module, Tire Pressure, etc.

#### **Basic Functions:**


- Read Car Computer Information
   Read Car Fault Information
- Clear Car Fault Information
   Read Car Running Data
- Actuation Test For Car Component

#### **Special Functions:**

• ENGINE [Engine System]:
Check PCM Odometer, Check PCM VIN, Learn ETC, Reset ECU, Reset Memory, Clear Variable Line Pressure(VLP) Counters, Relearn Cam/Crank, Injector Quantity Adjustment, View/Reset duty cycle accumulators, View/reset trip information accumulators, Enable / Disable vehicle features, Reset Nox adsorber counts, Reset after treatment trip information, Turbo actuator pre-align / self calibrate, Reset regenerative filter timers, Reset Fuel Pressure Limiting Valve Accumulators, Stationary Desoot, View/Reset Duty Cycle Maps, Idle Shutdown Timer Adjustment, Oil Change Monitor Type, View/Reset NAC After Treatment Over Temp Events, Manual DPF Regeneration, DPF Replacement,





2. Choose [Automatically Search] to identify car models automatically.

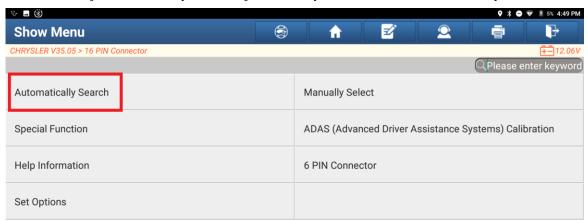



3. Click OK. It displays a prompt message indicating that the SGW needs to be unlocked.

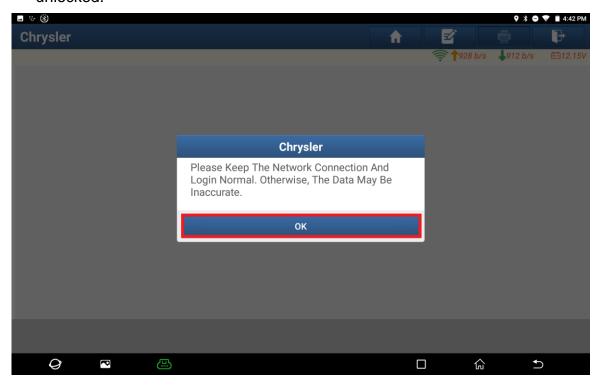


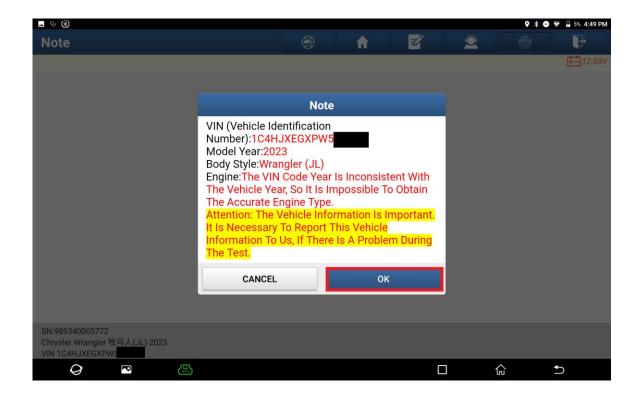


4. Click [Yes], choose [North America], and input the FCA account you purchased.






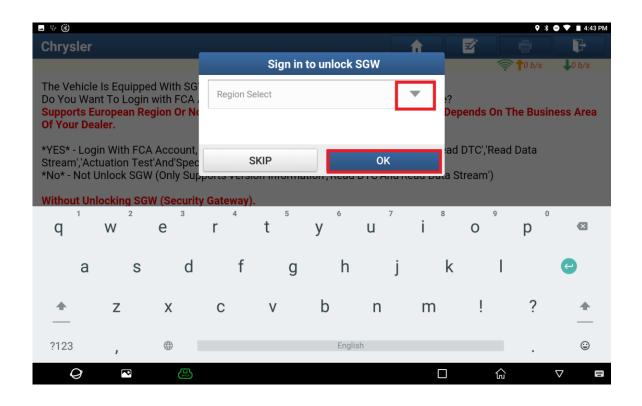


# 5. Click OK.

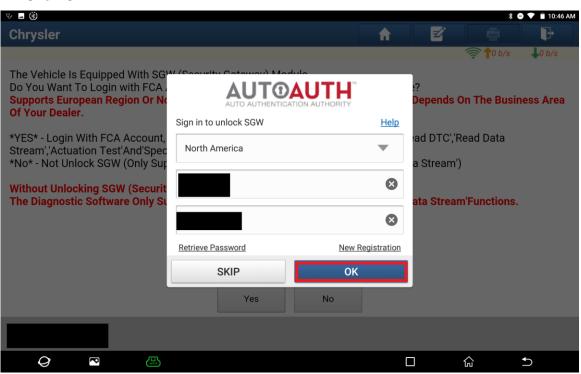


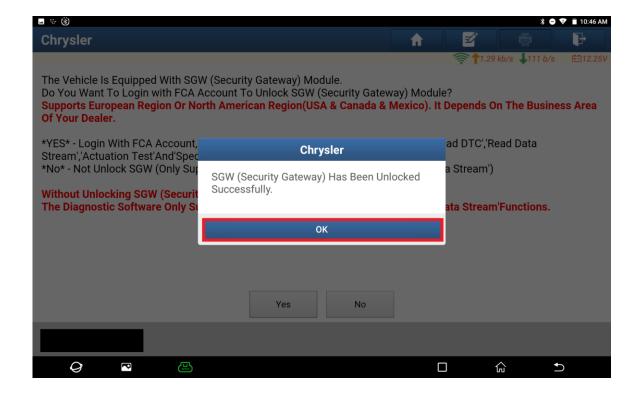

6. On the PAD 5, click [Smart Detection] to scan the entire vehicle systems.

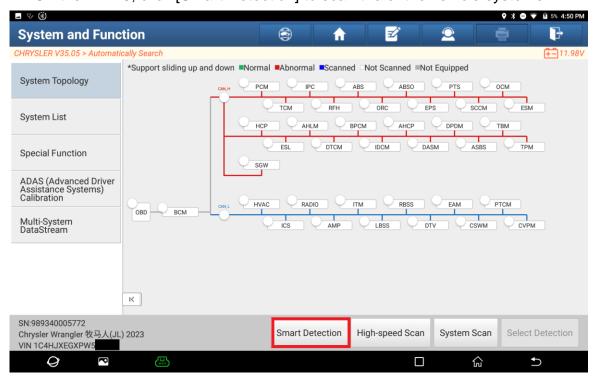

7. Click [BPCM (Battery Pack Control Module)] to access the system.

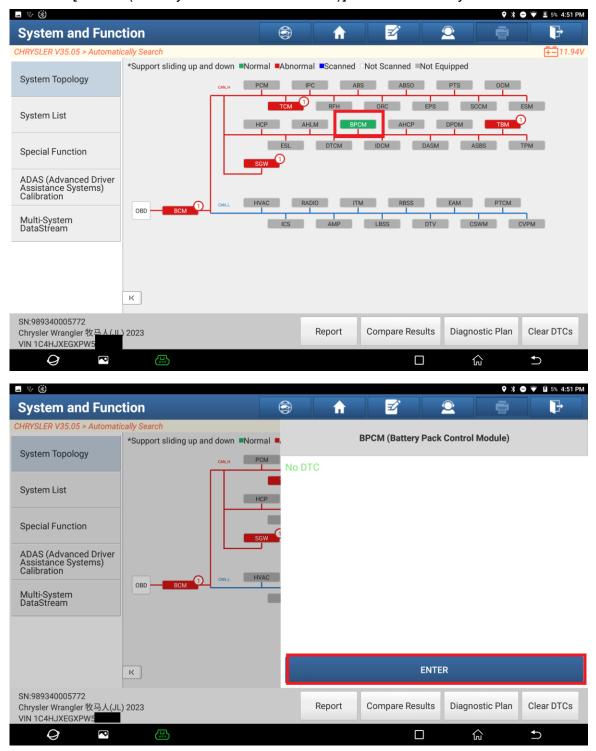


8. Click [Special Function].






9. Click [Enable HV (Hybrid Vehicle) Battery Contactors For Service].

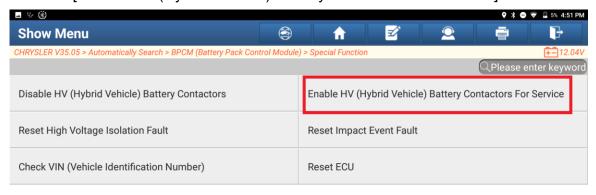





### 10. Click OK.

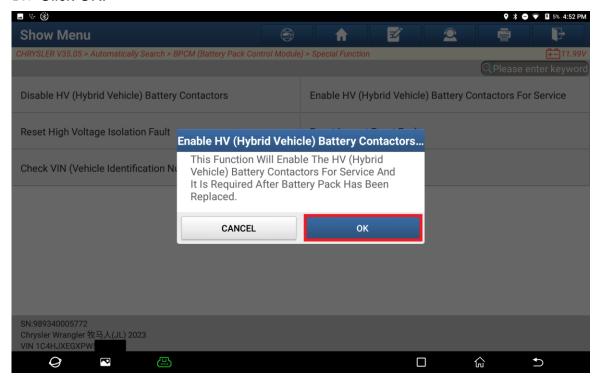

# 11. Click OK.

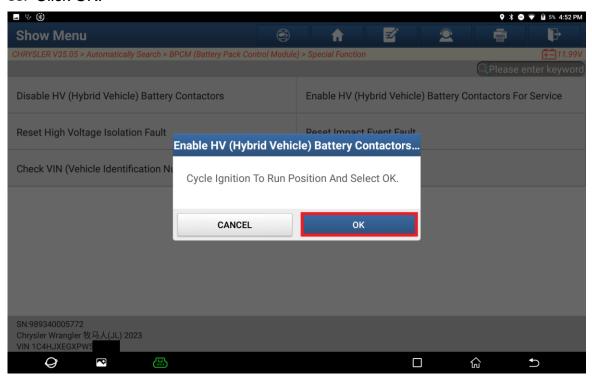

12. Click OK. The operations are completed.

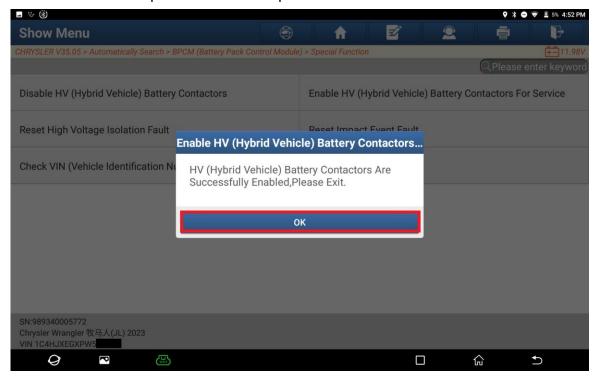

# **Statement:**

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.