

B2235 LEFT FRONT HEADLAMP BALLAST ECU INTERNAL

- 1). When Monitored:
Continuously with the Headlamps on.
- 2). Set Condition:
The code will set when a Check Sum error is detected.

Possible Causes
1. LEFT HEADLAMP BALLAST ECU FAILURE

Diagnostic Test

- 1). Verify DTC B2235-LEFT FRONT HEADLAMP BALLAST ECU INTERNAL IS ACTIVE
NOTE: If a DTC is set, erase the DTC and attempt to reset the DTC. If the DTC resets, follow test.
This is an internal Ballast ECU failure View repair
Does the DTC reset and read B2235-LEFT FRONT HEADLAMP BALLAST ECU INTERNAL?
Repair
Replace the Left Side Headlamp Ballast ECU in accordance with the service information.
Perform the BODY VERIFICATION TEST — VER 1.