

# B220D OCCUPANT RESTRAINT CONTROLLER ACCELEROMETER 2 INTERNAL

- 1). When Monitored:  
With the ignition on. The module's on board diagnostics continuously performs internal circuit tests.
- 2). Set Condition:  
This DTC will set if the module identifies an out of range internal circuit.

Possible Causes
1. OCCUPANT RESTRAINT CONTROLLER

## Diagnostic Test

- 1). REPLACE OCCUPANT RESTRAINT CONTROLLER  
Turn the ignition on.  
With the scan tool, erase and read ORC DTCs.  
**WARNING:** To avoid personal injury or death, turn the ignition off, disconnect the battery and wait two minutes before proceeding.  
**WARNING:** If the Occupant Restraint Controller is dropped at any time, it must be replaced. Failure to take proper precautions can result in accidental airbag deployment and personal injury or death.  
When this code is set, view repair.  
Repair  
Replace the Occupant Restraint Controller in accordance with the Service Information.  
Perform the ORC VERIFICATION TEST-VER. 1.