

B2239 HID LEVELING TRANSLATOR ECU INTERNAL

- 1). When Monitored:
Continuously with the ignition on.
- 2). Set Condition:
The code will set when the HID Module detects an internal failure.

Possible Causes
1. MODULE INTERNAL FAILURE

Diagnostic Test

- 1). Verify DTC B2239-HID LEVELING TRANSLATOR ECU INTERNAL IS ACTIVE
NOTE: If a DTC is set, erase the DTC and attempt to reset the DTC. If the DTC resets, follow test.
This is an internal module failure View repair
Does the DTC reset and read B2239-HID LEVELING TRANSLATOR ECU INTERNAL?
Repair
Replace the HID Translator Module in accordance with the service information.
Perform the BODY VERIFICATION TEST — VER 1.