

## Setting the Service Mileage Interval

- 1). Turn on the ignition switch.
- 2). Press and hold button C on the instrument panel until the direction or temperature is displayed. See the following figure.
- 3). Repeatedly press button A until the service mileage interval is displayed.
- 4). Press button B and hold it for at least 3 seconds until the display screen is reset.
- 5). Turn off the ignition switch.

