

Ford EcoSport Set The Warranty Start Date


Supported equipment: Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5

Function description: This function is only used to set the warranty start date in the IPC configuration when a message on the IPC indicates that the maintenance warning function is not enabled.

Tested model: Ford/2022/EcoSport, VIN: WF01XXERK1NB *****

1. On a PAD 5, choose [Local Diagnose].

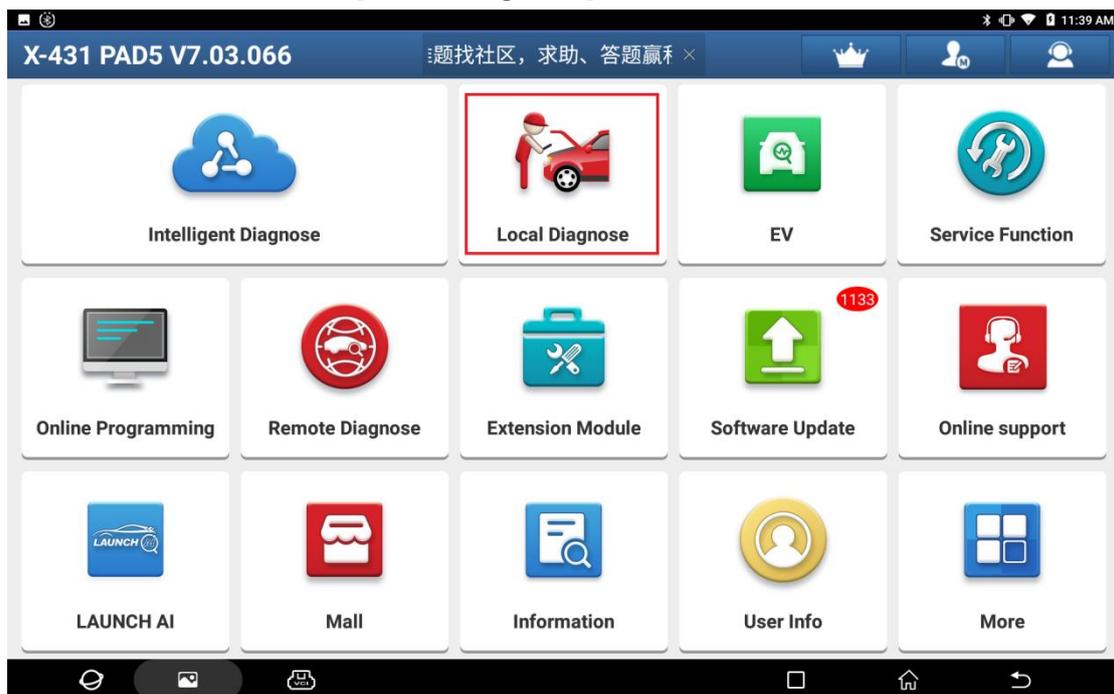

2. Choose [FORD] to test.



Ford Diagnosis V50.65

Software Introduction

ECU Coverage:

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.

Basic Functions:



- Reading ECUs
- Reading DTCs(Diagnostic trouble code)
- Clearing DTCs(Diagnostic trouble code)
- Reading Vehicle Running Data
- Vehicle Component Operation Test


Special Functions:

- Programmable Module Installation
- ESP(Electronic Stability Program) Sensor Calibration
- PCM (Powertrain Control Module) Or ICM (Instrument Control Module):
 *Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset, Unlimited Key Mode ON/OFF, Program Unlimited Key Code)




3. Choose [Automatically Search] to identify car models automatically.

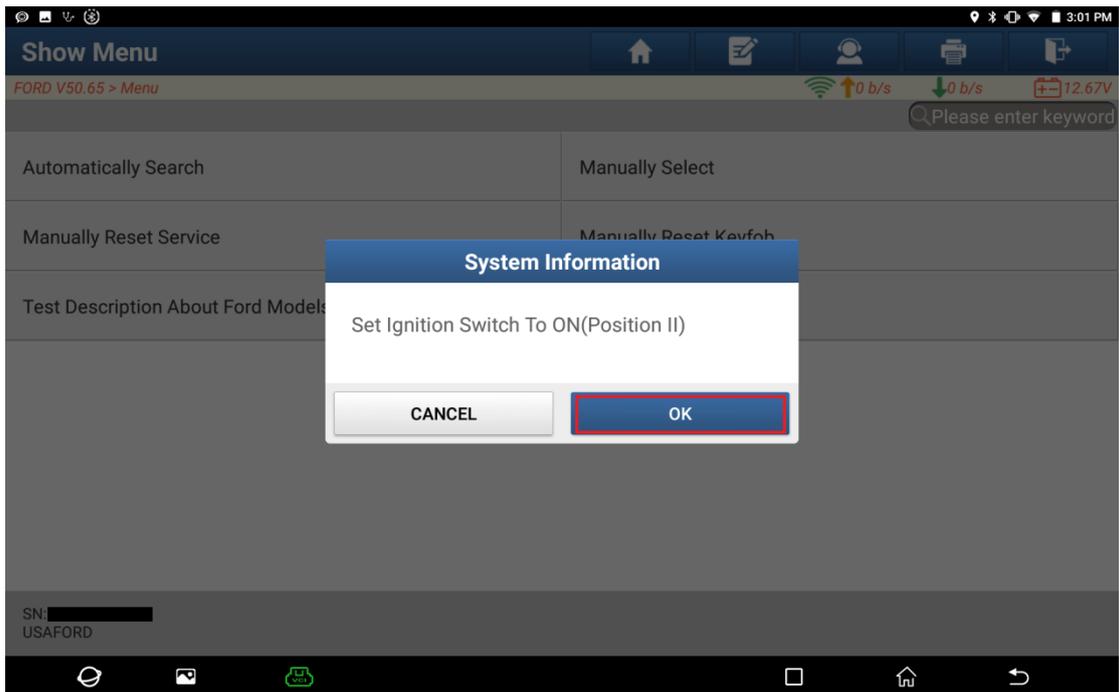
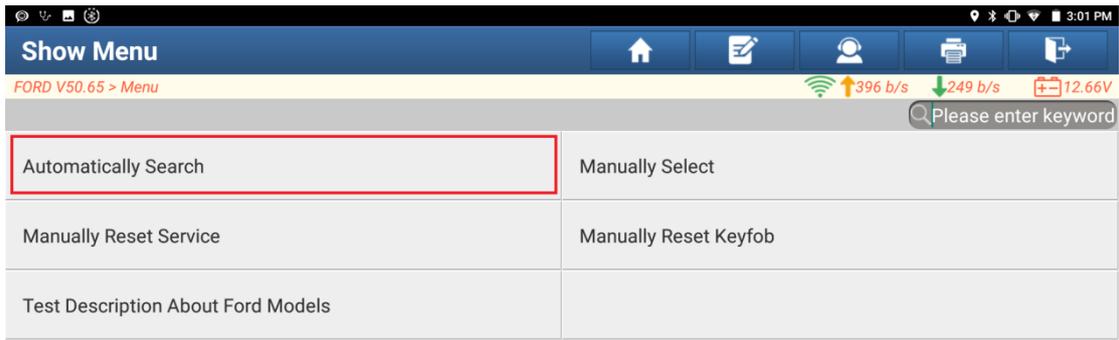


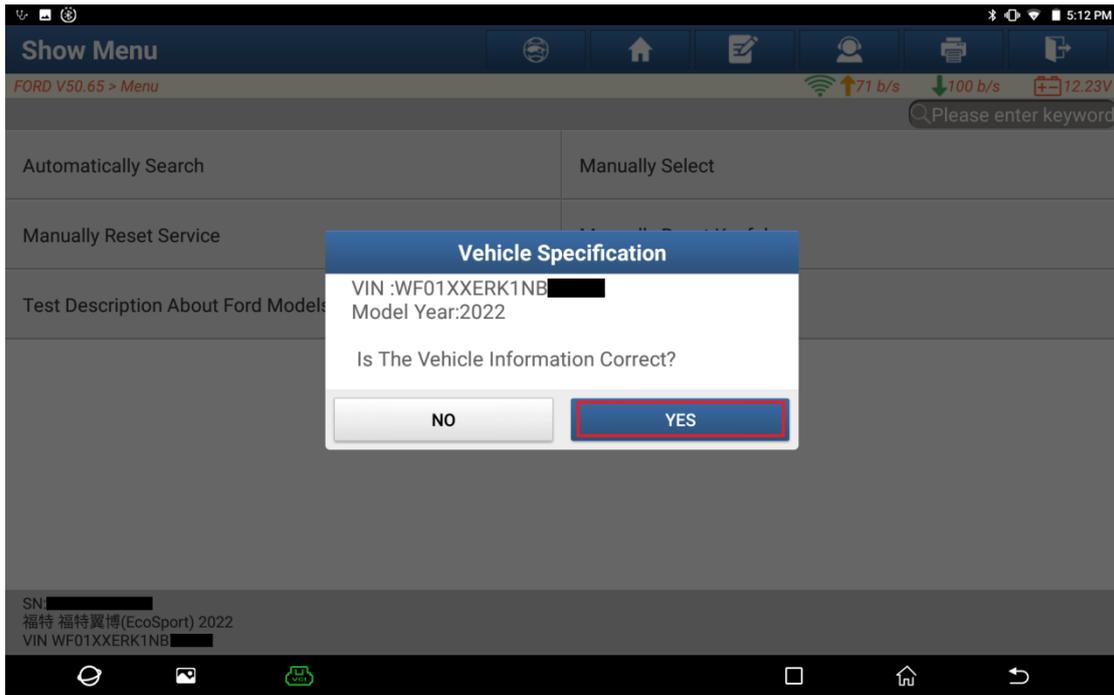


4. Click [Smart Detection] to scan the entire vehicle systems.

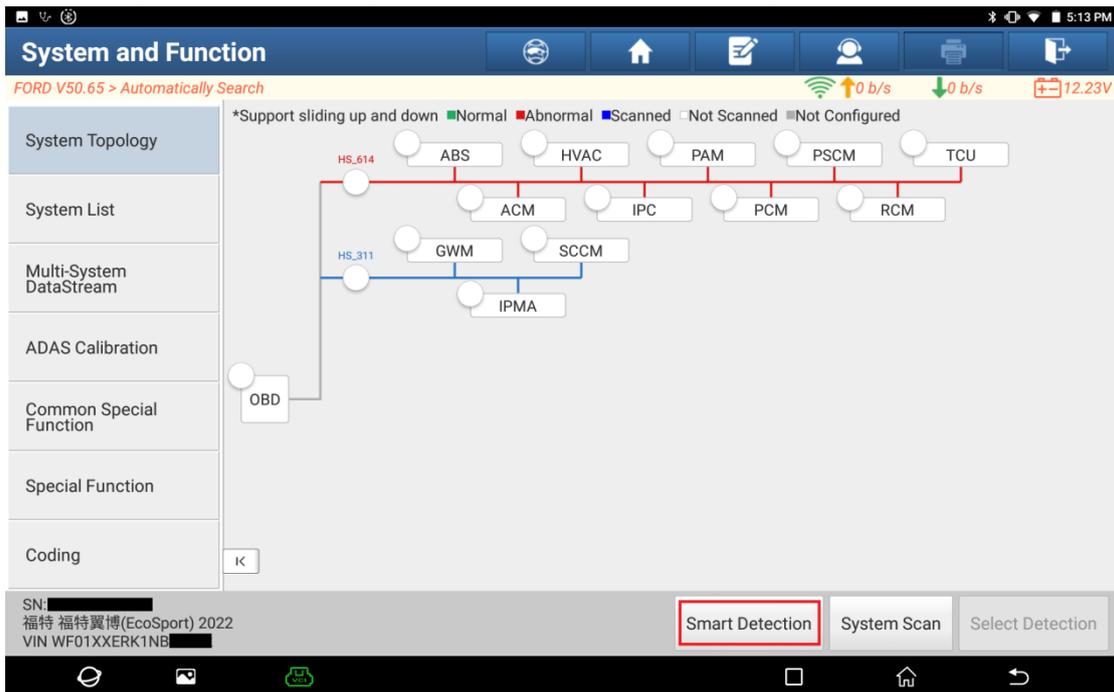


5. Click [IPC (Instrument Panel Cluster)] to access the system.

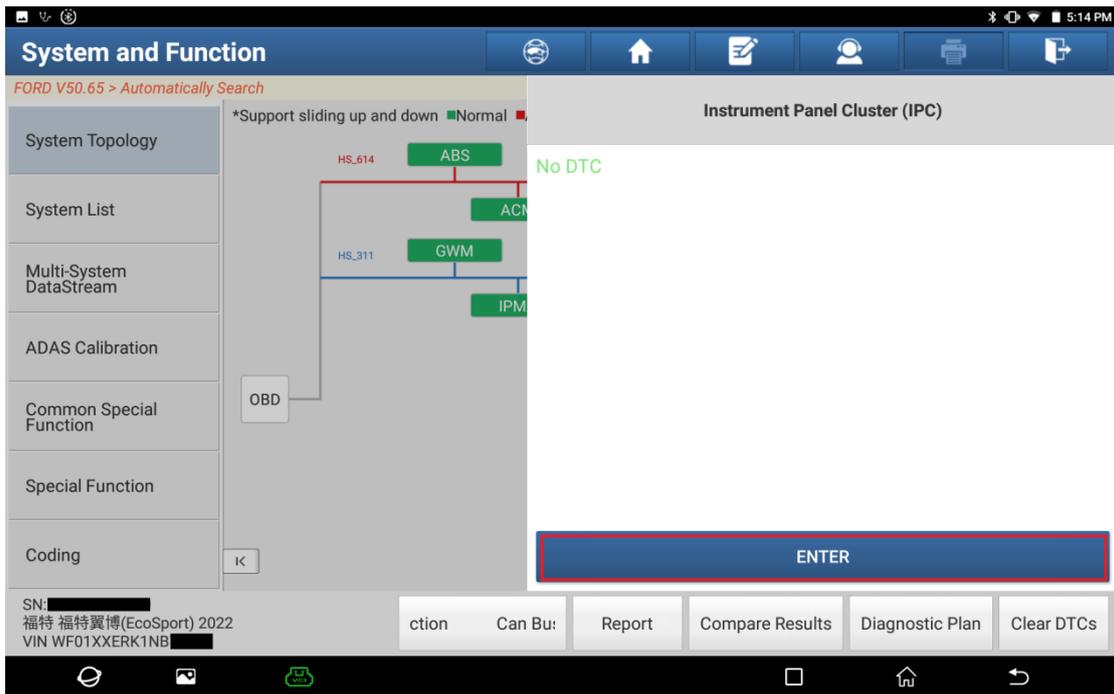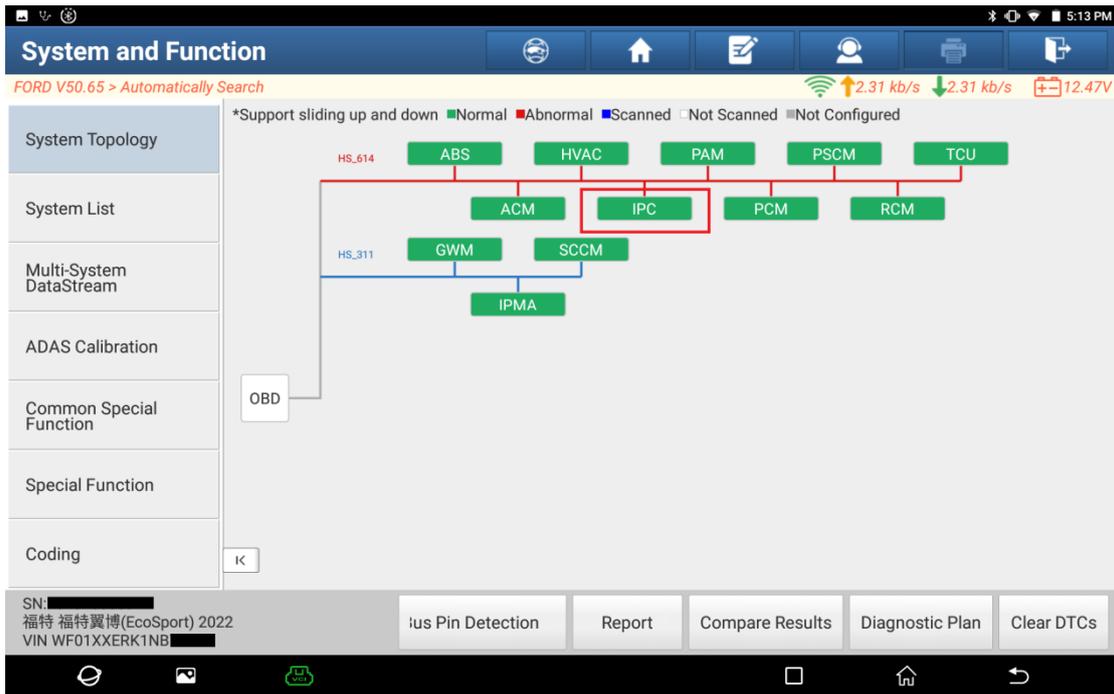


6. Click [Special Functions].

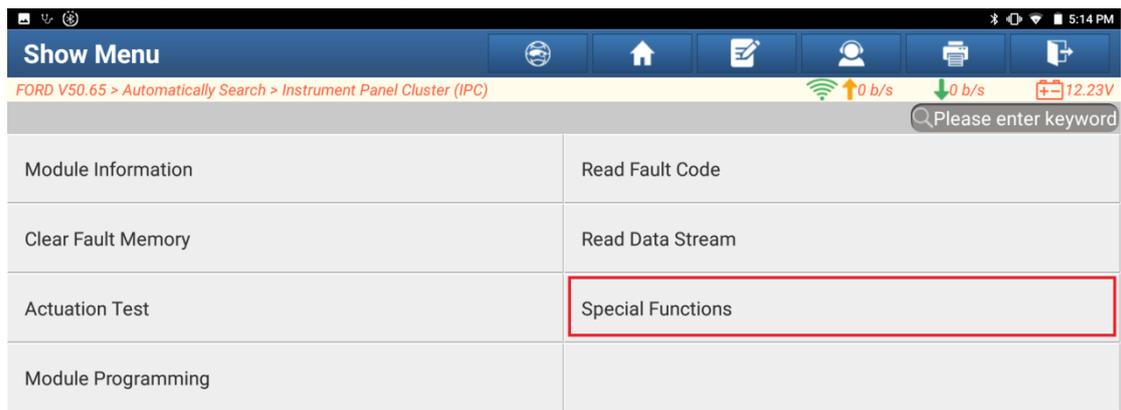


7. Click [Set The Warranty Start Date].

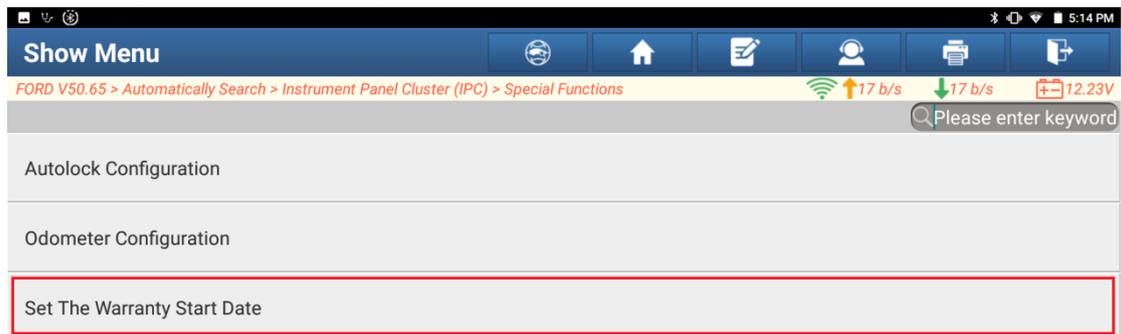


8. Program function introduction.

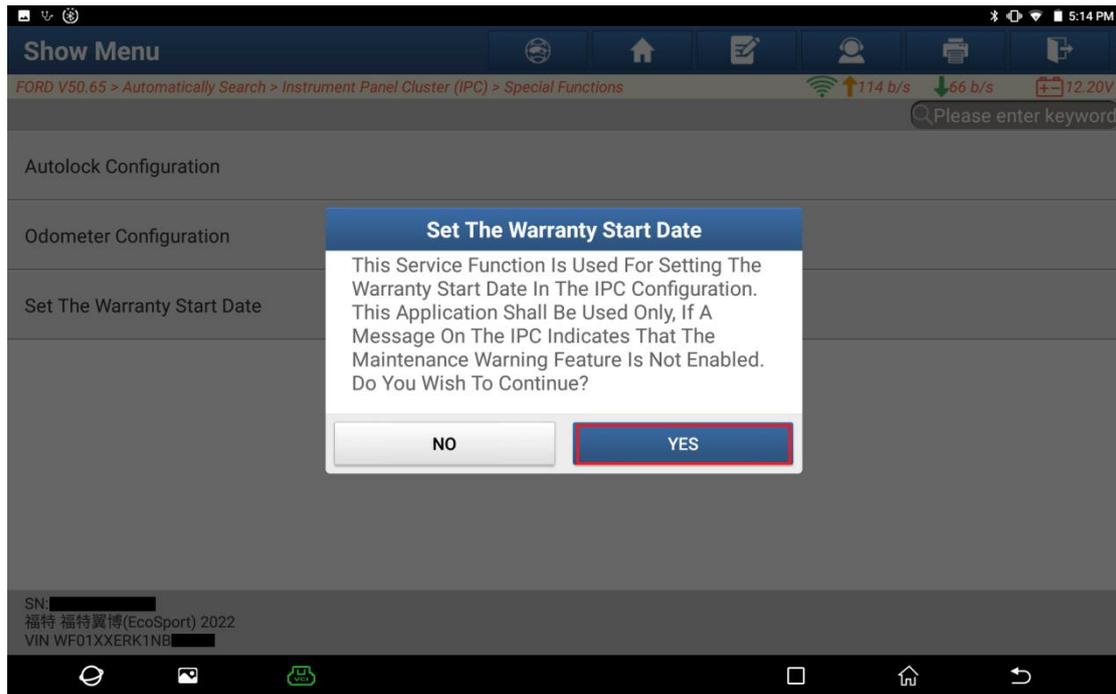


9. Turn the ignition switch to ON (position II).

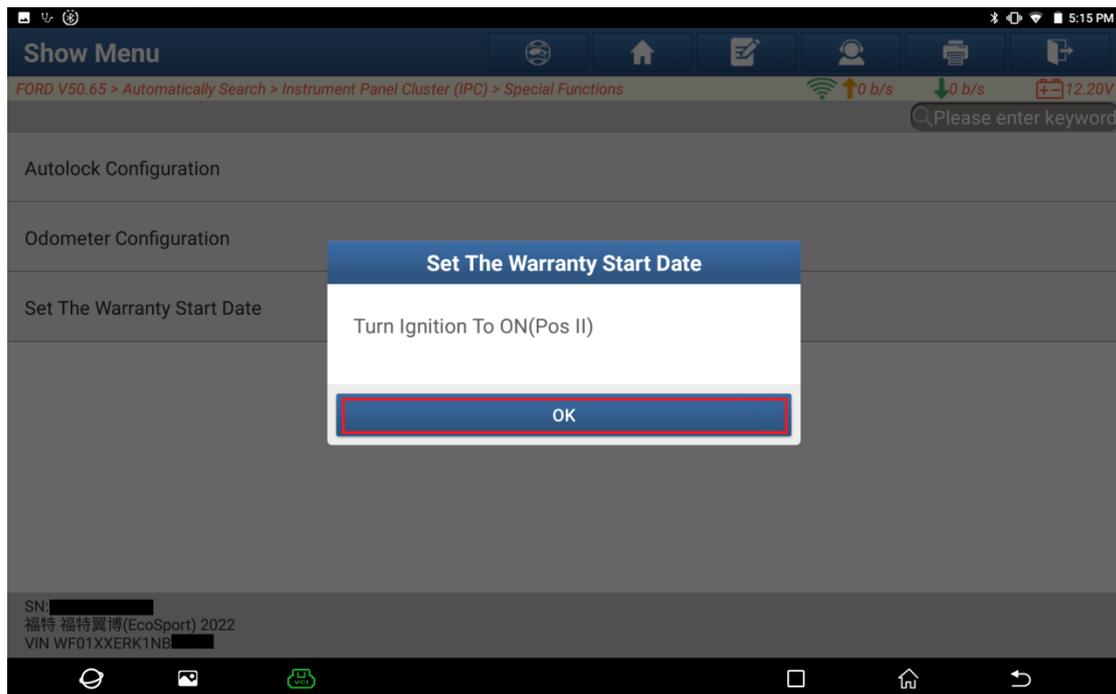


10. Enter the date on which the vehicle was first delivered to the customer. The date format is YYYY/MM/DD, for example, 2020/01/01.

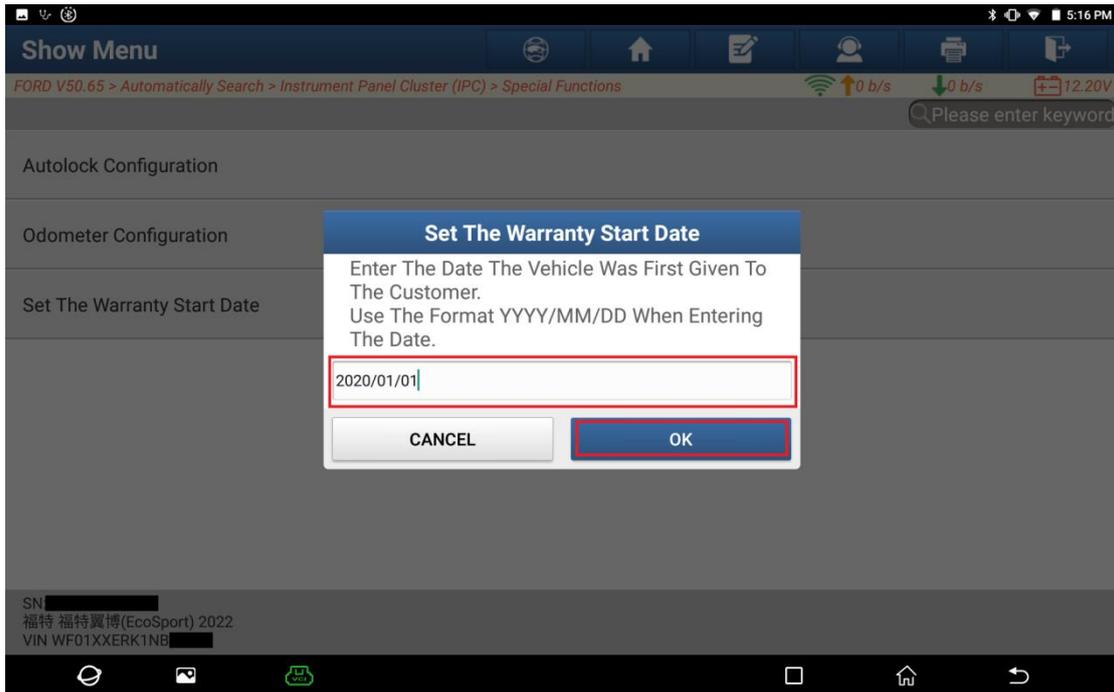


11. Check if the date is correct.

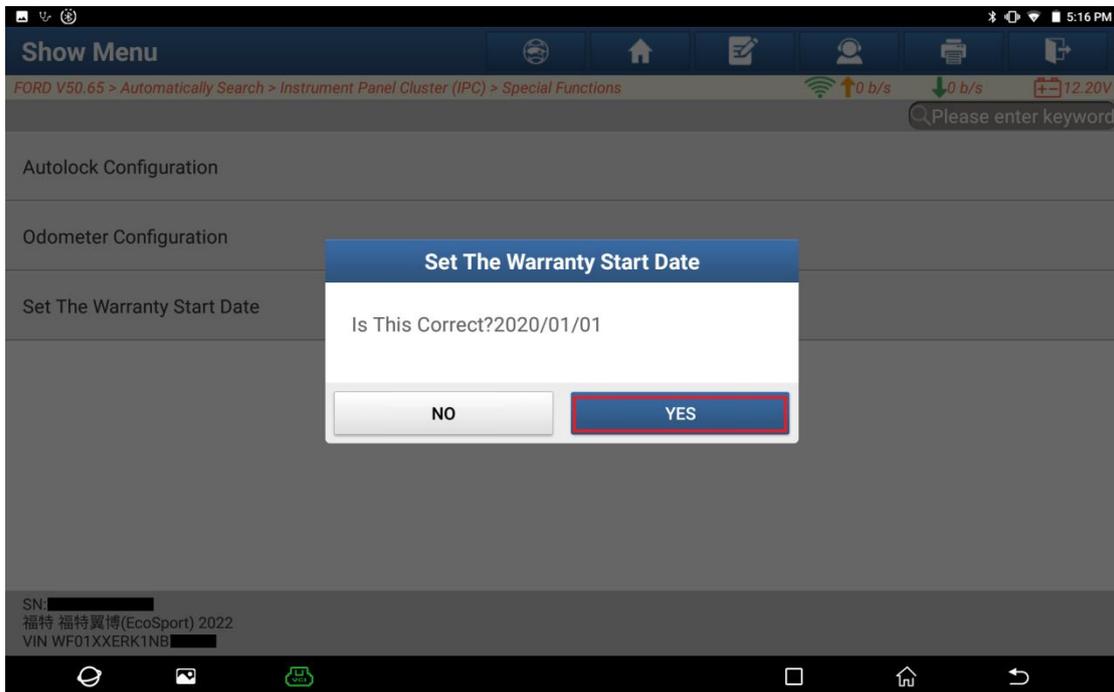


12. Turn the ignition switch to ON (position II).

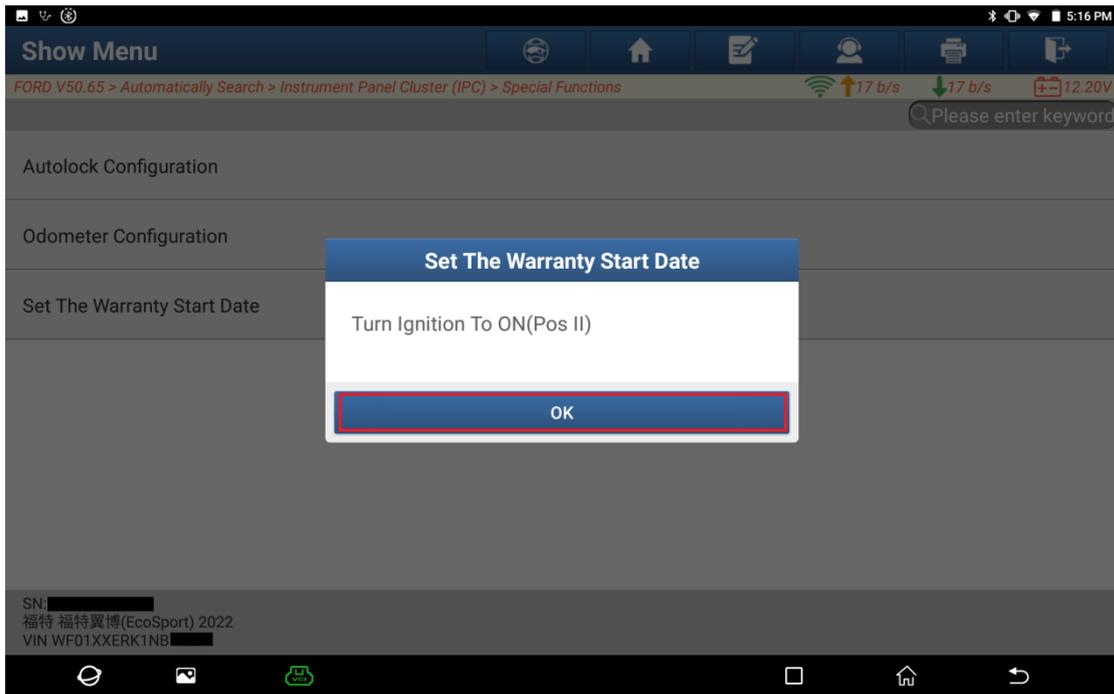


13. Check the stored configuration data.

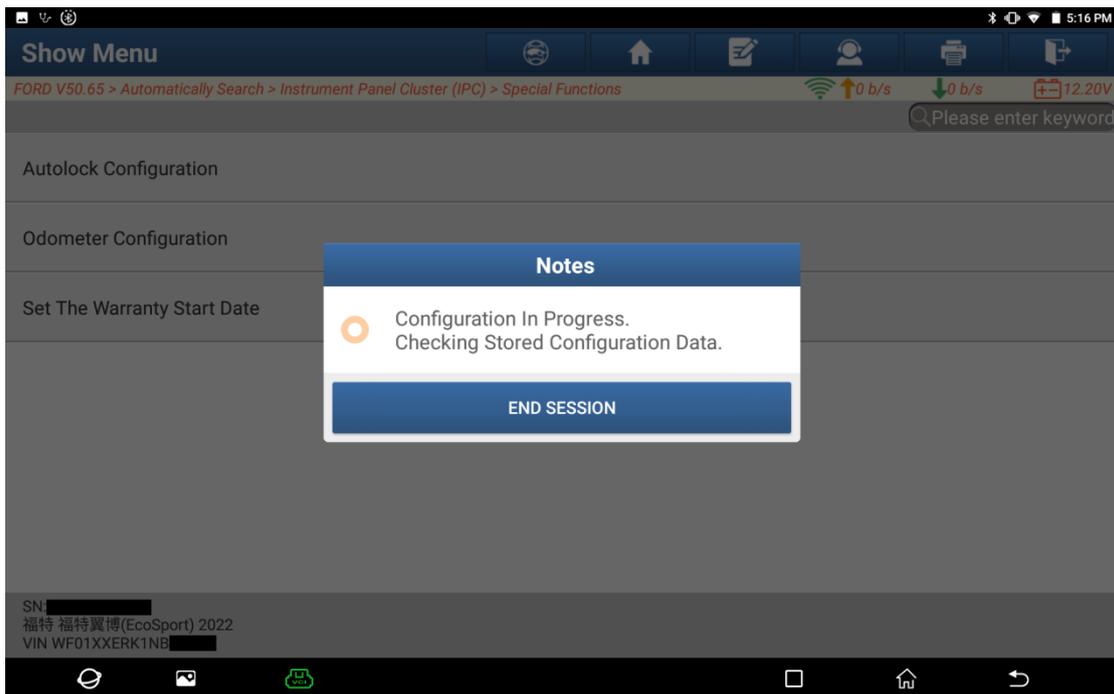


14. Modify configuration data.

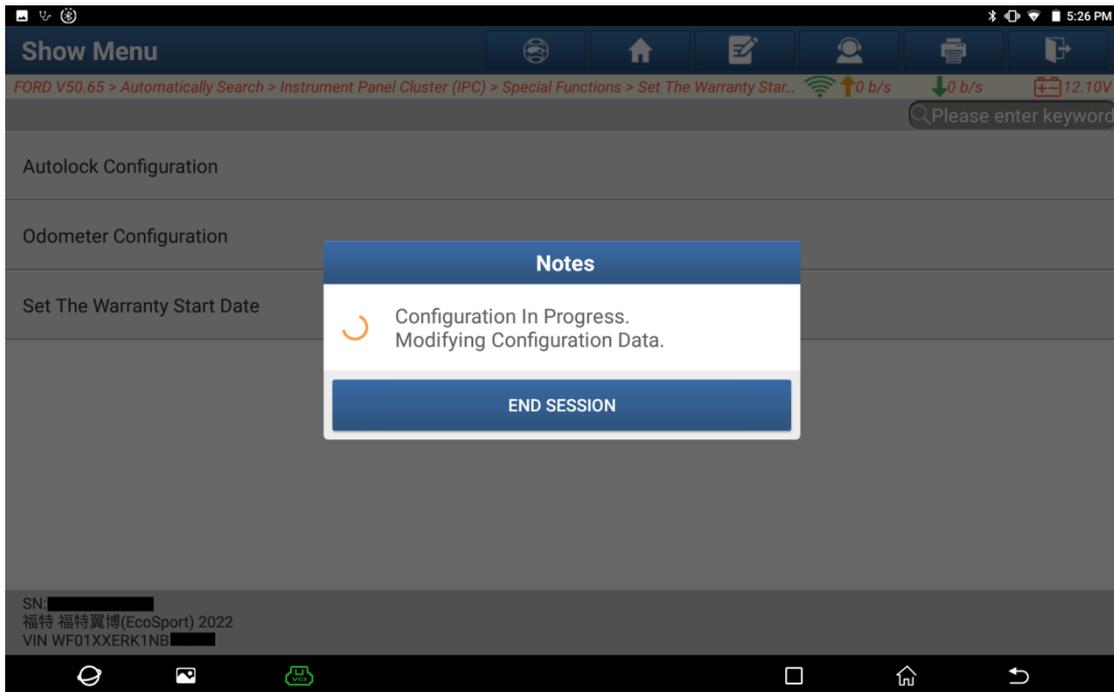


15. Write the new configuration data to the module.

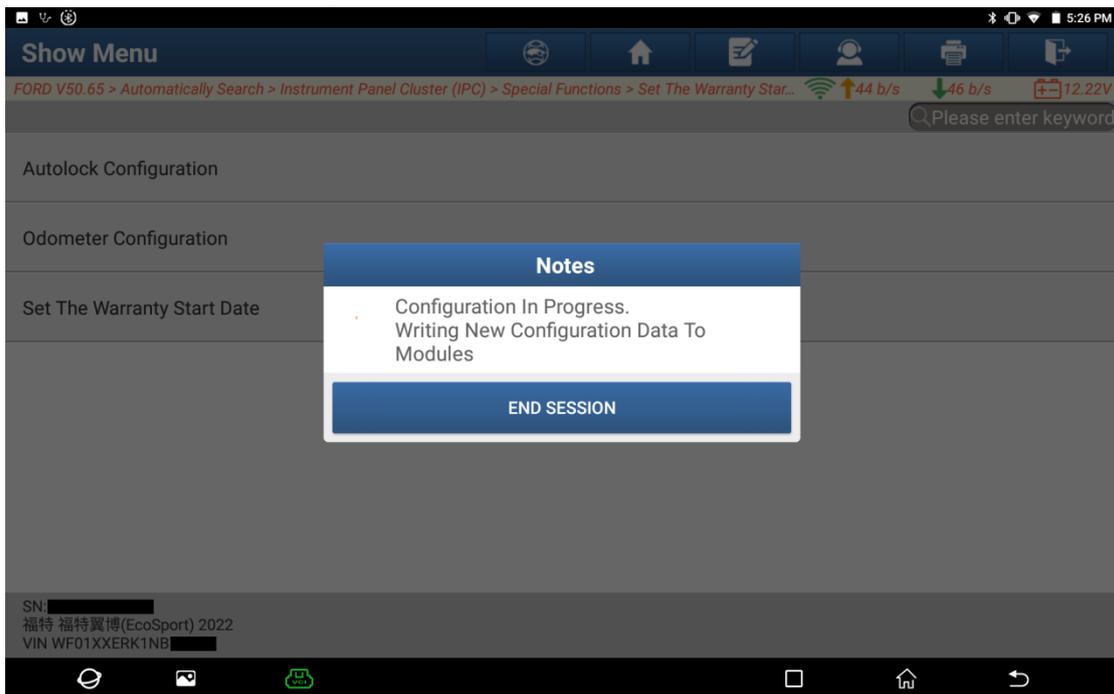

16. Turn the ignition switch to OFF (position 0).

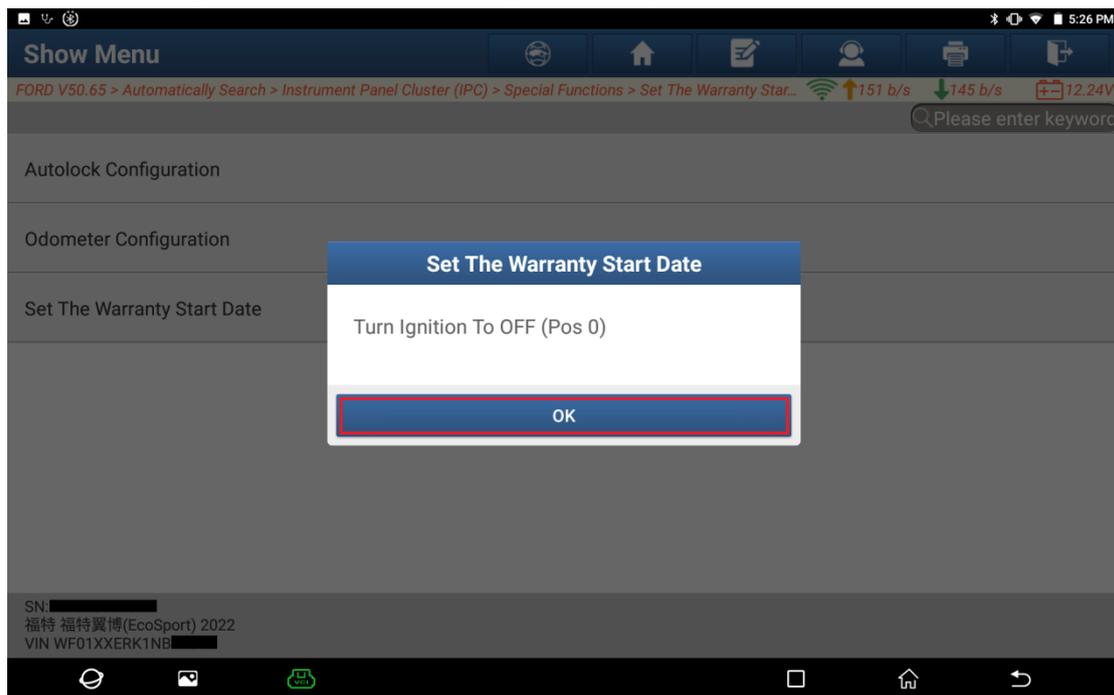

17. The program is successfully completed. Exit the program.

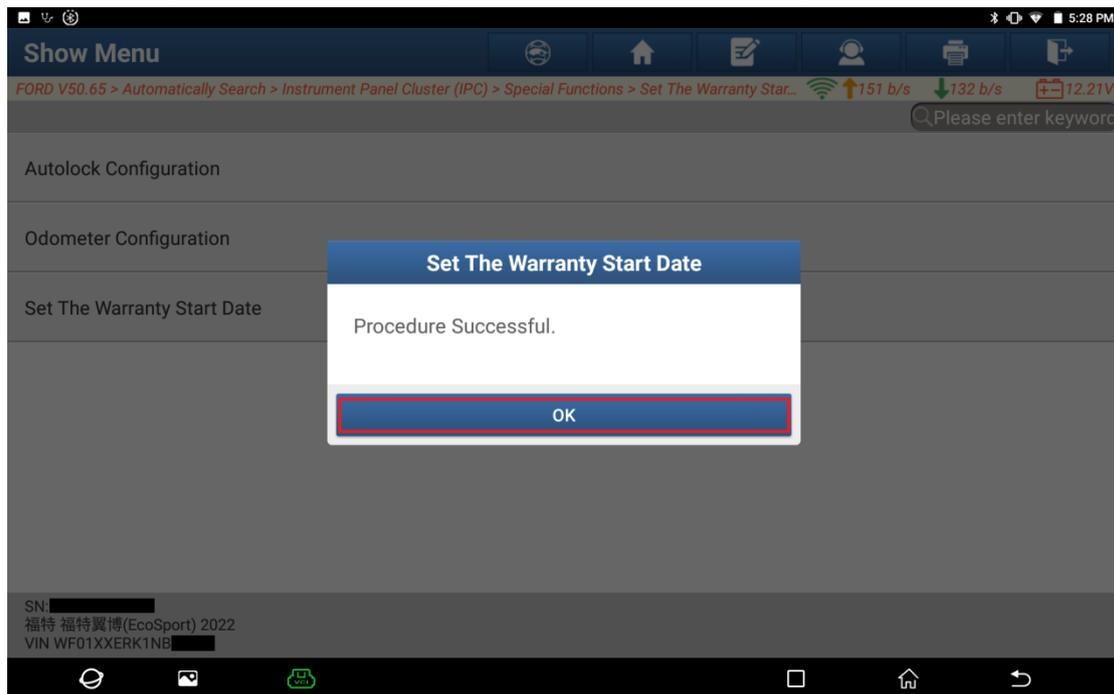

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.