## B2236 RIGHT FRONT HEADLAMP BALLAST ECU INTERNAL

1). When Monitored:

Continuously with the Headlamps on.

2). Set Condition:

The code will set when a Check Sum error is detected.

## **Possible Causes**

1. RIGHT HEADLAMP BALLAST ECU FAILURE

## **Diagnostic Test**

1). Verify DTC B2236-RIGHT FRONT HEADLAMP BALLAST ECU INTERNAL IS ACTIVE

**NOTE:** If a DTC is set, erase the DTC and attempt to reset the DTC. If the DTC resets, follow test.

This is an internal Headlamp Ballast ECU failure View repair Does the DTC reset and read B2236-RIGHT FRONT HEADLAMP BALLAST ECU INTERNAL?

Repair

Replace the Right Side Headlamp Ballast ECU in accordance with the service information.

Perform the BODY VERIFICATION TEST — VER 1.