

B167B RIGHT FRONT HEADLAMP LIGHT SOURCE CIRCUIT

- 1). When Monitored:
Continuously with the ignition on.
- 2). Set Condition:
The code will set when the HID Module detects an INOP Headlamp Source.

Possible Causes
1. HEADLAMP SOURCE

Diagnostic Test

- 1). Verify DTC B167B-RIGHT FRONT HEADLAMP LIGHT SOURCE CIRCUIT IS ACTIVE

NOTE: If a DTC is set, erase the DTC and attempt to reset the DTC. If the DTC resets, follow test.

This is a Headlamp Source failure View repair

Does the DTC reset and read B167B-RIGHT FRONT HEADLAMP LIGHT SOURCE CIRCUIT?

Repair

Replace the appropriate Headlamp Source in accordance with the service information.

Perform the BODY VERIFICATION TEST — VER 1.