

B1BC7 DEPLOYMENT DATA RECORD FULL

- 1). When Monitored:
With the ignition on. The module's on board diagnostics continuously performs internal circuit tests.
- 2). Set Condition:
This DTC will set if the module identifies an out of range internal circuit.

Possible Causes
1. OCCUPANT RESTRAINT CONTROLLER

Diagnostic Test

- 1). CHECK FOR ACTIVE DTC
Turn the ignition on.
With the scan tool, read ORC DTCs.

Is the Deployment Data Record Full DTC active?
Yes >> Go To 2
No >> Perform the ORC VERIFICATION TEST-VER. 1.
- 2). REPLACE THE OCCUPANT RESTRAINT CONTROLLER
WARNING: To avoid personal injury or death, turn the ignition off, disconnect the battery and wait two minutes before proceeding.
WARNING: If the airbag control module is dropped at any time, it must be replaced. Failure to take the proper precautions can result in accidental airbag deployment and personal injury or death.
View repair.
Repair
Replace the Occupant Restraint Controller in accordance with the service information.
Perform the ORC VERIFICATION TEST-VER 1.