

# DTC C1015: G Sensor Circuit

## Description

If the signal voltage of G sensor while at a stop does not vary of from that while running, this DTC is set. Therefore, this DTC may be set when a vehicle is lifted up and its wheel(s) is turned. In such case, clear the DTC and check again.

## DTC Troubleshooting

- 1). Ignition switch OFF.
- 2). Check for proper connection from harness to control module.
- 3). If OK, substitute an ABS hydraulic unit/control module assembly with correct part number.
- 4). Recheck system.

LAUNCH