

# P0601 / P0602 / P0607: Internal Control Module Memory Check Sum Error / Control Module

## System Description

Internal control module is installed in ECM.

## DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0601: Data write error or check sum error (1 driving cycle detection logic) DTC P0602: Data programming error (1 driving cycle detection logic but MIL does not light up) DTC P0607: Data programming error (1 driving cycle detection logic)	ECM

## DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC, pending DTC and freeze frame data by using scan tool.
- 3) Start engine and run it at idle if possible.
- 4) Check DTC and pending DTC by using scan tool.

## DTC Troubleshooting

Step	Action	Yes	No
1	<p>DTC recheck</p> <p>1) Clear DTC referring to "DTC Clearance". 2) Turn OFF ignition switch. 3) Turn ON ignition switch and check DTC.</p> <p>Is DTC P0601 or P0607 still indicated?</p>	Go to Step 2.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
2	ECM reprogramming check Was reprogramming of ECM executed?	Execute reprogramming of ECM correctly once again.	Go to step 3.
3	<p>ECM power and ground circuit check</p> <p>1) Check that ECM power supply circuit and ECM ground circuit is in good condition referring to "ECM Power and Ground Circuit Check". Are check results OK?</p>	Substitute a known-good ECM and recheck.	Repair ECM power or ground circuit.