


Reading off and programming vehicle mode

The function is intended to program vehicle mode, there are three vehicle modes can be programmed: Normal mode, Transport mode, Factory mode.




Now we take S40(04-) 2008 31254753 AB (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

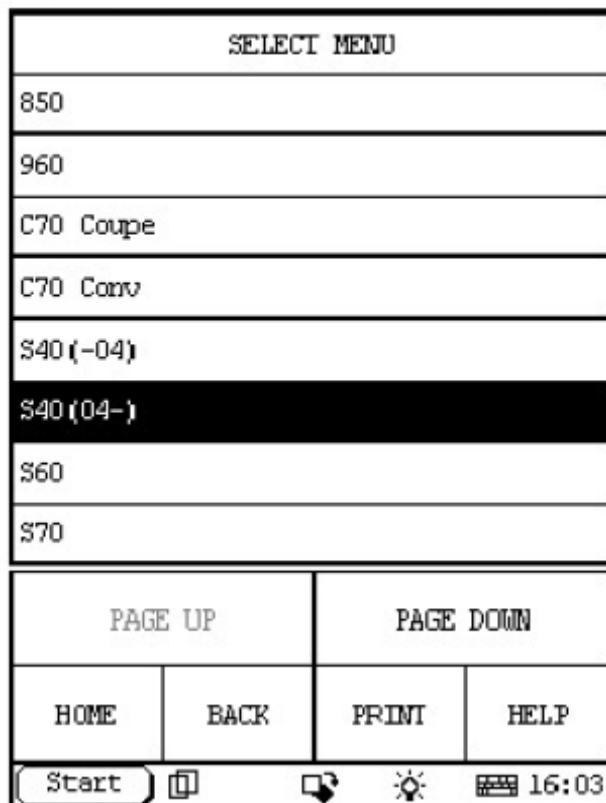


1. step 1: S40(04-)



2. step 2: select year

SELECT MENU			
VIN			
2004			
2005			
2006			
2007			
2008			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 16:03




3. step 3: select CEM

SELECT MENU			
General Service			
ECM(Engine Control Module)			
DIESEL ENG(Fuel system/Combined system)			
TCM(Transmission Control Module)			
ABS/BCM(Anti-brake System Module)			
SRS(Supplemental Restraint System Module)			
CEM(Central electrical module)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 16:03

4. step 4:




Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

Select function			
Reading off control module ID			
Reading off Diagnostic Trouble Codes			
Erasing Diagnostic Trouble Codes			
Parameter display			
Activating components/functions			
Special Function			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 16:05

5. step 5:

Select: Reading off and programming vehicle mode

Please select special function item			
Calibration of position sensor, GDL lamps			
Programming of rear window wiper when reversing			
Resetting low voltage counters			
Reading off and programming vehicle mode			
Resetting crash mode			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:37

6. step 6:

The information of Reading off and programming vehicle mode:

Ignition on.

Caution! When transferring from transport mode to factory mode the radio must be switched off and the light switch in 0 position.

The following vehicle modes can be programmed:

Normal mode:


Normal mode means that the electrical system in the car is fully functional. When used normally the car must be in normal mode.

Transport mode:

Transport mode means that the electrical system in the car has limit functionality. The purpose of this is to minimize power consumption when the car is not going to be used for an extended period. It is possible to drive the car for a short distance.


Factory mode:

Factory mode means that the electrical system in the car has limited functionality. The purpose is to minimize power consumption and to satisfy factory regulations. It is possible to drive the car for a short distance.

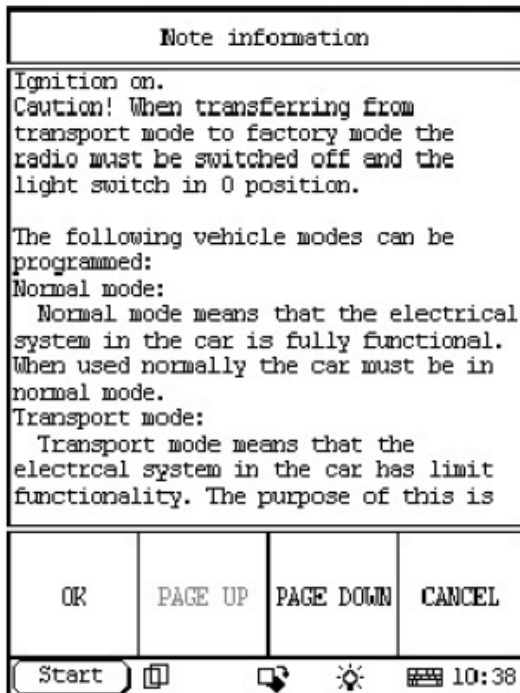

7. step 7:

Select Ok then it will send command to ECU, and display information like this:

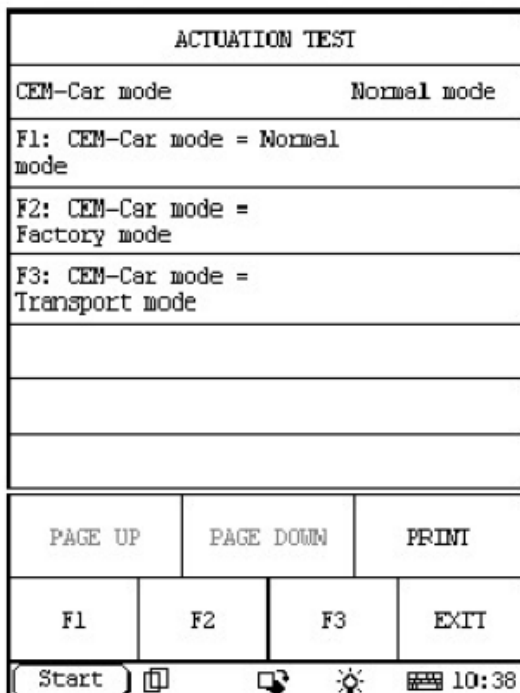




The first line, CEM-Car mode Normal mode, is the present programmed value for your vehicle, if you want to change this value, you can select the desired value in the list:

F1: CEM-Car mode = Normal mode

F2: CEM-Car mode = Factory mode




F3: CEM-Car mode = Transport mode

For example: if you want to change this value to Transport mode, please select F3 and it will start programming. When programming finish, the Programmed Value will change to Transport mode as the following figure, it means that the programming succeed.

ACTUATION TEST			
CEM-Car mode		Transport mode	
F1: CEM-Car mode = Normal mode			
F2: CEM-Car mode = Factory mode			
F3: CEM-Car mode = Transport mode			
PAGE UP		PAGE DOWN	PRINT
F1	F2	F3	EXIT
Start			 10:44

8. step 8:

When you want to exit this programming, please select EXIT:

ACTUATION TEST			
CEM-Car mode		Transport mode	
F1: CEM-Car mode = Normal mode			
F2: CEM-Car mode = Factory mode			
F3: CEM-Car mode = Transport mode			
PAGE UP		PAGE DOWN	PRINT
F1	F2	F3	EXIT
Start			 10:44