


Shift Lock

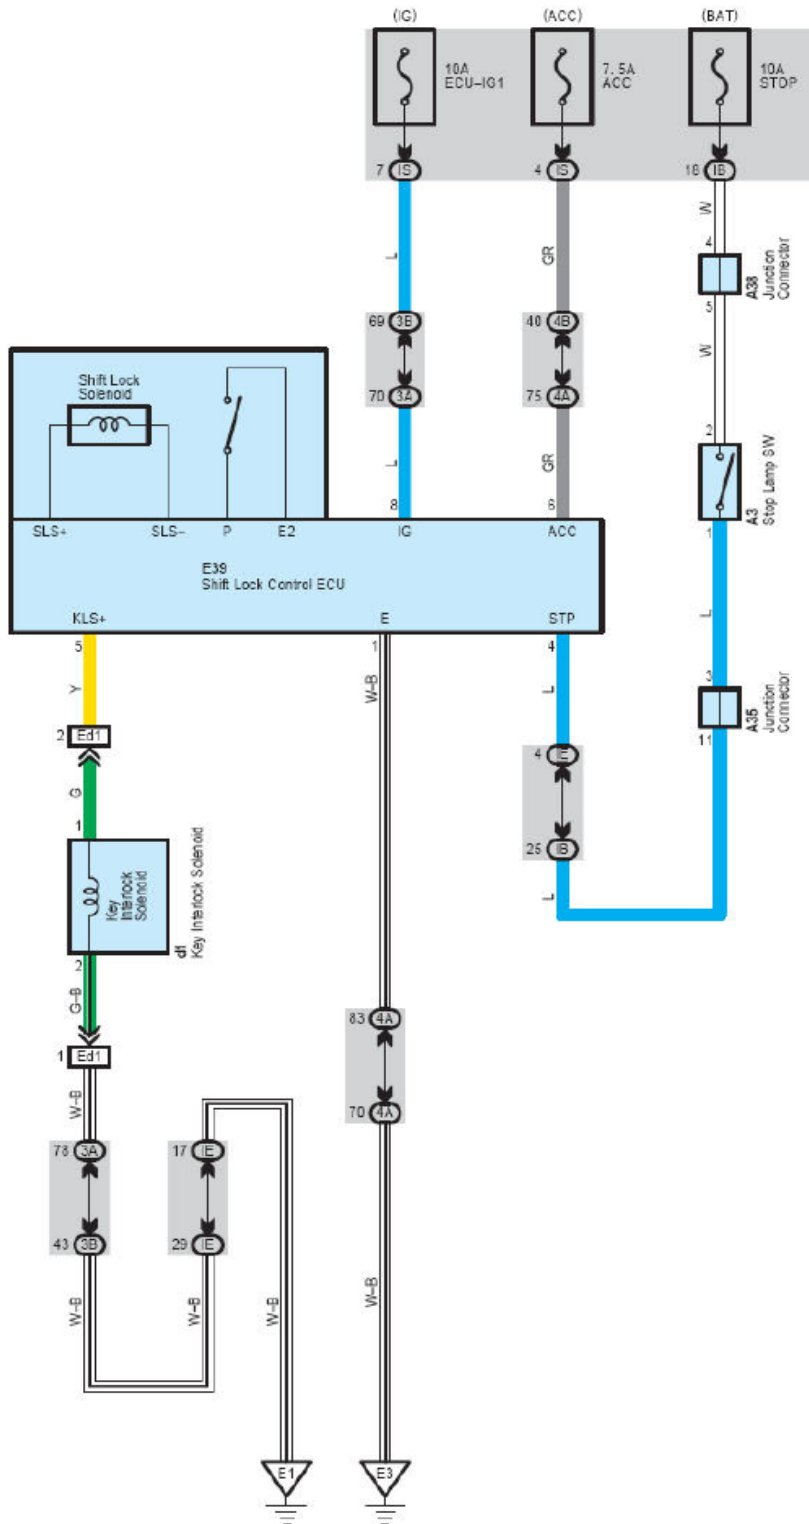

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
3A	Instrument Panel Wire and J/B No.3 (Instrument Panel Center) Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
3B_	
4A	Instrument Panel Wire and J/B No.4 (Instrument Panel Center) Instrument Panel Wire and J/B No.4 (Instrument Panel Center)
4B_	
IB	Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left)
IE	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left) Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IS	

Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
Ed1	Instrument Panel Wire and Solenoid Wire (Steering Column)

Ground Points

Code	Ground Points Location
E1	Left Kick Panel
E3	Instrument Panel Reinforcement Center

LAUNCH