

## Read out programmed values

This function is intended to read off the customer's settings.

Now we take S40(04-) 2008 30786352 AD (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.




1. step 1: S40(04-)

SELECT MENU			
850			
960			
C70 Coupe			
C70 Conv			
S40 (-04)			
<b>S40 (04-)</b>			
S60			
S70			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			10:25

2. step 2: select year




SELECT MENU			
VIN			
2004			
2005			
2006			
2007			
<b>2008</b>			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			10:26

3. step 3: select DIM


SELECT MENU			
DIM(Driver information module)			
PDM(Passenger door module)			
PSM(Power seat module)			
DDM(Driver door module)			
CCM(Climate control module)			
PHM(Phone module)			
SWM(Steering wheel module)			
AUD(Audio Module)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:27

4. step 4:  
Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

Select function			
Reading off control module ID			
Reading off Diagnostic Trouble Codes			
Erasing Diagnostic Trouble Codes			
Parameter display			
Activating components/functions			
Service Reset			
Special Function			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 10:28

5. step 5:  
Select: Read out programmed values

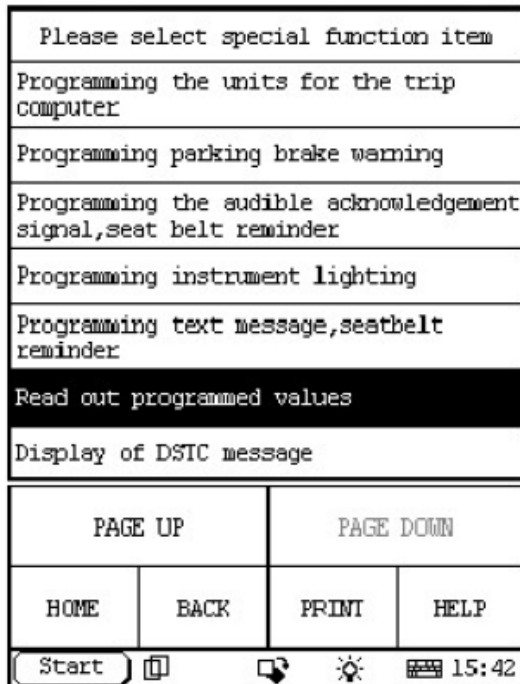


## 6. step 6:

The information of Read out programmed values:

Hint: If the instrument speedometer is from 0-260, the instrument is intended for kilometers.

If the gauge is from 0-160, it is intended for miles.

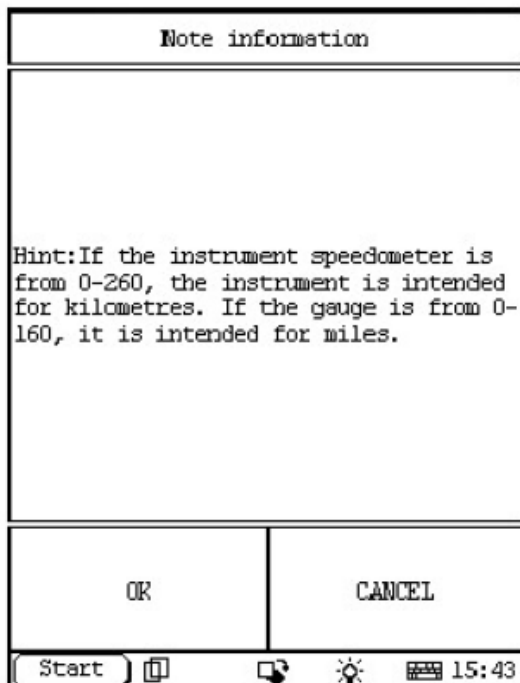

## 7. step 7:




Select OK, then it will display two Item functions:

Km

Miles

Please select one that you want to program according to the instrument speedometer on the vehicle.

If you select Km, the operation is step 8 to step 10; else the operation is: step 11 to step 13.

Please select special function item			
Km			
Miles			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			 13:54

8. step 8:

When you select Km.




It will display some information about Km programming like this:

Ignition on.

When downloading software or replacing the combined instrument panel it is important to read off the customer's settings. This is so that the same data can be programmed again into the new combined instrument panel.

Read off and note the customer settings..

To program the customer settings again, see Programming the driver information module (DIM).

<b>Note information</b>	
<p>Ignition on.          When downloading software or replacing the combined instrument panel it is important to read off the customer's settings. This is so that the same data can be programmed again into the new combined instrument panel.</p> <p>Read off and note the customer settings          ..          To program the customer settings again , see Programming the driver information module (DIM).</p>	
OK	CANCEL
Start	   15:46



9. step 9:

Select Ok then it will send command to ECU, and display information like this:  
What displayed is your vehicle's setting.

ACTUATION TEST		
Distance condition for service km	20000 km	
Time condition for service	12 month	
Engine time condition for service	750 hours	
Temperature unit	Celsius	
Trip computer unit	Litre	
Parking Brake Warning	On	
Belt reminder	Off	
PAGE UP	PAGE DOWN	PRINT
EXIT		
Start		
		15:47

10. step 10:

When you want to exit this read out, please select EXIT:

ACTUATION TEST		
Distance condition for service km	20000 km	
Time condition for service	12 month	
Engine time condition for service	750 hours	
Temperature unit	Celsius	
Trip computer unit	Litre	
Parking Brake Warning	On	
Belt reminder	Off	
PAGE UP	PAGE DOWN	PRINT
EXIT		
Start		
		15:50

11. step 11:


When you select Miles.

It will display some information about Miles programming like this:  
Ignition on.

When downloading software or replacing the combined instrument panel it is important to read off the customer's settings. This is so that the same data can be programmed again into the new combined instrument panel.

Read off and note the customer settings..

To program the customer settings again, see Programming the driver information module (DIM).

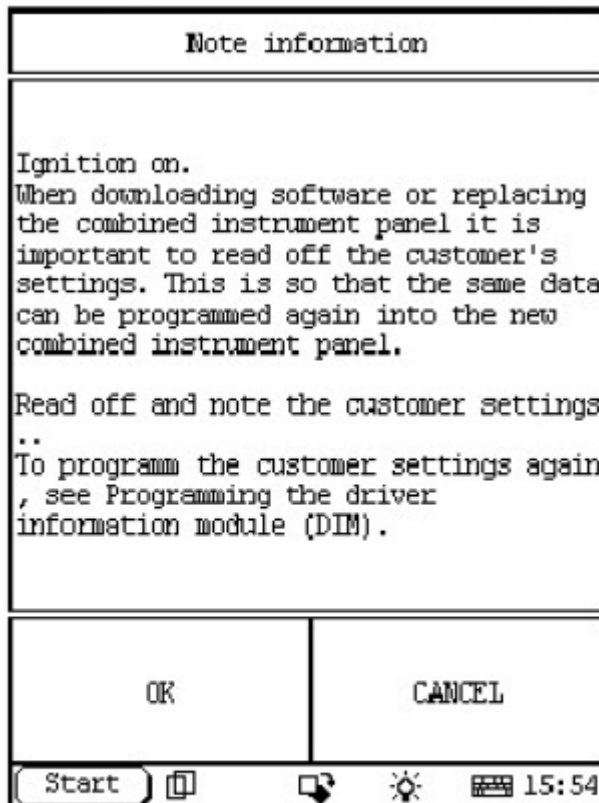

12. step 12:

Select Ok then it will send command to ECU, and display information:  
This value is your vehicle's setting.

ACTUATION TEST	
Distance condition for service miles	12500 miles
Time condition for service	12 month
Engine time condition for service	750 hours
Temperature unit	Celsius
Trip computer unit	Litre
Parking Brake Warning	On
Belt reminder	Off
PAGE UP	PAGE DOWN
PRINT	
EXIT	
Start	15:55

13. step 13:

When you want to exit this read out, please select EXIT:

ACTUATION TEST	
Distance condition for service miles	12500 miles
Time condition for service	12 month
Engine time condition for service	750 hours
Temperature unit	Celsius
Trip computer unit	Litre
Parking Brake Warning	On
Belt reminder	Off
PAGE UP	PAGE DOWN
PRINT	
EXIT	
Start	15:58