


Sliding Roof

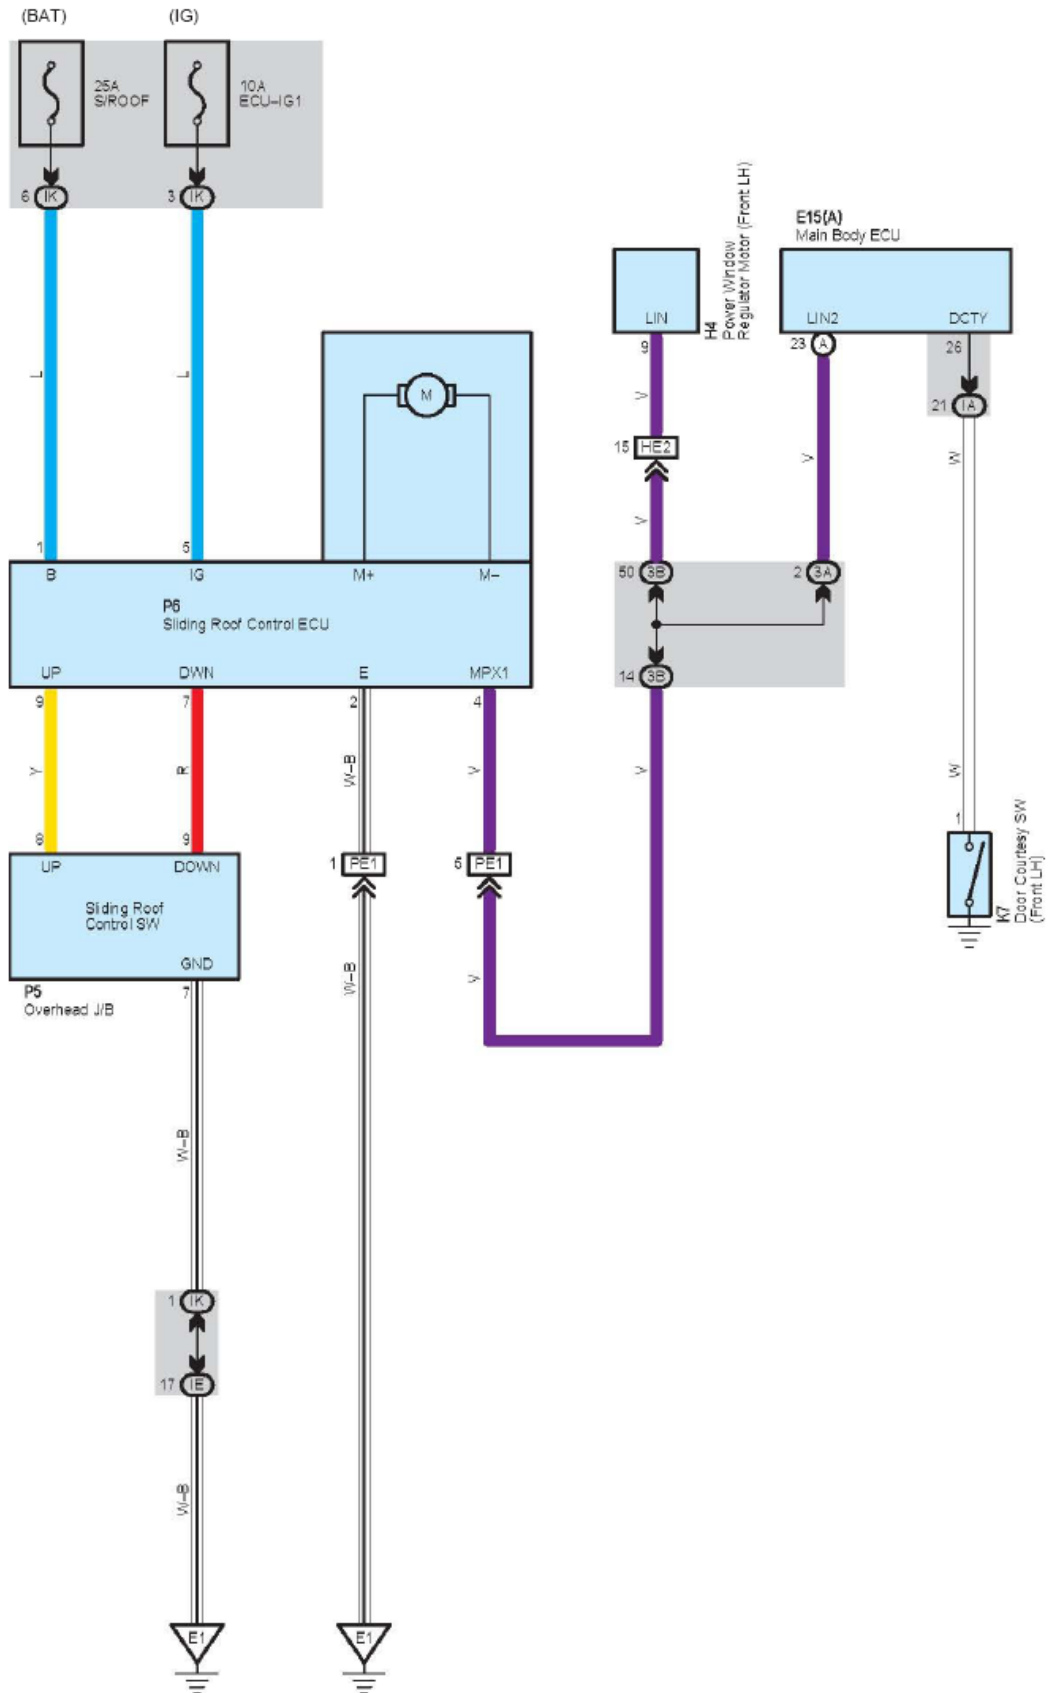

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
3A	Instrument Panel Wire and J/B No.3 (Instrument Panel Center) Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
3B _	
IA	Floor Wire and Instrument Panel J/B (Cowl Side Left)
IE	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IK	Roof Wire and Instrument Panel J/B (Cowl Side Left)

Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
HE2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
PE1	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)

Ground Points

Code	Ground Points Location
E1	Left Kick Panel

LAUNCH