

Programming Key Fobs

After adding or replacing a key fob or a system fault occurs, you must perform the following operations to program the key fob:

- 1). Turn on the ignition switch.
- 2). Press the locking button on the key fob and hold the button for 10 seconds.
- 3). Hold the locking button. Within 10 seconds, press the unlocking button and hold it.
- 4). The buzzer rings, indicating that the key fob enters the programming mode.
- 5). Loosen the locking and unlocking buttons.
- 6). Press the unlocking or locking button on the first key fob.
- 7). The buzzer rings, indicating that the first key fob has been programmed.
- 8). Press the unlocking or locking button on the second key fob.
- 9). The buzzer rings, indicating that the second key fob has been programmed.
- 10). Perform the preceding operations to program other necessary key fobs.