

Setting Key Fobs

Set a key fob containing an anti-theft chip as follows:

- 1). Buy a blank chip key.
- 2). Use the electronic lock machine to cut the blank chip key to match the lock cylinder slot of the ignition switch.
- 3). Make another two chip keys available.
- 4). Insert the first chip key into the ignition switch, turn on the ignition switch, and hold the ignition switch for 3 to 15 seconds. Then, turn off the ignition switch and pull the chip key out.
- 5). Within 15 seconds, insert the second chip key into the ignition switch and turn on the ignition switch. There will be a buzzing sound 10 seconds later and the anti-theft lamp begins to flicker. Then, turn off the ignition button and pull the chip key out.
- 6). Within 60 seconds, insert the blank chip key into the ignition switch and turn on the ignition switch. There will be a buzzing sound 10 seconds later and the anti-theft lamp stops flickering. Turn off the ignition switch 3 seconds later. The settings are complete.

Note: The remote control function of a key fob is also set during the setting of a chip key. You can repeat the preceding operations to set a maximum of 8 chip keys.