

Synchronization Settings of Key Fobs

After replacing the battery of a key fob, you must synchronize the key fob settings. For a type-1 key fob, you can press the unlock key on the key fob for consecutive 6 times to synchronize the settings. For a type-2 key fob, you can only use the manufacturer's diagnosis device to synchronize the settings.

LAUNCH