







### Relay Blocks

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B No.1 (Engine Compartment Left)Engine Room R/B No.1 (Engine Compartment Left)

### Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
3A	Instrument Panel Wire and J/B No.3 (Instrument Panel Center)Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
3B	
IA	Floor Wire and Instrument Panel J/B (Cowl Side Left)
IE	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IG	Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left)
IH	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)

### Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
EK1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
EL1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
GE1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
GE2	
HE1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
HE2	
IL1	Rear Door No.2 RH Wire and Floor No.2 Wire (Right Center Pillar)
JK1	Rear Door No.1 RH Wire and Floor Wire (Left Center Pillar)
PE1	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)

### Ground Points

Code	Ground Points Location
E1	Left Kick Panel