


► **Removal and Installation of Tailgate Assembly**

Tailgate Trim

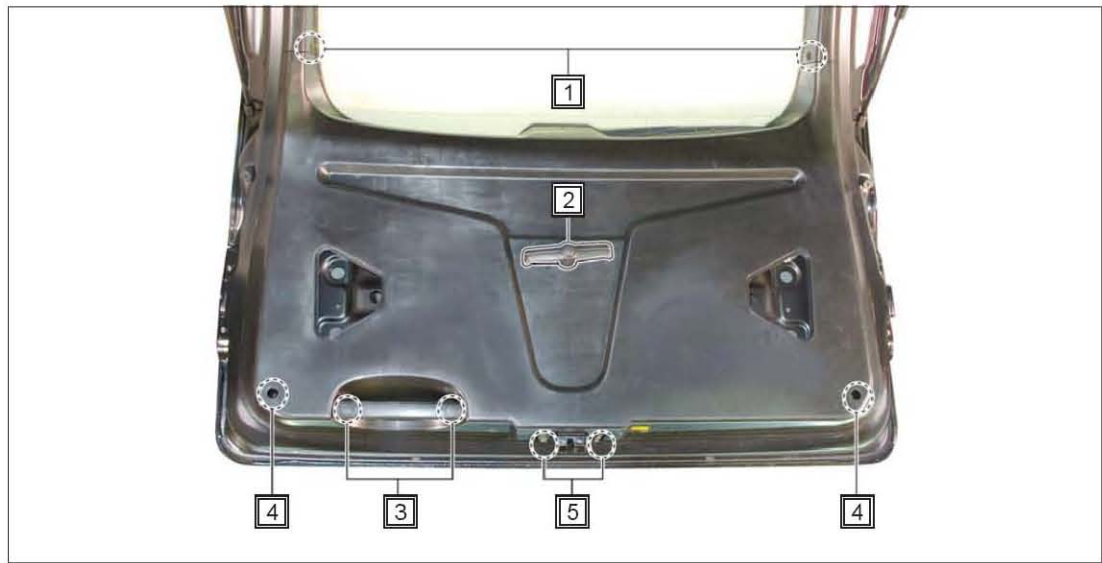

1. Remove the scrivenets (LH, RH) and remove the upper trim from the tailgate.



2. Remove the inner handle (7 Person only).



3. Remove the opening/closing handle.



4. Unscrew the mounting screw on the lower trim.



5. Remove the scrivets from the lower trim.



6. Remove tailgate trim by separating the lower trim from the lower side and lifting it up.



* Locations of fasteners

