


## Programming parking brake warning

This function is intended to activate or deactivate the parking brake warning.


Now we take S40(04-) 2008 30786352 AD (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

1. step 1: S40(04-)

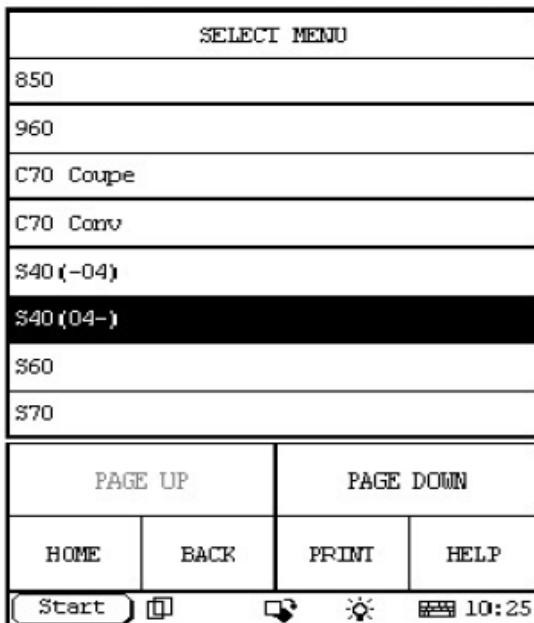

2. step 2: select year

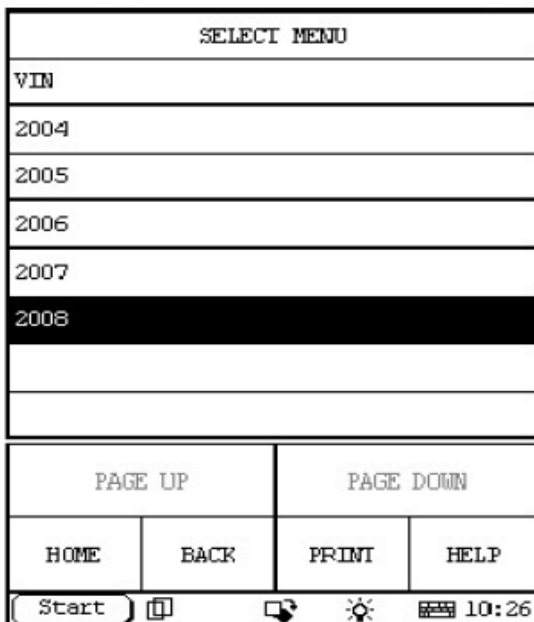

3. step 3: select DIM

|                                |      |           |       |
|--------------------------------|------|-----------|-------|
| SELECT MENU                    |      |           |       |
| DIM(Driver information module) |      |           |       |
| PDM(Passenger door module)     |      |           |       |
| PSM(Power seat module)         |      |           |       |
| DDM(Driver door module)        |      |           |       |
| CCM(Climate control module)    |      |           |       |
| PHM(Phone module)              |      |           |       |
| SUM(Steering wheel module)     |      |           |       |
| AUD(Audio Module)              |      |           |       |
| PAGE UP                        |      | PAGE DOWN |       |
| HOME                           | BACK | PRINT     | HELP  |
| Start                          |      |           | 10:27 |

4. step 4:


Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

|                                      |      |           |       |
|--------------------------------------|------|-----------|-------|
| Select function                      |      |           |       |
| Reading off control module ID        |      |           |       |
| Reading off Diagnostic Trouble Codes |      |           |       |
| Erasing Diagnostic Trouble Codes     |      |           |       |
| Parameter display                    |      |           |       |
| Activating components/functions      |      |           |       |
| Service Reset                        |      |           |       |
| Special Function                     |      |           |       |
| PAGE UP                              |      | PAGE DOWN |       |
| HOME                                 | BACK | PRINT     | HELP  |
| Start                                |      |           | 10:28 |

5. step 5:

Select: Programming parking brake warning

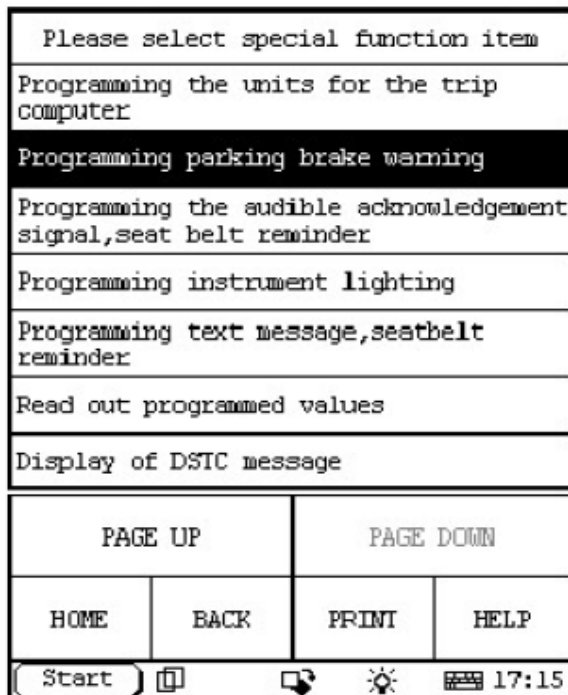

## 6. step 6:


The information of Programming parking brake warning:

Ignition on.

It is possible to activate or deactivate the parking brake warning.



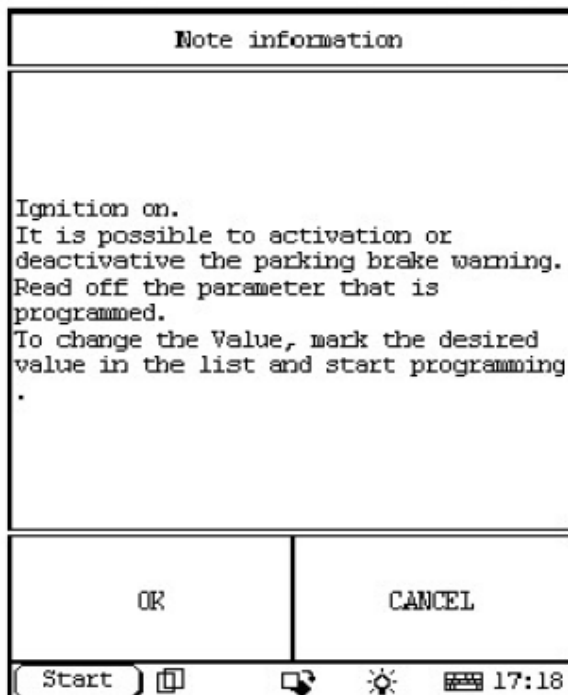

Read off the parameter that is programmed.

To change the Value, mark the desired value in the list and start programming.



## 7. step 7:

Select Ok then it will send command to ECU, and display information like this:





| ACTUATION TEST                     |   |   |
|------------------------------------|---|---|
| Programmed Value      On           |   |   |
| F1: Parking Brake Warning<br>= ON  |   |   |
| F2: Parking Brake Warning<br>= OFF |   |   |
|                                    |   |   |
|                                    |   |   |
|                                    |   |   |
|                                    |   |   |
| PAGE UP                            | PAGE DOWN   | PRINT   |
| F1                                 | F2  | EXIT  |
| Start                              |  |    17:19 |

The first line, Programmed Value On, is the present programmed value for your vehicle, if you want to change this value, you can select the desired value in the list:

F1: Parking Brake Warning = ON





F2: Parking Brake Warning = OFF

For example: if you want to change this value to OFF, please select F2 and it will start programming. When programming finish, the Programmed Value will change to OFF as the following figure, it means that the programming succeed.

| ACTUATION TEST                     |   |   |
|------------------------------------|---|---|
| Programmed Value      Off          |   |   |
| F1: Parking Brake Warning<br>= ON  |   |   |
| F2: Parking Brake Warning<br>= OFF |   |   |
|                                    |   |   |
|                                    |   |   |
|                                    |   |   |
|                                    |   |   |
| PAGE UP                            | PAGE DOWN   | PRINT   |
| F1                                 | F2  | EXIT  |
| Start                              |  |    17:22 |

8. step 8:

When you want to exit this programming, please select EXIT:

| ACTUATION TEST                     |   |   |
|------------------------------------|---|---|
| Programmed Value                   |   | Off   |
| F1: Parking Brake Warning<br>= ON  |   |   |
| F2: Parking Brake Warning<br>= OFF |   |   |
|                                    |   |   |
|                                    |   |   |
|                                    |   |   |
|                                    |   |   |
| PAGE UP                            | PAGE DOWN   | PRINT   |
| F1                                 | F2  | EXIT  |
| Start                              |  |    17:22 |

LAUNCH