


Starting

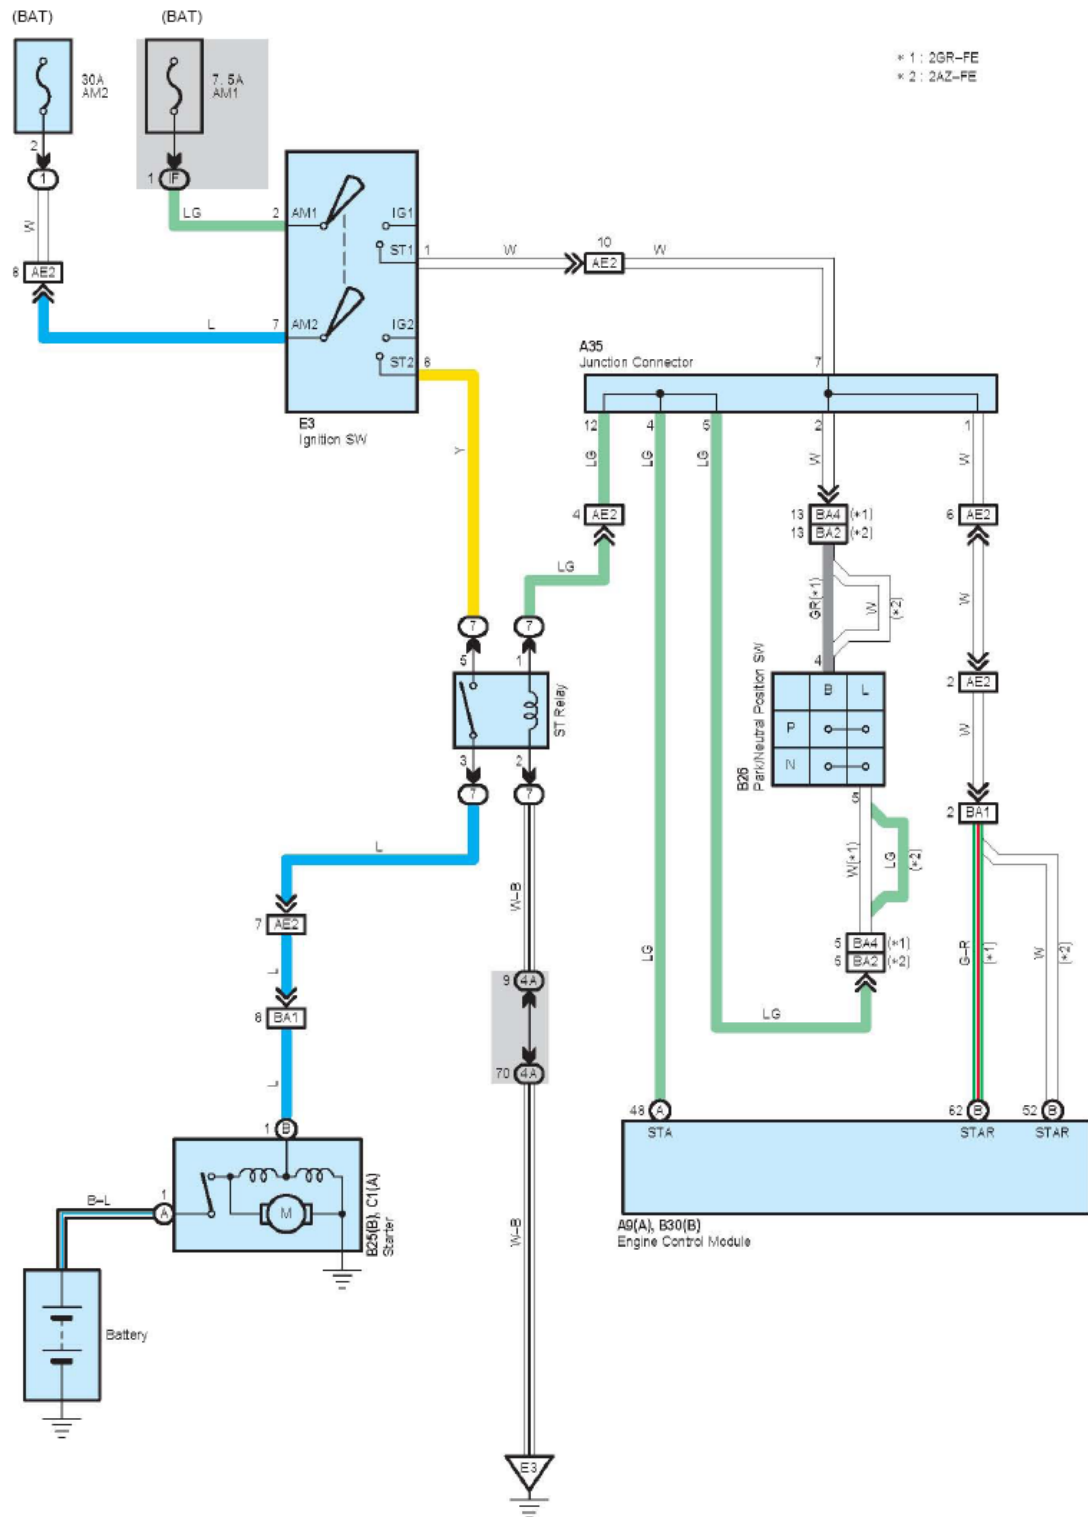

RAV4 (EM01M1U)

Relay Blocks

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B No.1 (Engine Compartment Left)Engine Room R/B No.1 (Engine Compartment Left)
7	R/B No.7 (Cowl Side Left)

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
4A	Instrument Panel Wire and J/B No.4 (Instrument Panel Center)
IF	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)

Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
AE2	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
BA1	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.1 and Engine Room J/B No.1)Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.1 and Engine Room J/B No.1)
BA2	
BA4	

Ground Points

Code	Ground Points Location
E3	Instrument Panel Reinforcement Center

LAUNCH