



# Illumination

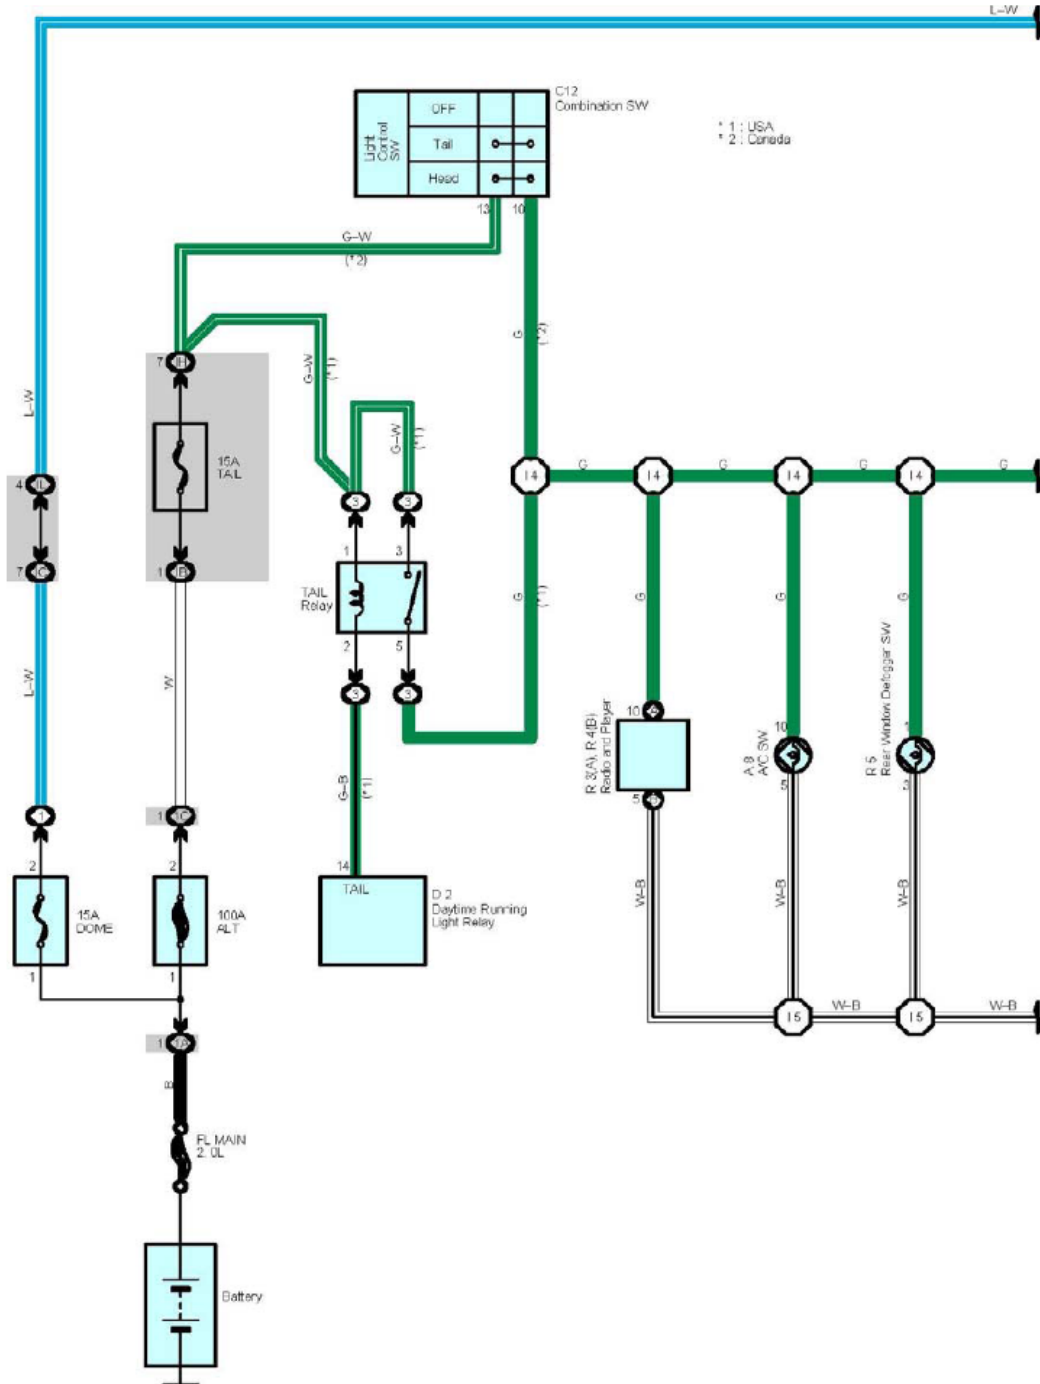

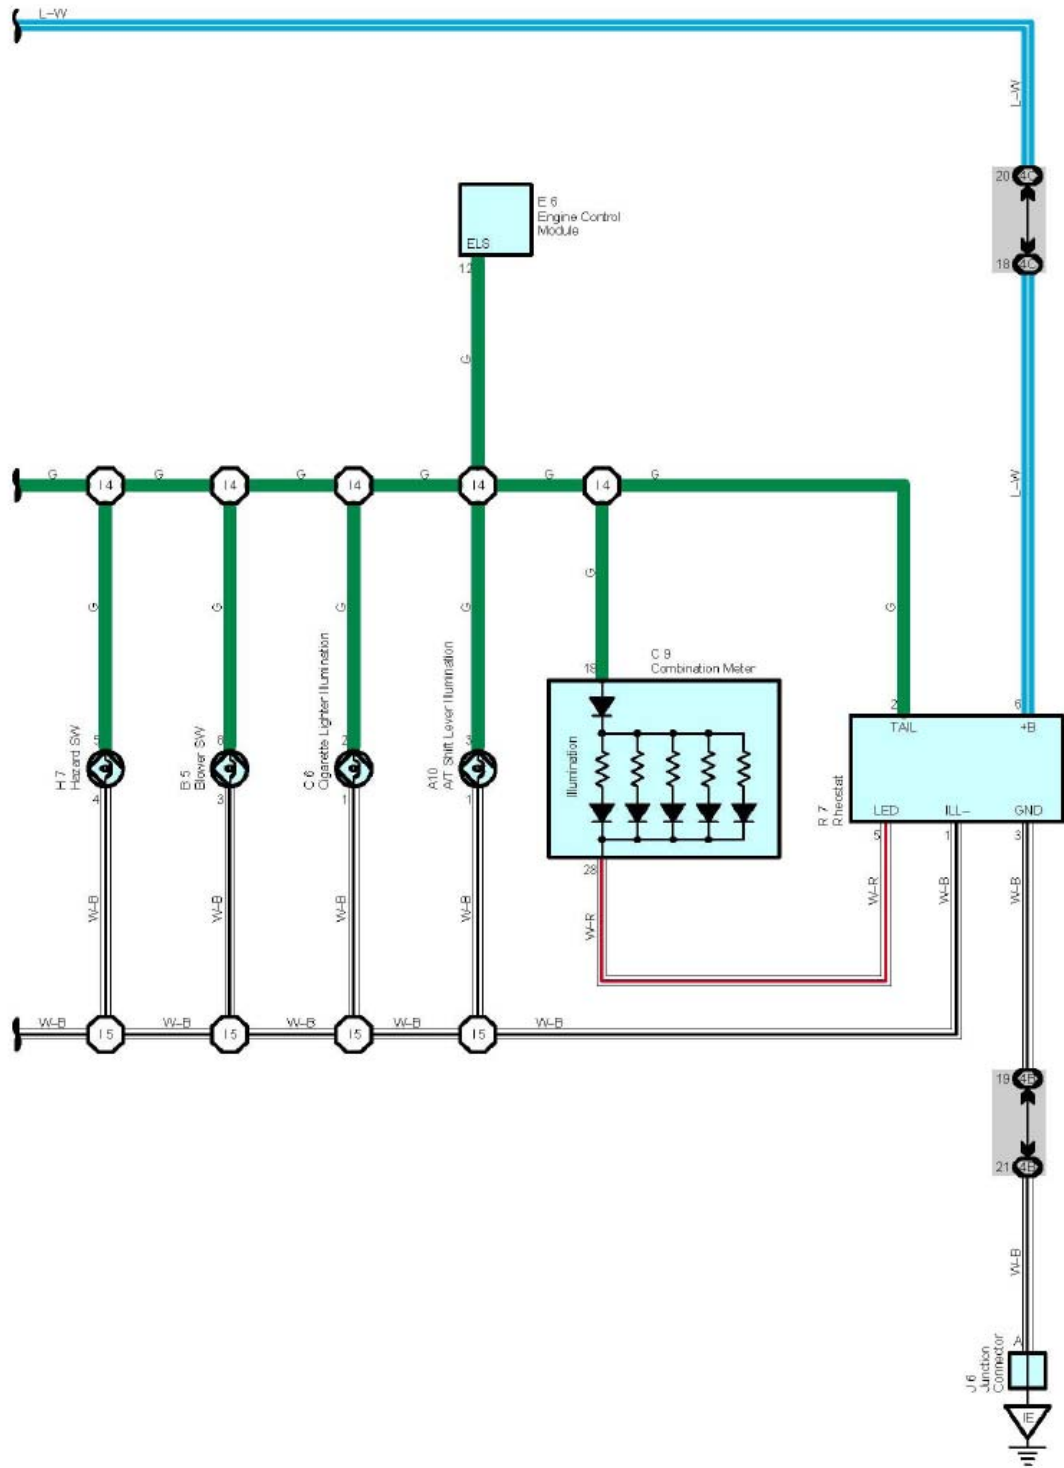

**Service Hints****C12 Combination SW**

10–13 : Continuity with the light control SW at Tail or Head position

**TAIL Relay**

5–3 : Closed with the light control SW at Tail or Head position

**Relay Blocks**

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B (Engine Compartment Left)
3	RH R/B (Right Side of the Instrument Panel Reinforcement)

**Junction Block and Wire Harness Connector**

Code	Junction Block and Wire Harness (Connector Location)
IB	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel) Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IC _	
IH	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel) Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	
1A	Engine Wire and Engine Room J/B (Engine Compartment Left)
1C	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4B	Instrument Panel Wire and Center J/B (Behind the Combination Meter) Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C _	

**Ground Points**

Code	Ground Points Location
IE	Behind the Combination Meter

**Splice Points**

Code	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	Instrument Panel Wire	I5	<a href="#">42</a>	Instrument Panel Wire