


Setting the Service Mileage Interval

- 1). Turn on the ignition switch.
- 2). Press and hold button A on the instrument panel until the service mileage interval is displayed. See the following figure.
- 3). Press button B and hold it for at least 3 seconds until the display screen is reset. See the following figure.

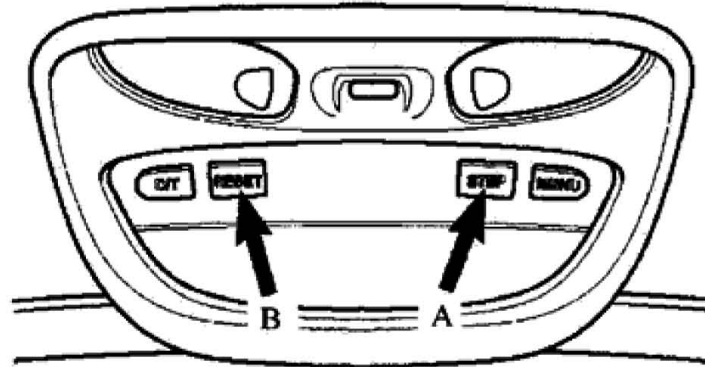

LAUNCH