


Horn

From Power Source System (See Page 48)

* 1 : w/ Wireless Door Lock
* 2 : w/o Wireless Door Lock

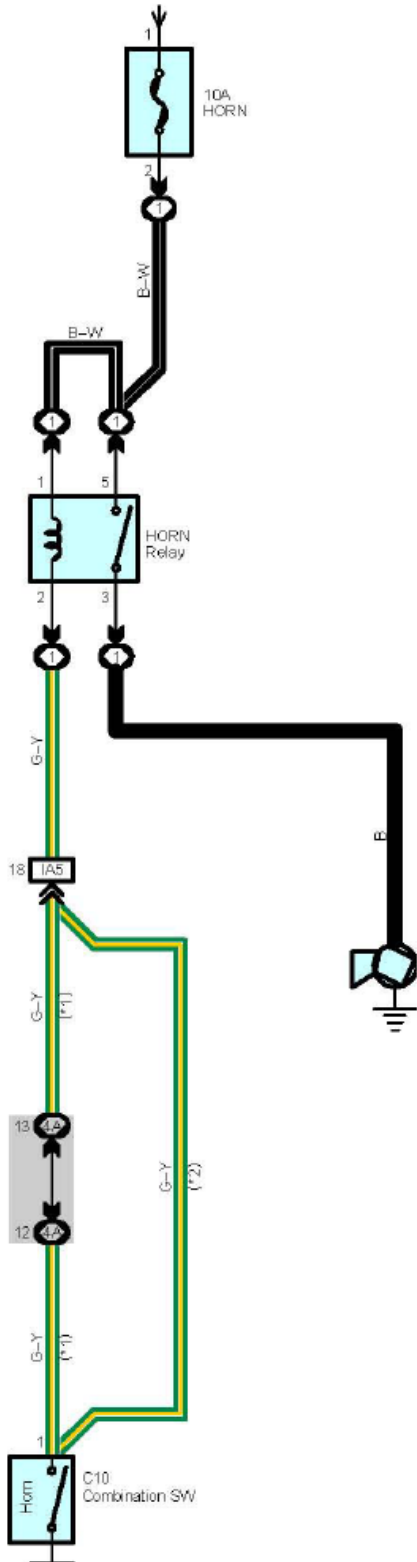

LAUNCH

ServiceHints**HORN Relay**

5-3 : Closed with the horn SW on.

Relay Blocks

Code	Relay Blocks (Relay Block Location)
1	Engine Room R/B (Engine Compartment Left)

Junction Block and Wire Harness Connector

Code	Junction Block and Wire Harness (Connector Location)
4A	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

Connector Joining Wire Harness and Wire Harness

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA5	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement)

LAUNCH