

# Engine Oil Service Lamp Reset

- 1).Identify the control unit (below the front right seat back) and remove from the plug.
- 2).Remove the tamper-proof label to show the resetting access hole.
- 3).Insert a thin metal probe into the access hole to make the resetting pin within this unit instantaneous short circuit.
- 4).Reconnect the control unit to the plug (or connector), turn the ignition on, the service engine warning lamp will firstly light up, which is a part of unit built-in detection characteristics. If the unit is reset properly, the warning lamp will go out after a few seconds.
- 5).If the warning lamp is still on, repeat the resetting procedure.
- 6).Install some tamper-proof labels.

LAUNCH