

Engine Oil Service Lamp Reset

- 1). Turn on the ignition switch.
- 2). Open the hood.
- 3). Open the driver door.
- 4). Maintenance resetting information is not displayed on the instrument cluster. Fully depress the accelerator pedal and brake pedal, and hold for 10s.
- 5). Turn off the ignition switch.
- 6). Turn on the ignition switch and check whether maintenance information is cleared.
- 7). If maintenance information is not cleared, repeat the procedure.

LAUNCH