

Engine Oil Service Lamp Reset

Gasoline

- 1). Switch ignition on and make sure the service message is displayed in the center console.
- 2). Using the right steering wheel switchpack, navigate to the service menu and select by pressing the right arrow on the right steering wheel switchpack.
- 3). Navigate to the last option in this menu using the right steering wheel switchpack. Press and hold the trip reset button on the steering column multi function switch and hold the right steering wheel switchpack down arrow simultaneously for 15 seconds. This will reset the service counter in the engine control module.
- 4). Cycle the ignition and check that the message has been extinguished. If the message remains please repeat the process.

Diesel oil

- 1). Turn on the ignition switch.
- 2). Open the hood.
- 3). Open the driver door.
- 4). Maintenance resetting information is not displayed on the instrument cluster. Fully depress the accelerator pedal and brake pedal, and hold for 60s.
- 5). Turn off the ignition switch.
- 6). Turn on the ignition switch and check whether maintenance information is cleared.
- 7). If maintenance information is not cleared, repeat the procedure.

Other

- 1). Turn on the ignition switch.
- 2). Open the hood.
- 3). Open the driver door.
- 4). Maintenance resetting information is not displayed on the instrument cluster. Fully depress the accelerator pedal and brake pedal, and hold for 30s.
- 5). Turn off the ignition switch.
- 6). Turn on the ignition switch and check whether maintenance information is cleared.
- 7). If maintenance information is not cleared, repeat the procedure.

LAUNCH