

Engine Oil Service Lamp Reset

- 1). Identify the control unit and remove from the plug. Notice: the control unit is under the passenger seat (beside to the driver seat).
- 2). Remove the tamper-proof label to show the resetting access hole.
- 3). Insert a thin metal probe into the access hole to make the resetting pin within this unit instantaneous short circuit. Install some tamper-proof labels. This emission maintenance tips is a part of emission control system.

LAUNCH