

Engine Oil Service Lamp Reset

- 1).Remove the firmware (things similar to the screw), and lower the instrument cluster.
- 2).Identify the control unit and remove from the plug (or connector).
- 3).Remove the tamper-proof label to show the resetting access hole.
- 4).Insert a thin metal probe into the access hole to make the resetting pin within this unit instantaneous short circuit.
- 5).Reconnect the control unit to the plug (or connector), turn the ignition on, the service engine warning lamp on the auxiliary operation panel lights up, which is a part of unit built-in detection characteristics.
- 6).If the warning lamp is still on, repeat the resetting procedure.
- 7).Install some tamper-proof labels.
- 8).Sign the certificate of maintenance.

LAUNCH