

Engine Oil Service Lamp Reset

- 1). Press and hold the mileage resetting button and turn on the ignition switch to gear 2.
- 2). Release the mileage resetting button within 10s.
- 3). If you successfully enter the manual resetting mode, the odometer displays "dISt" or "DATE", which depends on the activated alarm level.
- 4). If you want to clear the "dISt" alarm, within 10s after you enter the manual resetting mode, press and hold the mileage resetting button for more than 5s. If the "dISt" alarm is cleared successfully, the odometer displays "RESET" for 5s. If the date alarm is not activated, the odometer displays "END".

Remarks :

- 1). If the vehicle traveled distance is less than 20% of the next service interval, the distance alarm is not reset.
- 2). If the date alarm is activated, the odometer displays "DATE". If you want to clear the "DATE" alarm, within 10s after the odometer displays "DATE", press and hold the mileage resetting button for more than 5s. If the "DATE" alarm is successfully cleared, the odometer displays "END". Then the odometer displays "RESET" for 5s, and exits the resetting mode.