

B1520 B1521 B1522 Temperature Blower Speed Air Flow Selector Malfunction

DTC Detecting Condition and Trouble Area

| DTC Detecting Condition | Trouble Area |
|---|--|
| When internal malfunction is detected in the HVAC control module. | <ul style="list-style-type: none"> • Temperature selector included in HVAC control module (DTC B1520) • Blower speed selector included in HVAC control module (DTC B1521) • Air flow selector included in HVAC control module (DTC B1522) |

DTC Troubleshooting

| Step | Action | Yes | No |
|------|---|--|--|
| 1 | Was "Air Conditioning System Check" performed? | Go to Step 2. | Go to "Air Conditioning System Check: Automatic Type". |
| 2 | DTC check 1) Clear DTC referring to "DTC Clearance: Automatic Type". 2) Recheck DTC. Are DTC B1520, B1521 and/or B1522 still detected? | Substitute a known good HVAC control module and recheck. | Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00". |