


Chassis Dynamometer Mode

Function Description :


This function is used to transition to Exhaust Monitor Chassis Dynamometer Mode.


Instruction:

1).comprises the following steps:

	Show Menu	liyong.
TOYOTA V48.31 > 16PIN DLC(Europe and Other) > Manually Select > GGH > As of 01/2015		
All Readiness		
Mode changes		
Evaporative System Check		
CVT fluid pressure learn		
Deceleration sensor 0 Point Calibration		
G sensor Zero point learning		
Chassis Dynamometer Mode		



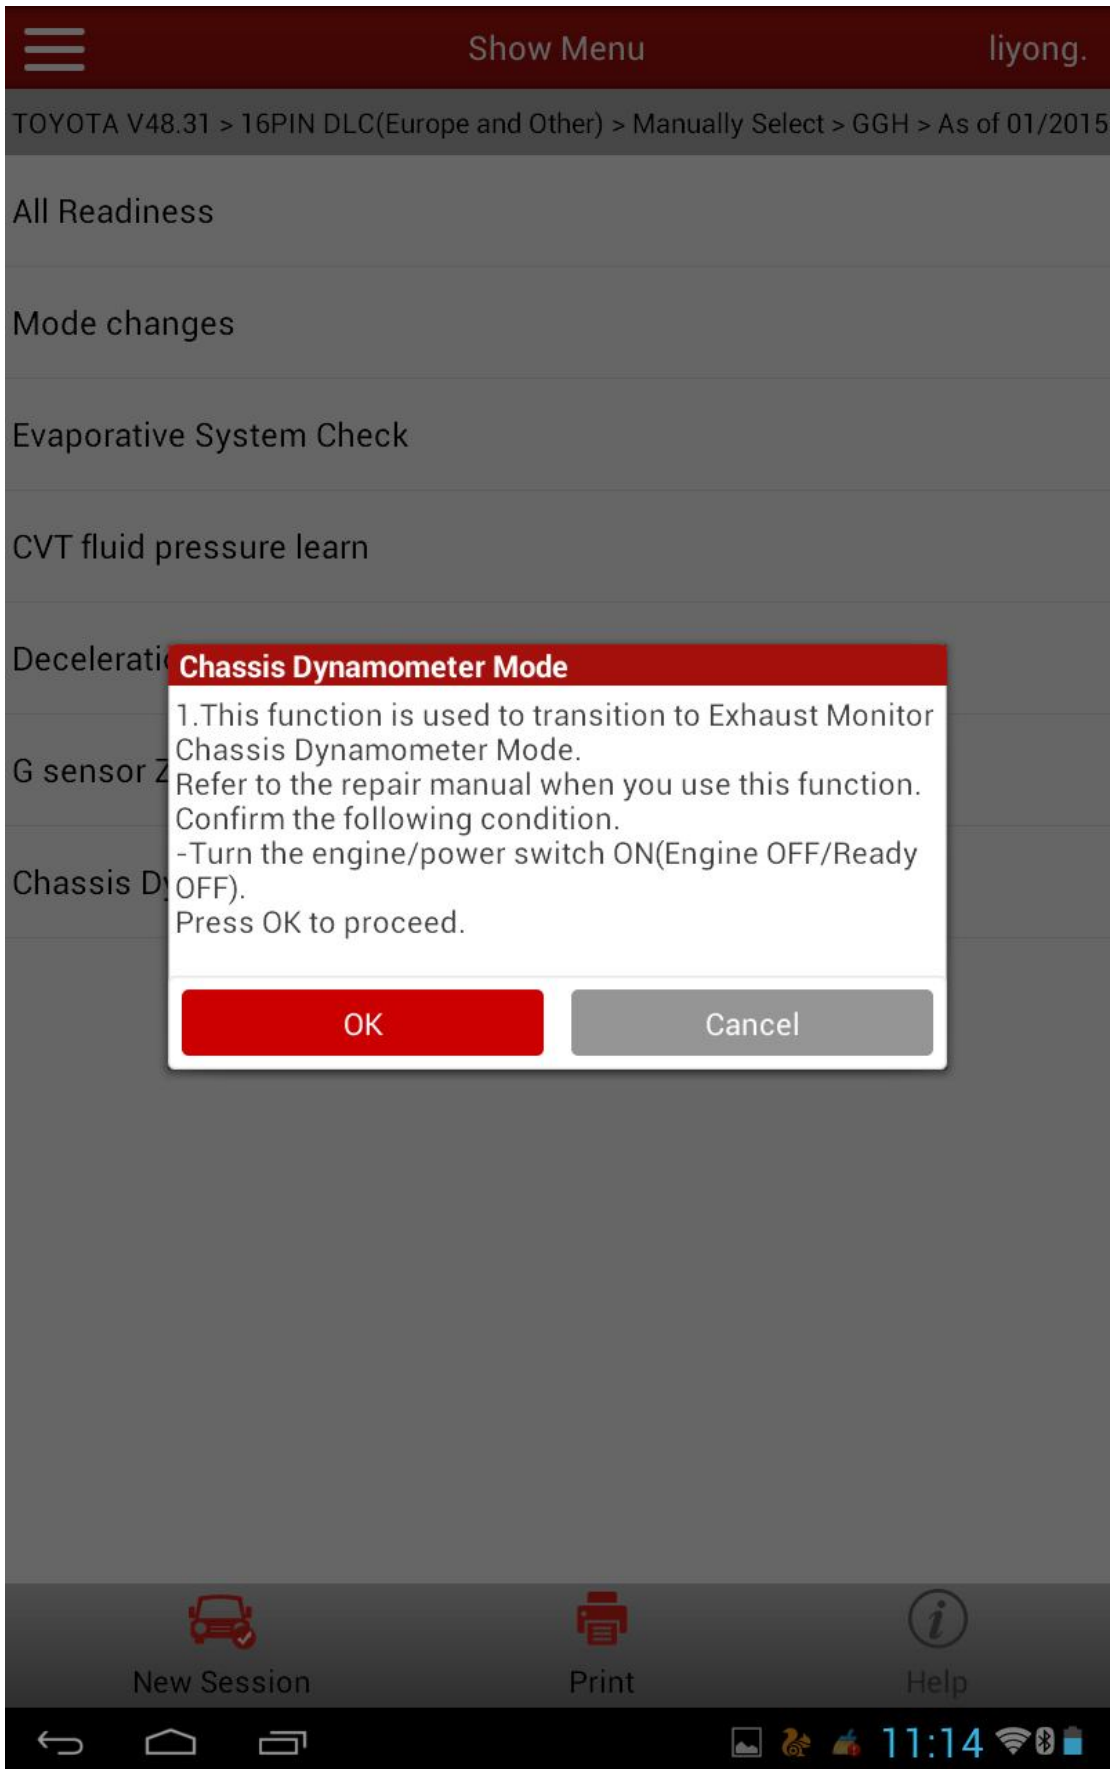






 Show Menu liyong.

TOYOTA V48.31 > 16PIN DLC(Europe and Other) > Manually Select > GGH > As of 01/2015

2WD Mode

4WD Mode

 **New Session**  **Print**  **Help**

  Saving screenshot...
Screenshot is being saved.


☰ Show Menu liyong.




TOYOTA V48.31 > 16PIN DLC(Europe and Other) > Manually Select > GGH > As of 01/2015





2WD Mode


4WD Mode

Tips New Session

 Communicating, please wait...

 New Session  Print  Help

    Saving screenshot...
Screenshot is being saved.

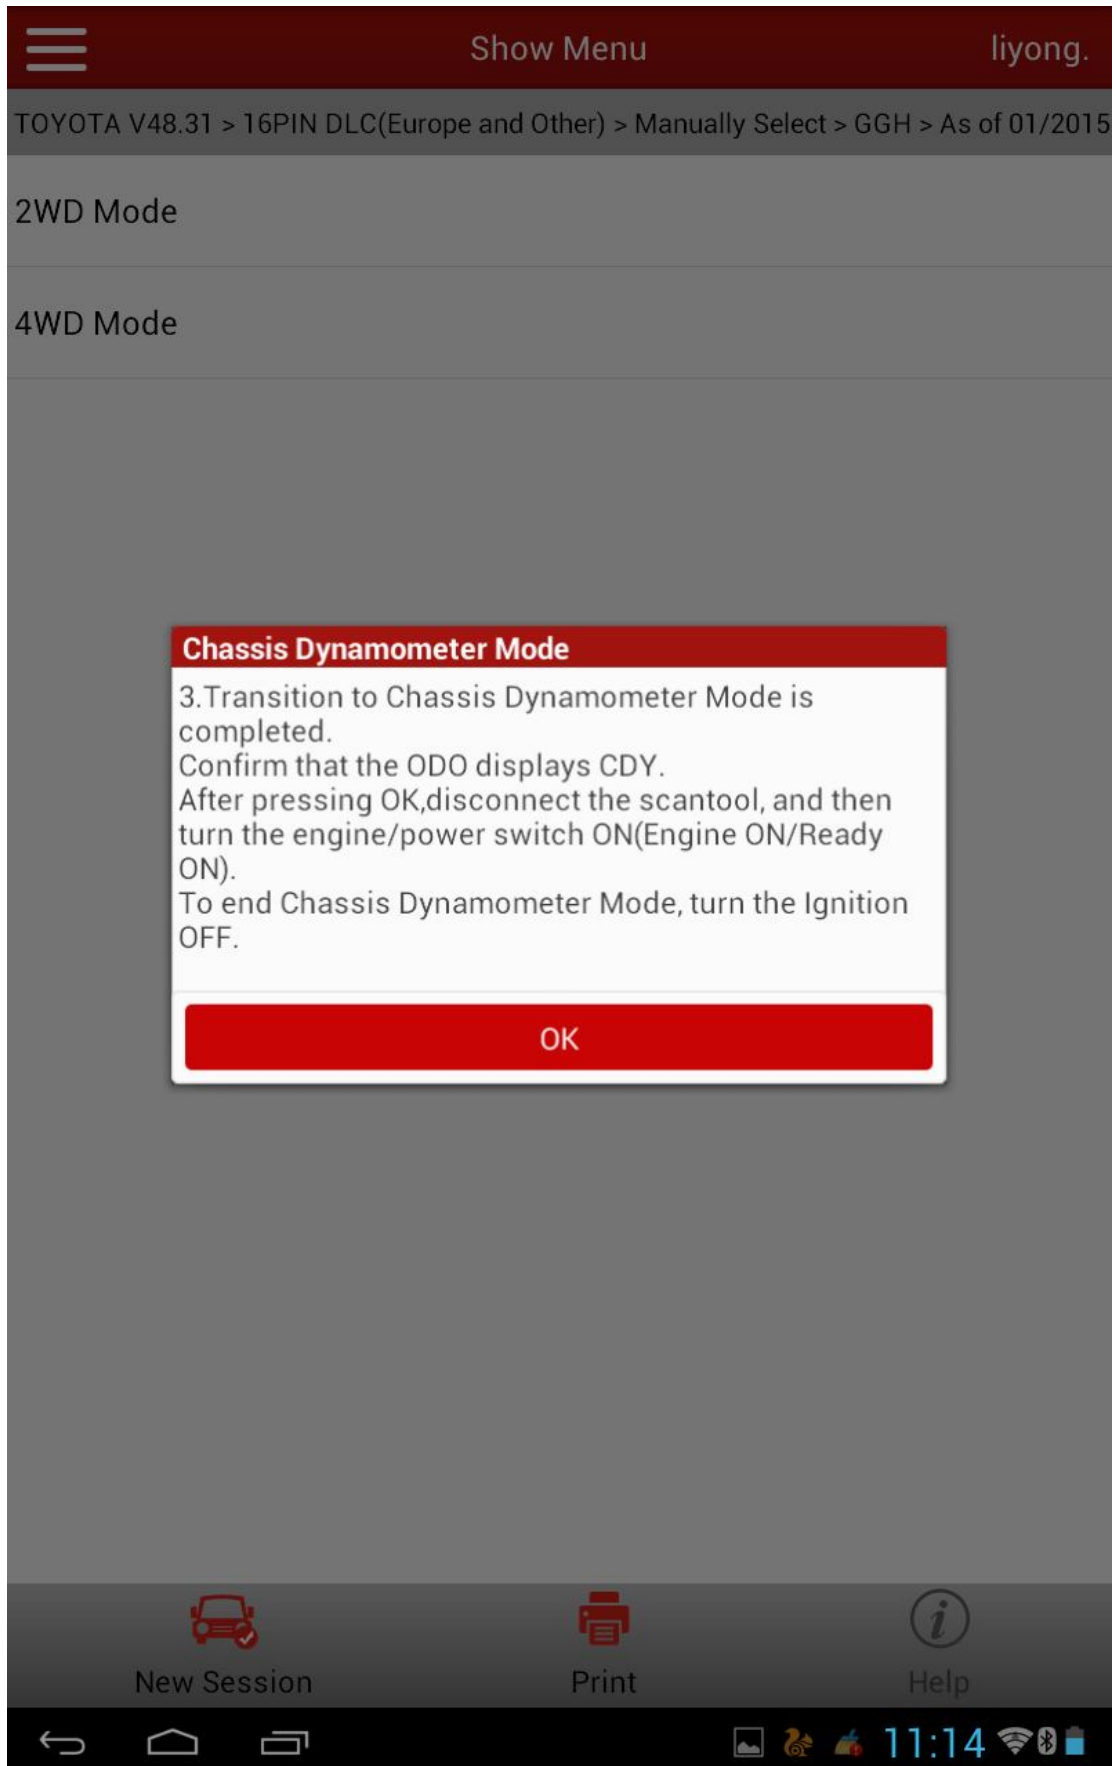

Declare:

The document is owned by the Shenzhen City, the copyright of the LAUNCH Technologies Inc, and no individual or entity shall be quoted or reproduced without consent.

LAUNCH