

# Reset Memory


## Function Description:


This function is used to delete the learned memory in the ECT ECU. A memory reset is required after automatic transmission or valve body replacement.


## Instruction:

1).comprises the following steps:



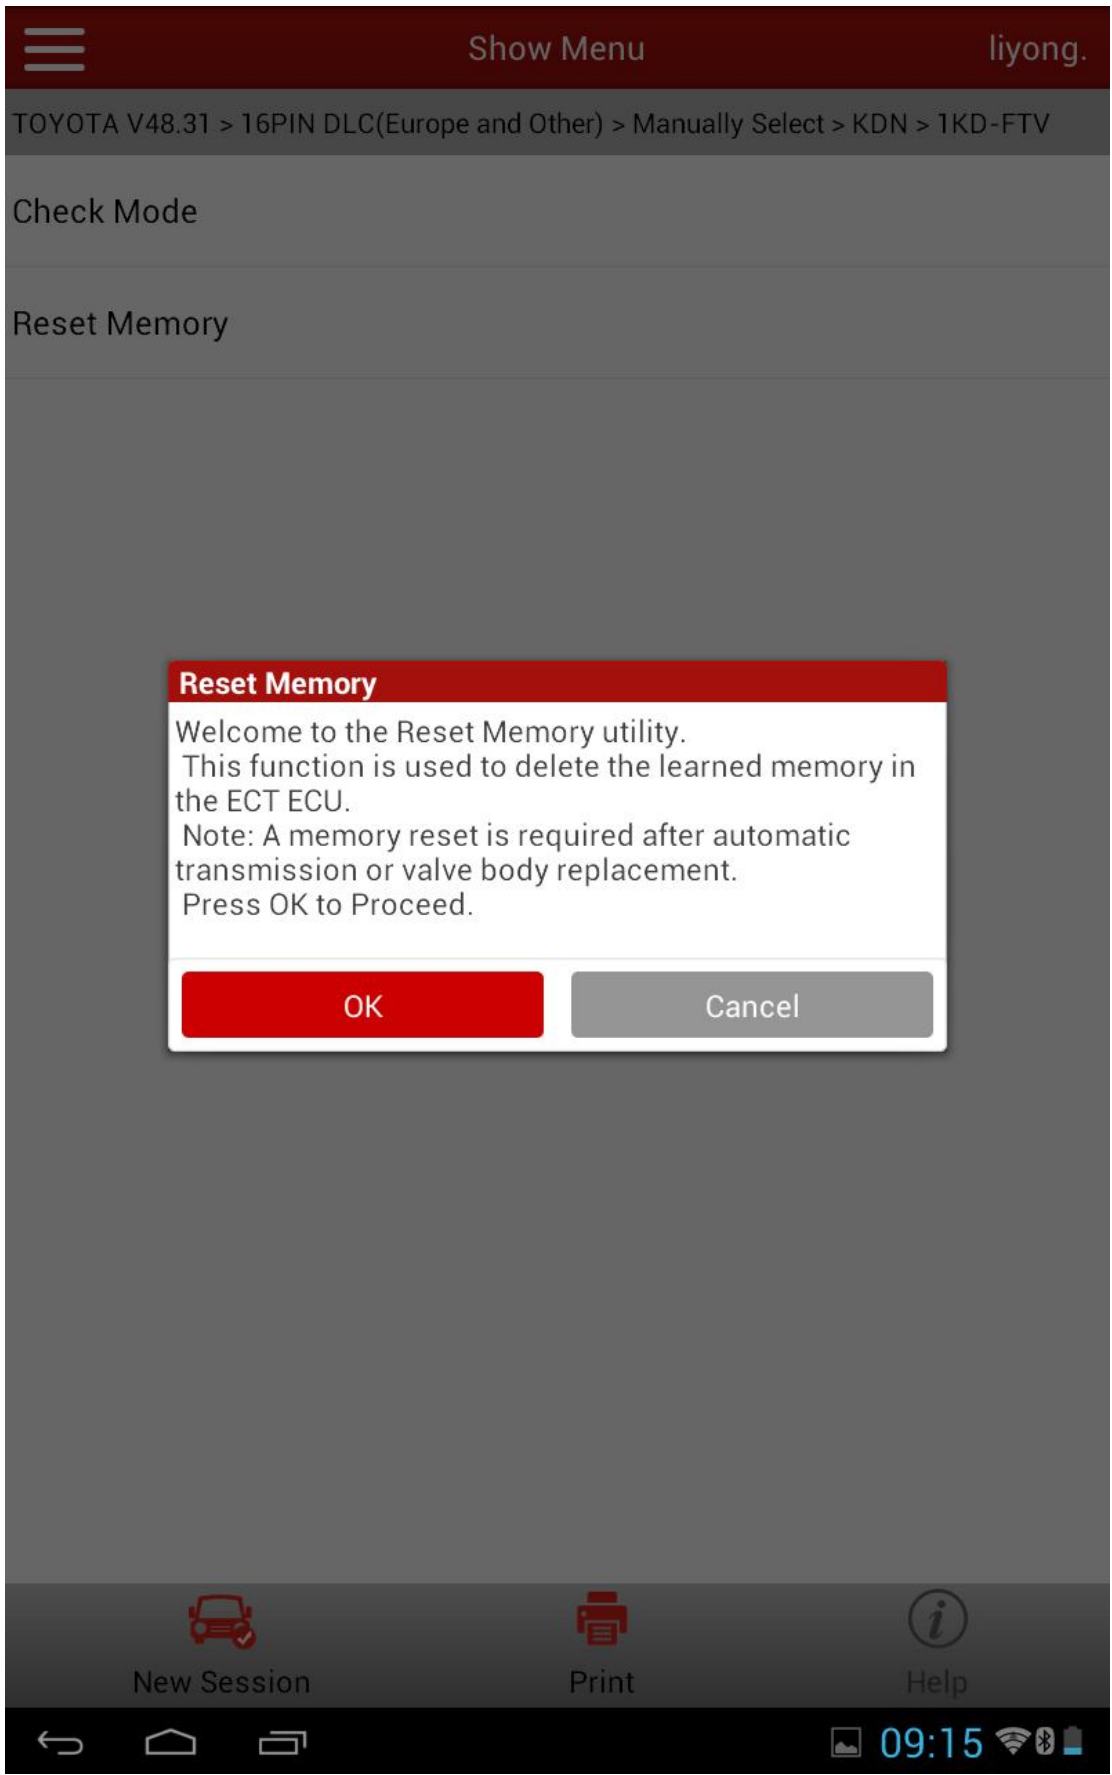

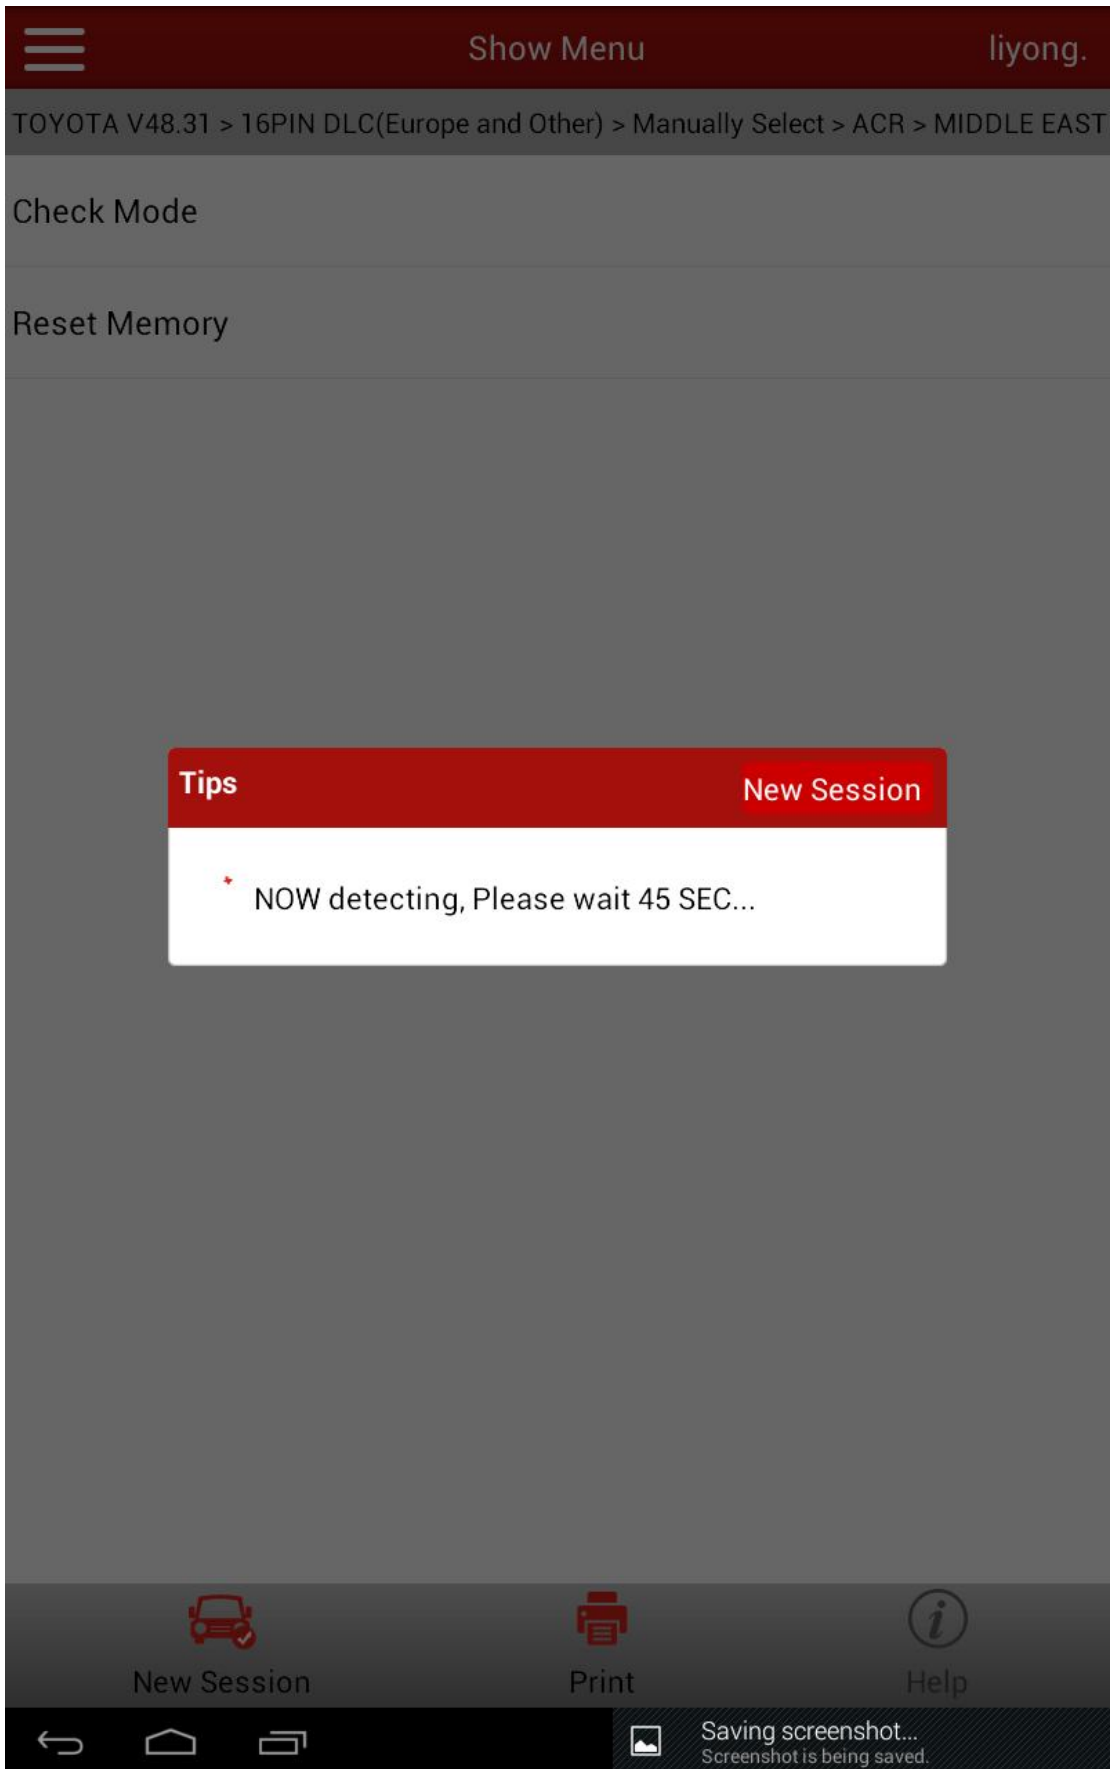

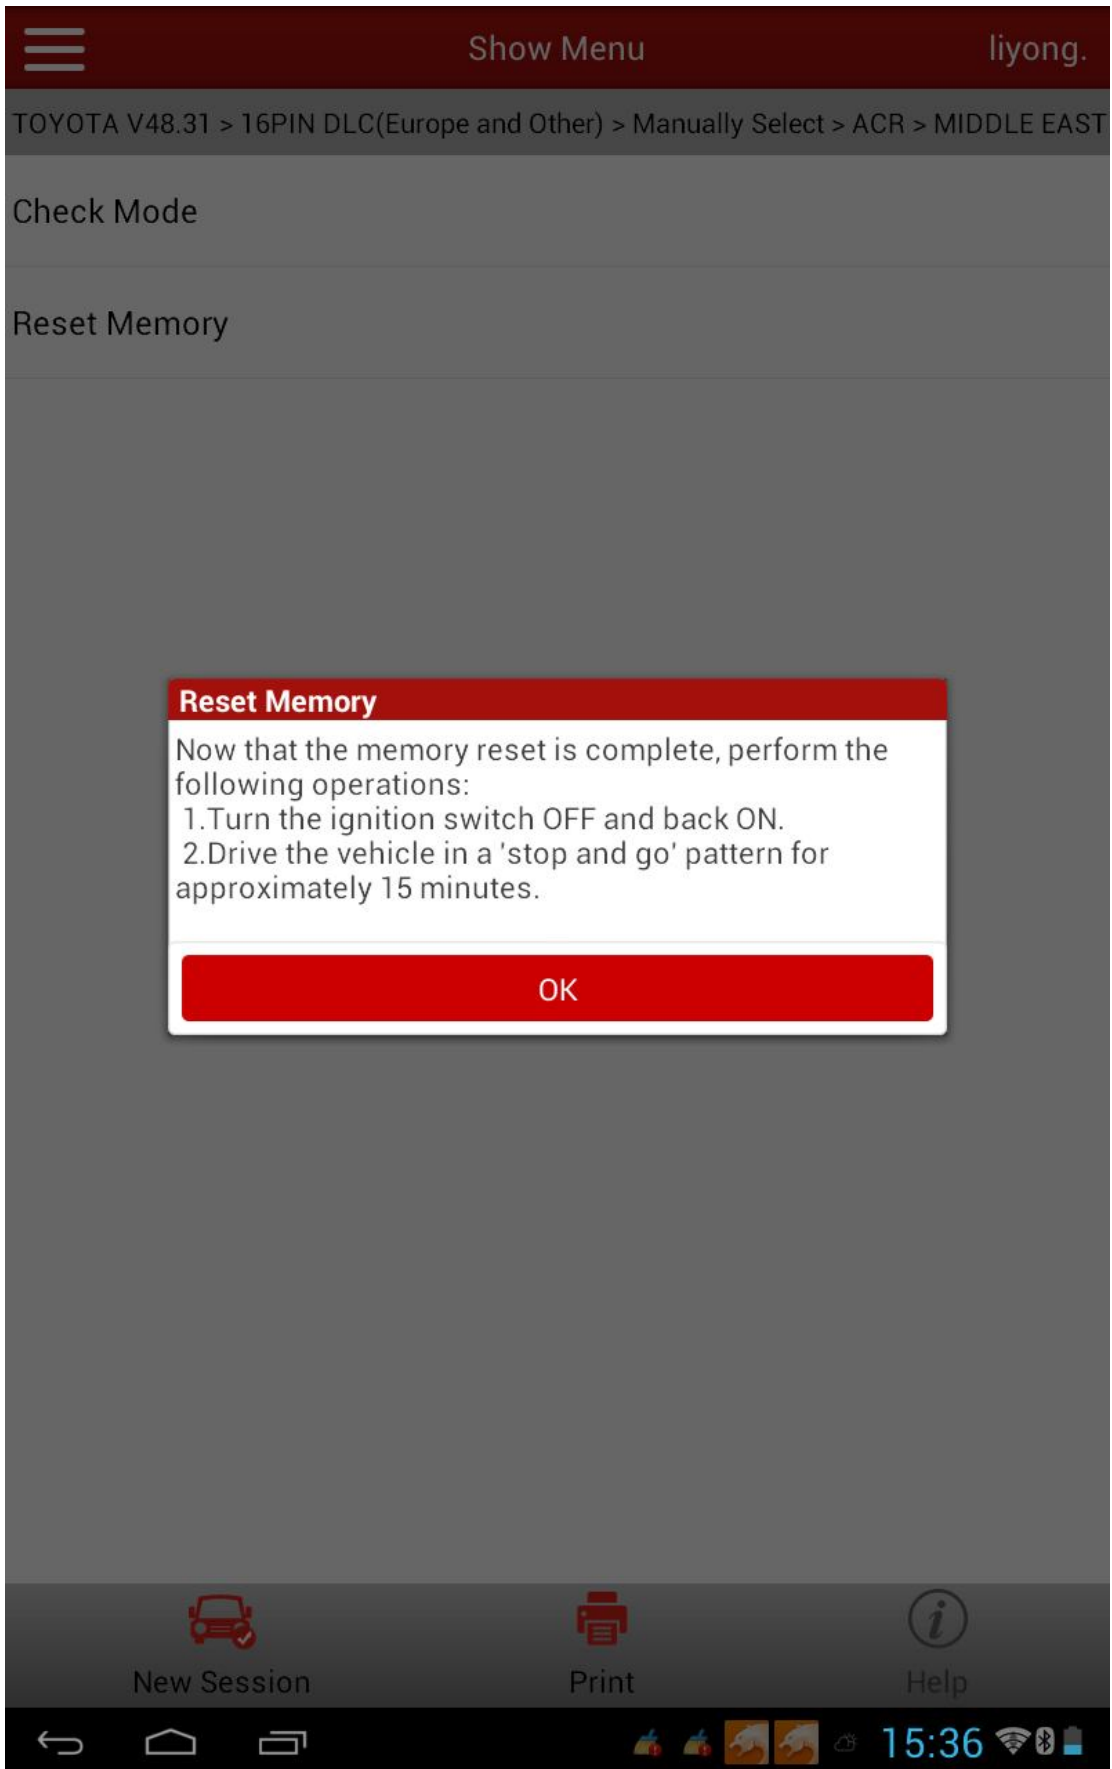

## Declare:

The document is owned by the Shenzhen City, the copyright of the LAUNCH Technologies Inc, and no individual or entity shall be quoted or reproduced without consent.

LAUNCH