

## BMW EGS(Automatic\_Transmission\_Control\_Module)\_Coding 523Li\_2008

### Model:


2008 BMW 523Li

### Fault Description:


Replaced the second-hand gearbox control module, read the fault code is "511B EGS code", need to do code function.

### Steps:


1. Enter "TCM (Automatic Transmission Control Module-EGS/DKG/SMG)".

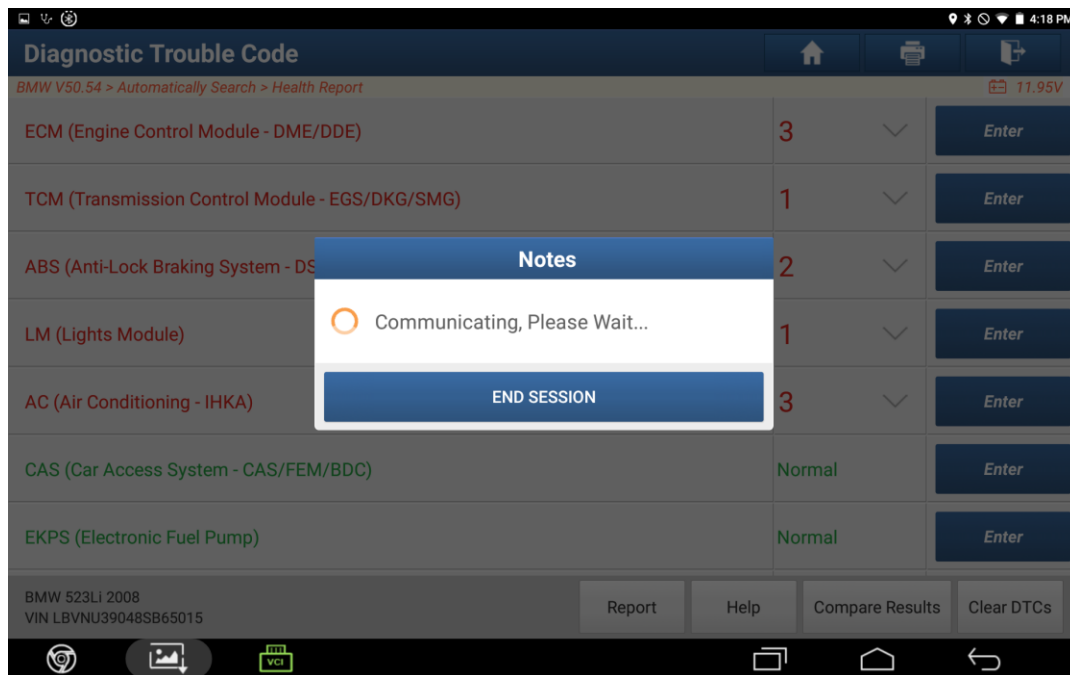


2. Select the "Read Fault Code" menu.

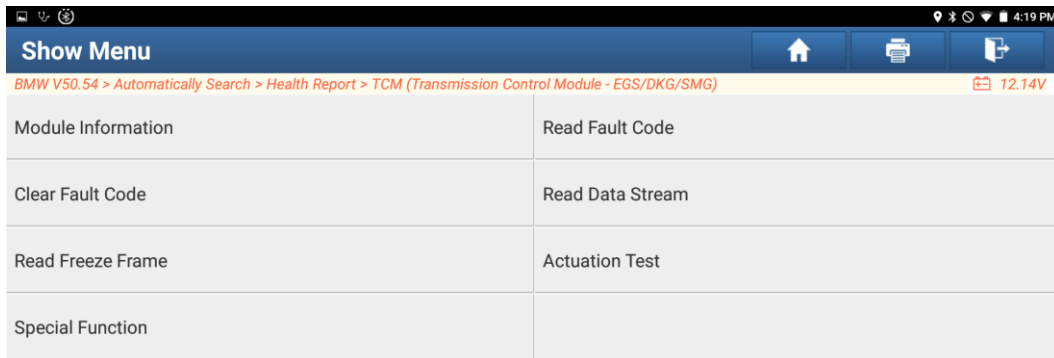


3. The fault code is: 511B EGS coding, as shown below;

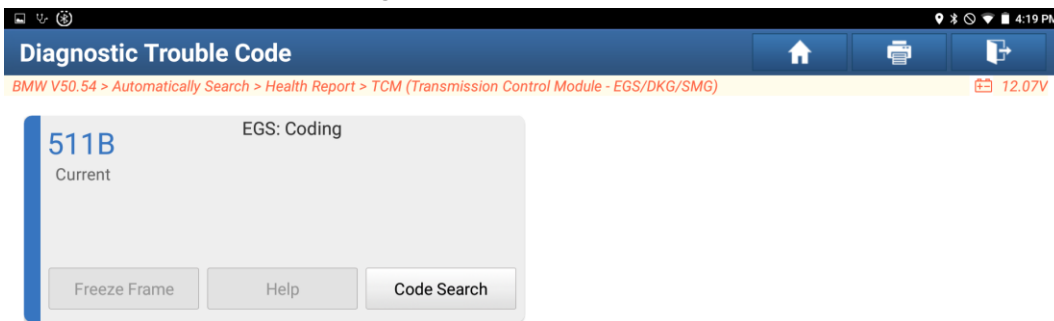


4. Select the "coding/program" menu;

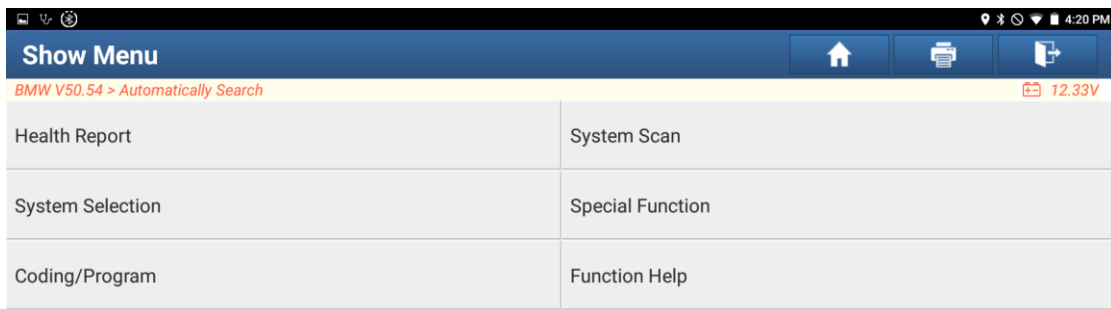


5. Confirm that the model information is correct, click "Next";

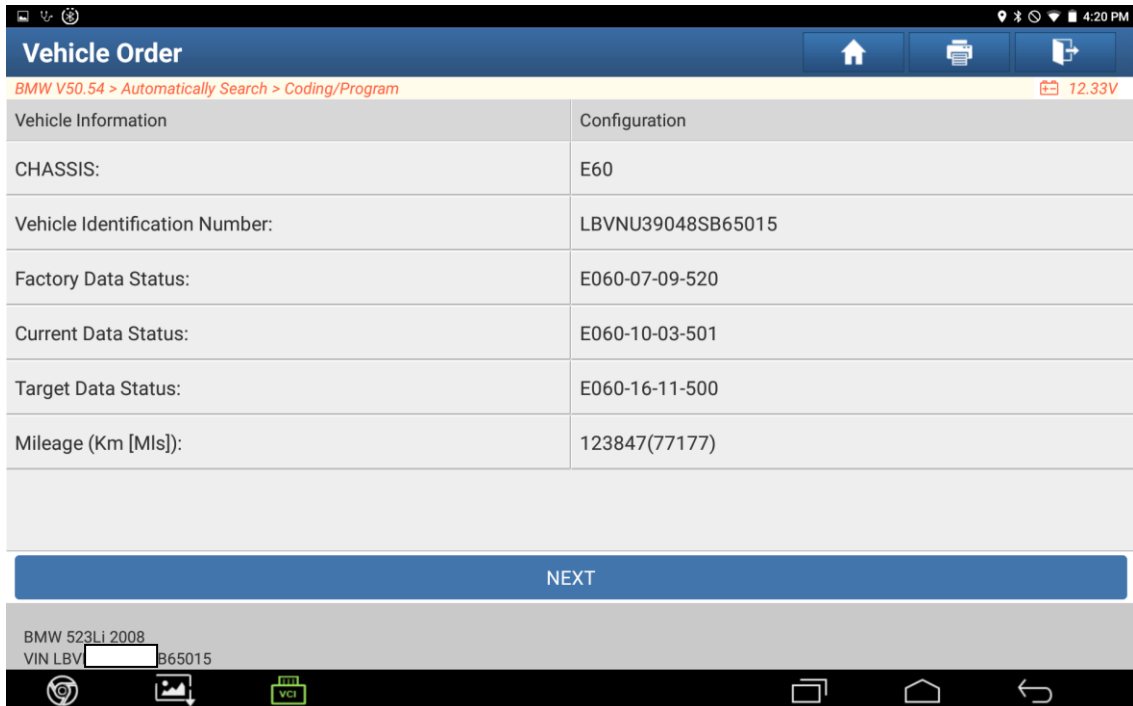


6. Select "Coding System List";

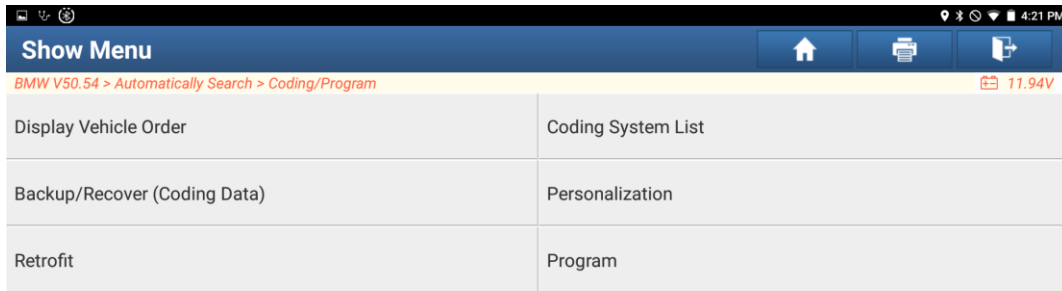


7. Select "EGS (Transmission Control Module)";

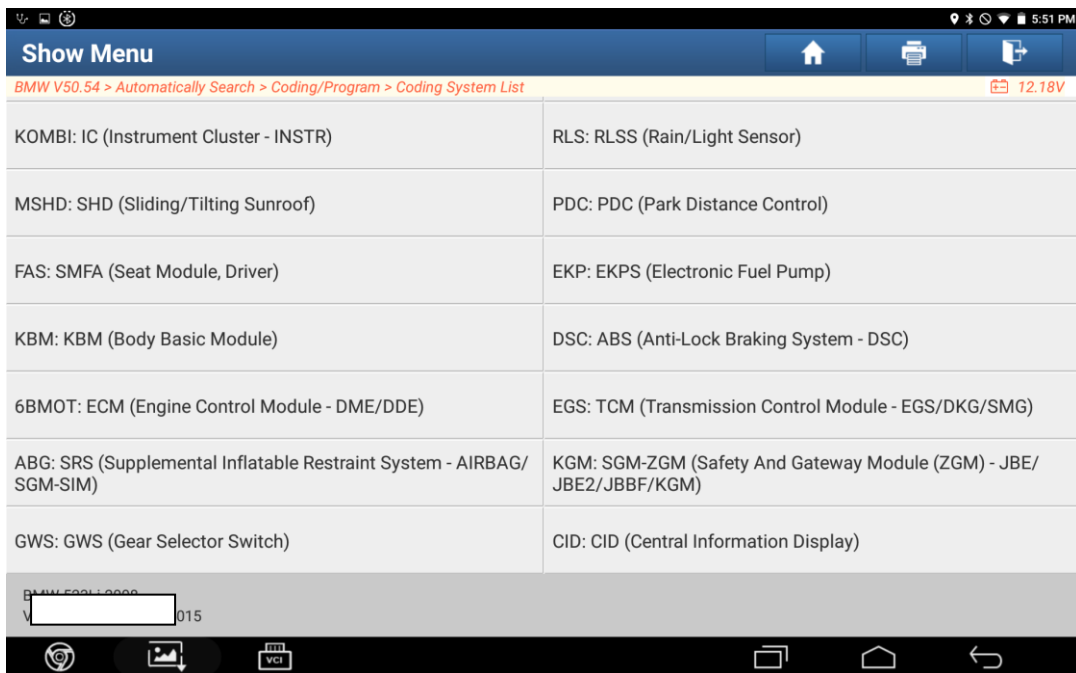


8. Operate the vehicle according to the operation prompt, click "Yes" to execute the encoding;

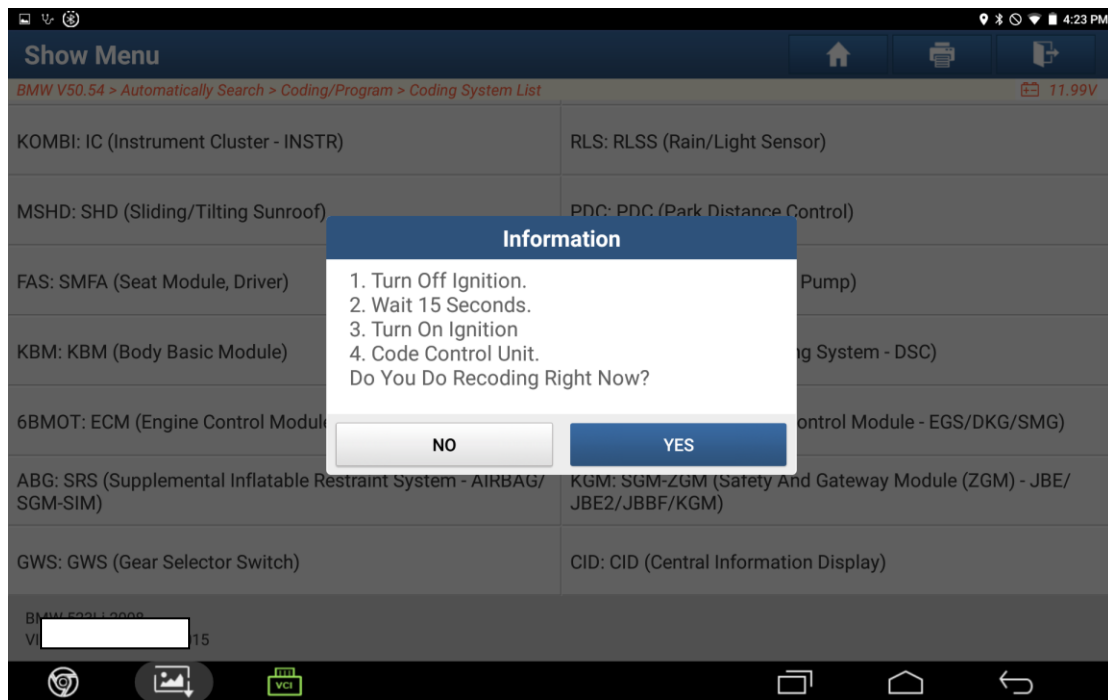

9. Re-encoding is complete, click "OK";

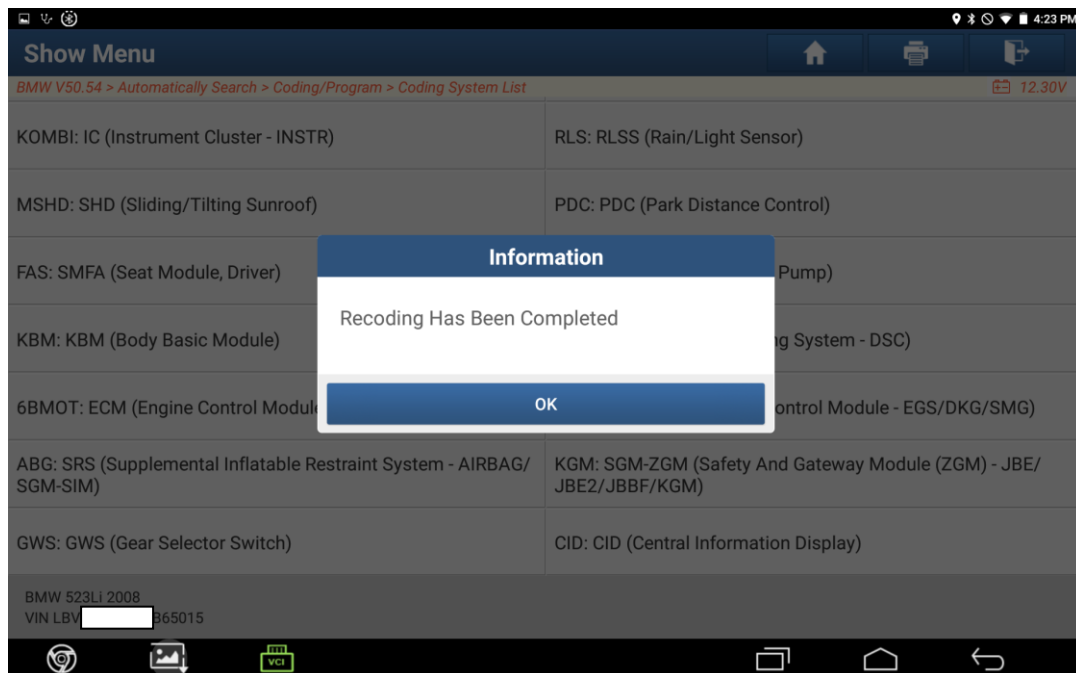

10. Read the code again, the system has no fault code;

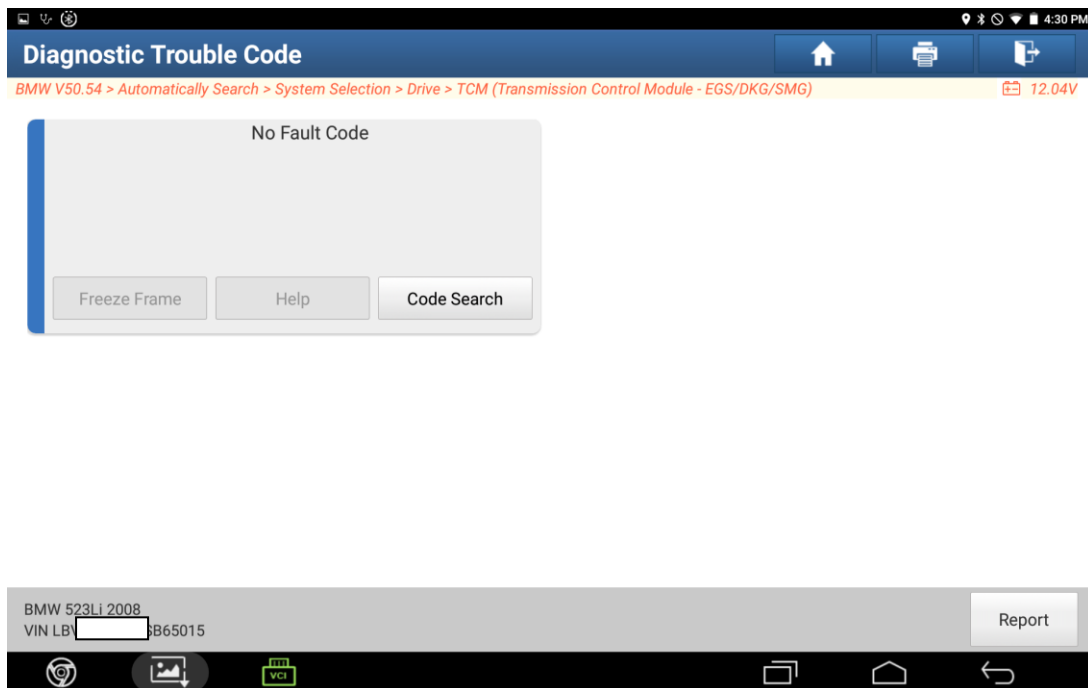

The end.