


## BMW Rain\_Initialization\_Sensor 740Li\_2011

**Function description:** After disassembling the front windshield and rain sensor, the sensor needs to be initialized

### Steps:

1. Select the BMW menu and click enter, and click "OK"

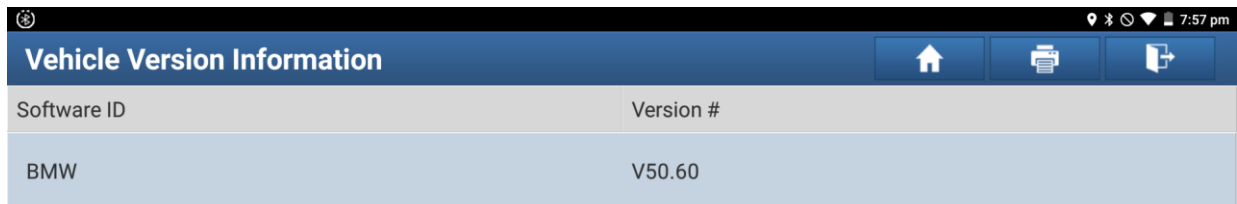

### BMW Diagnostic Software V50.60

#### Updates

**Summary:**

- Optimized software structure.

**New Functions:**

- None

**Optimized Functions:**

- None


**Fixed Bugs:**

- None


#### Software Instruction




## 2. Select "Automatically Search"

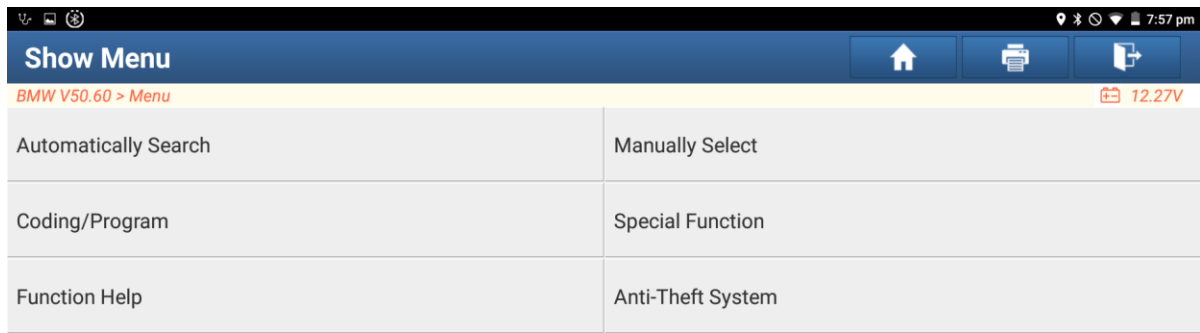

## 3. Click "Next"

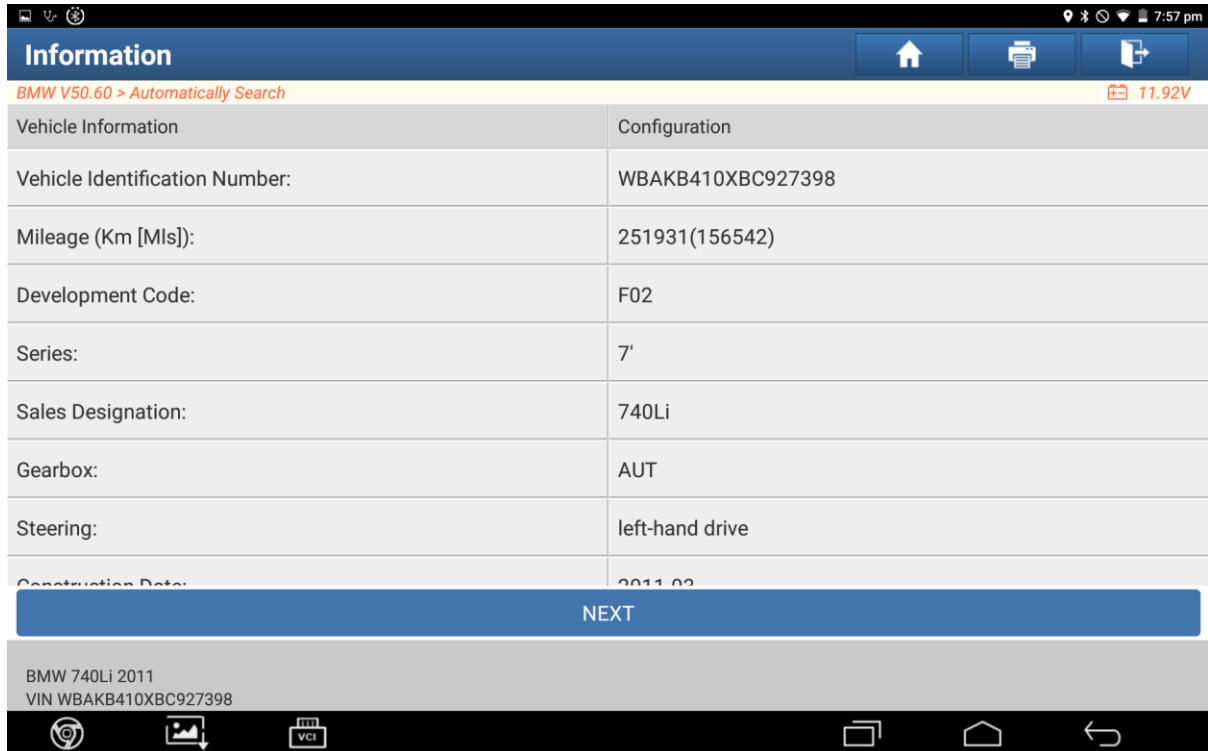

## 4. Select "System Scan"

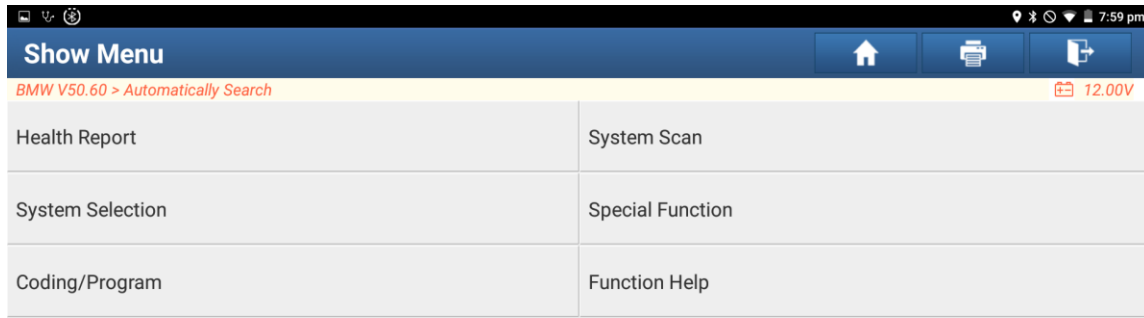


## 5. Select "JBE/JBBF (Junction box electronics)"




6. Click "OK"




7. Select "Special Features"

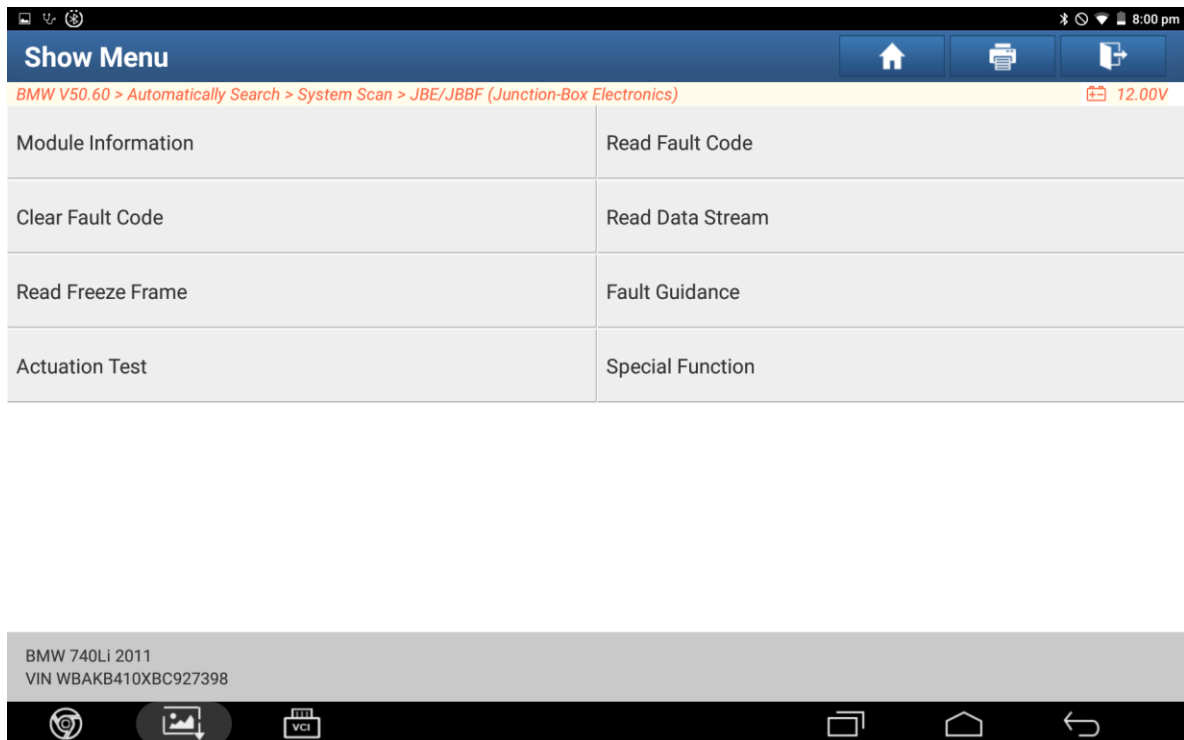


8. Select " Rain Initialize sensor"

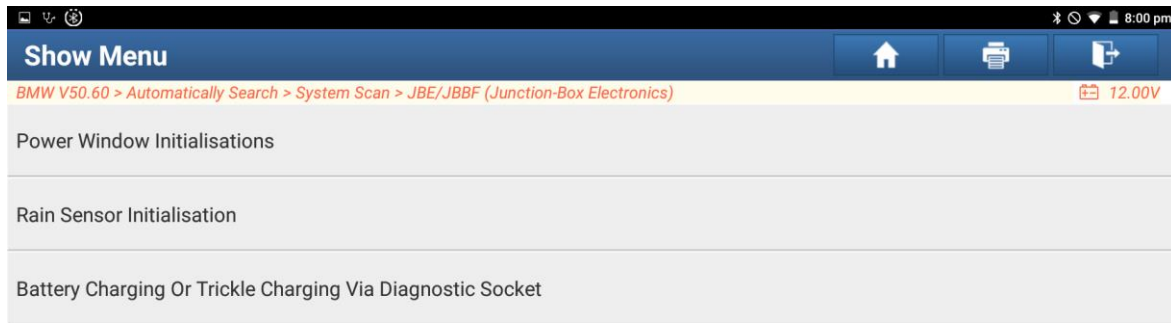


9. Read the prompt message and click "OK" when the conditions are met

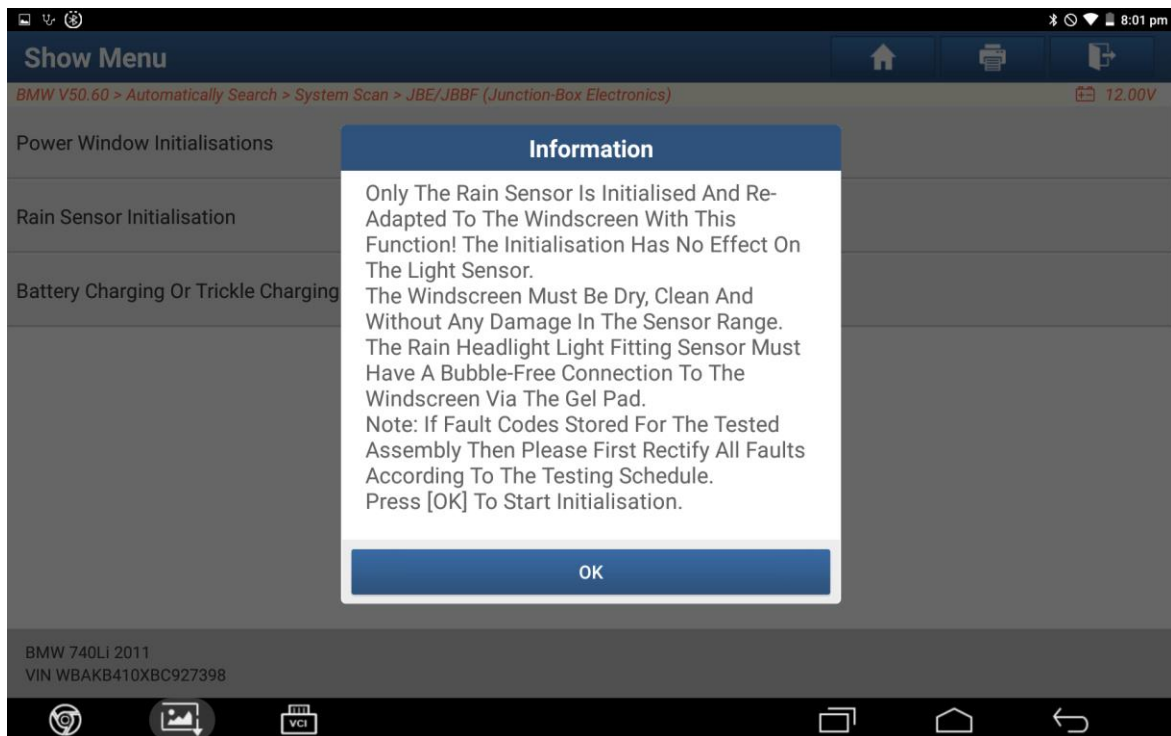


10. Click "OK"

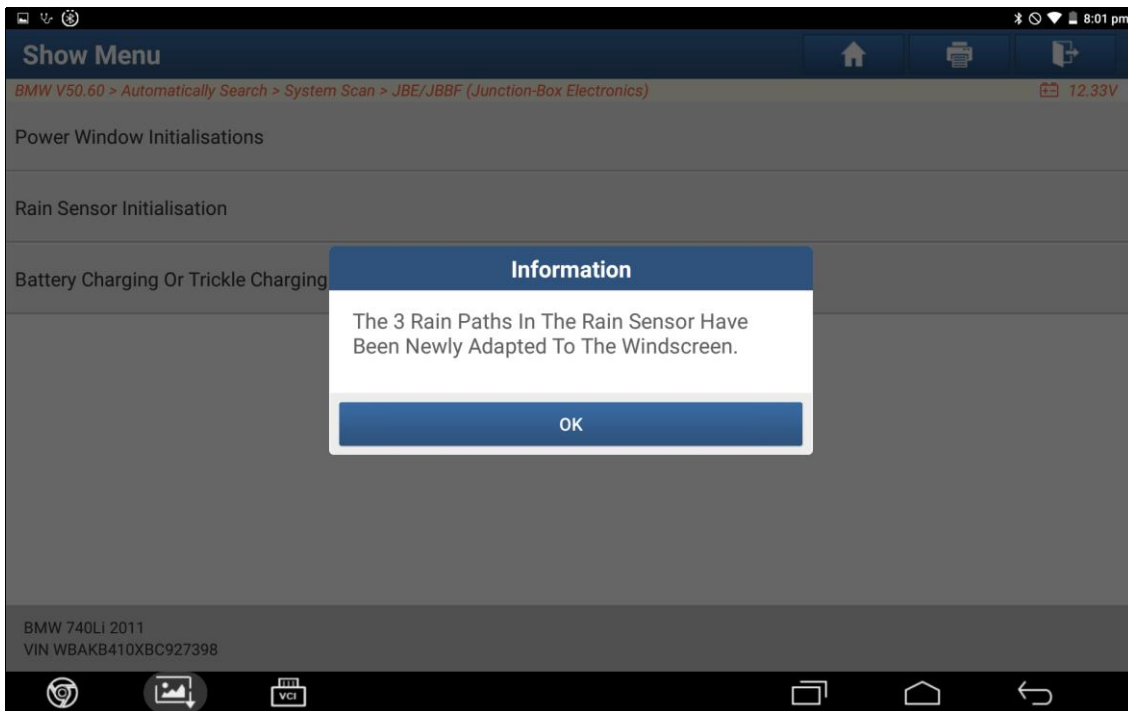

11. Click "Yes"

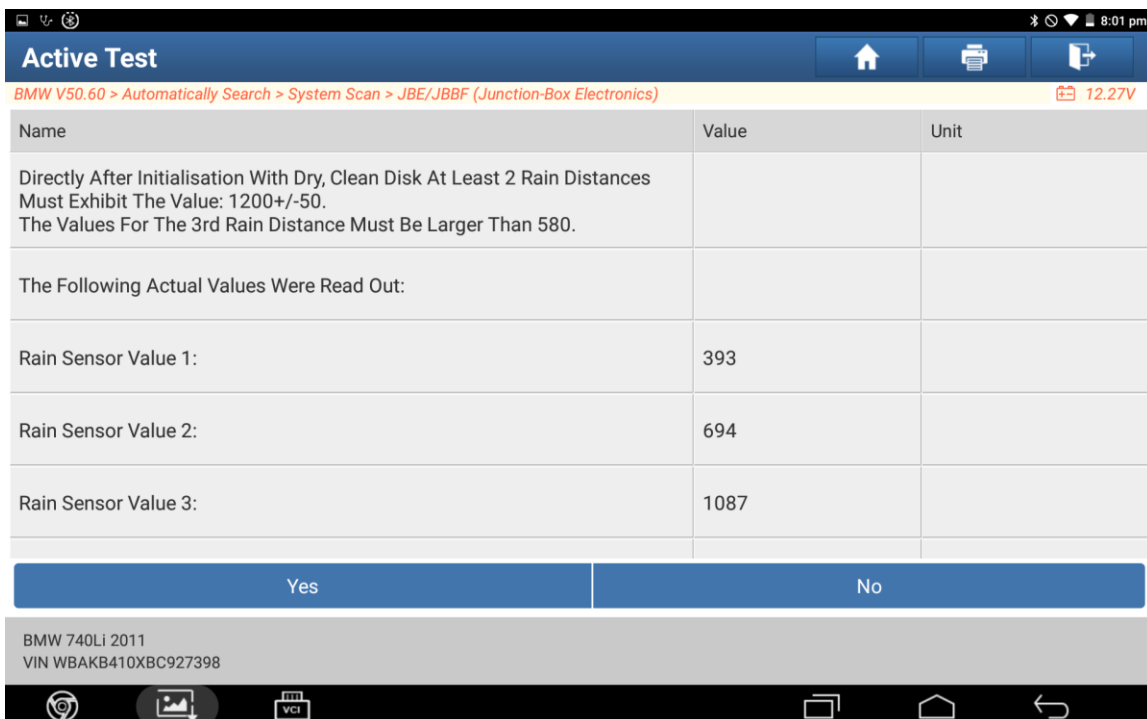

12. Initialization is complete, click "OK"

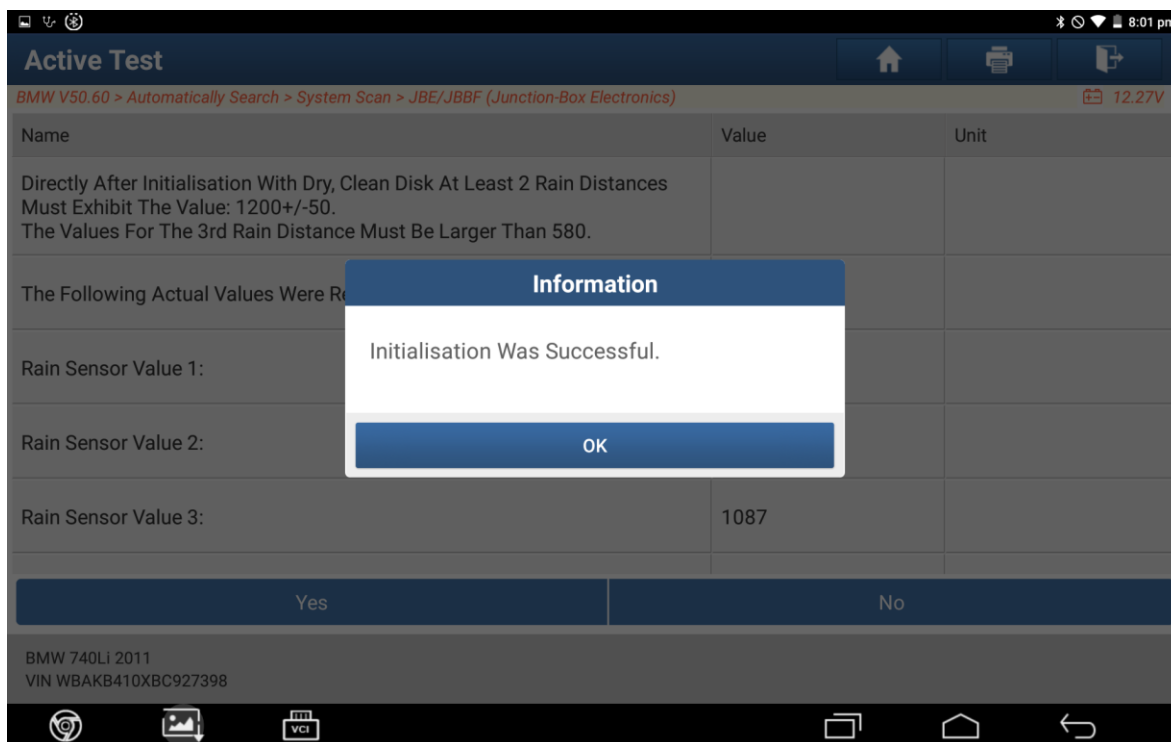

The end.