

Operating instructions for Peugeot and Citroen Anti-Theft Function

Features:

Anti-theft password reading

Requirements:

Required devices: SMARTLINK_HT, X431_PRO_V5, X431_PADV_S, SS_IMP301, etc.

Required software: Peugeot, Citroen V10.01 and above

Steps:

The following is a detailed introduction to the operation steps of [Anti-theft Password Reading] and related precautions.

1. Click the logo of **【 Peugeot and Citroen 】** to enter the software, and then select **【 Anti-theft Password Reading 】**, as shown in Figure 1:

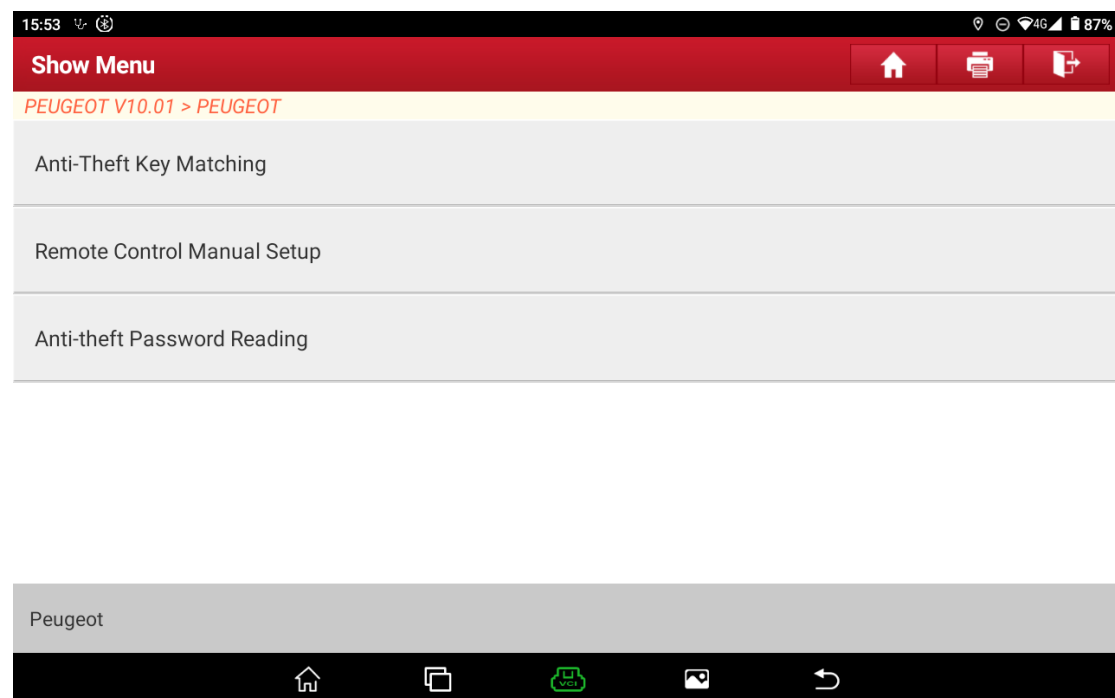


Figure 1

2. After entering the menu, it displays as shown in Figure 2. If you don't know the BSI type, it is recommended to select **【Automatic Scan】** mode.

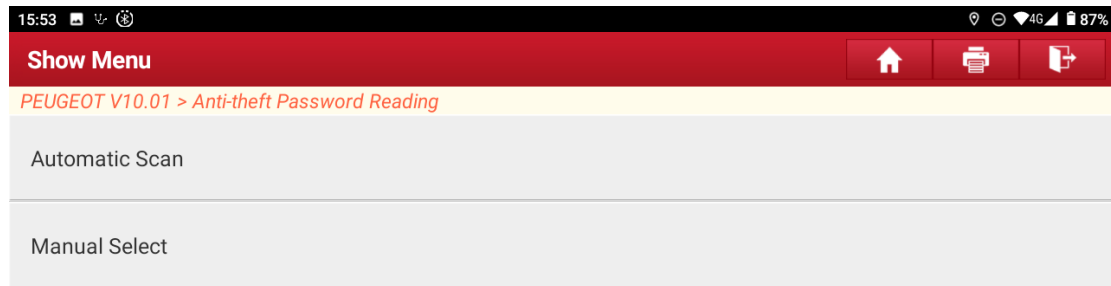


Figure 2

3. Click "OK", as shown in Figure 3:

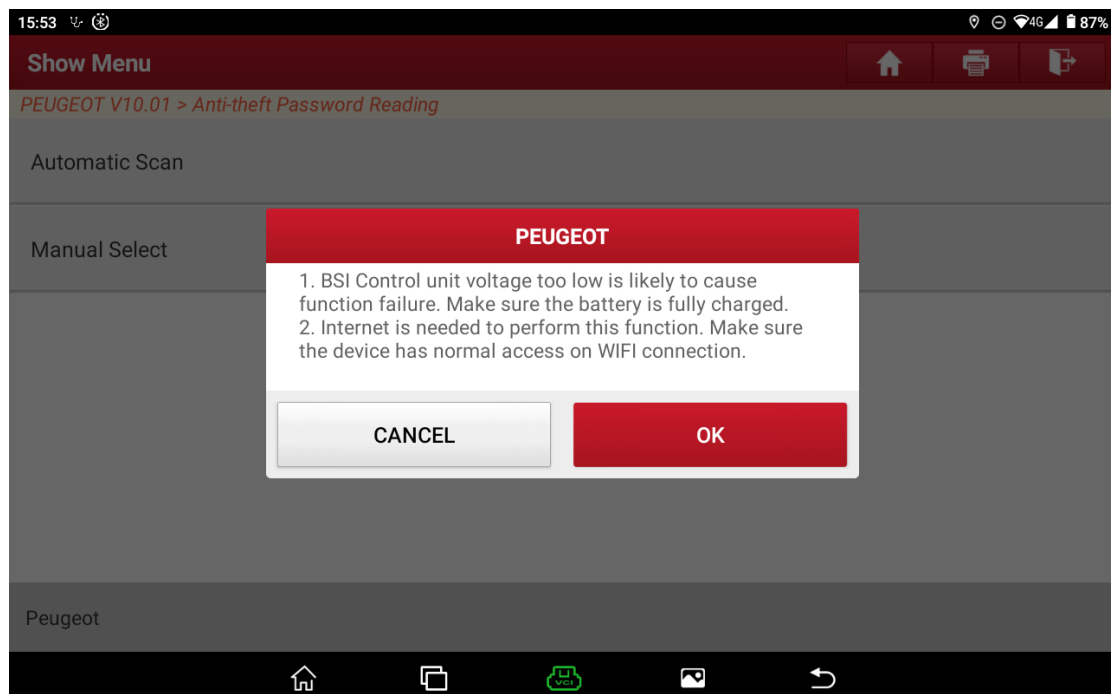


Figure 3

4. After following the prompts, click “OK”, as shown in Figure 4:

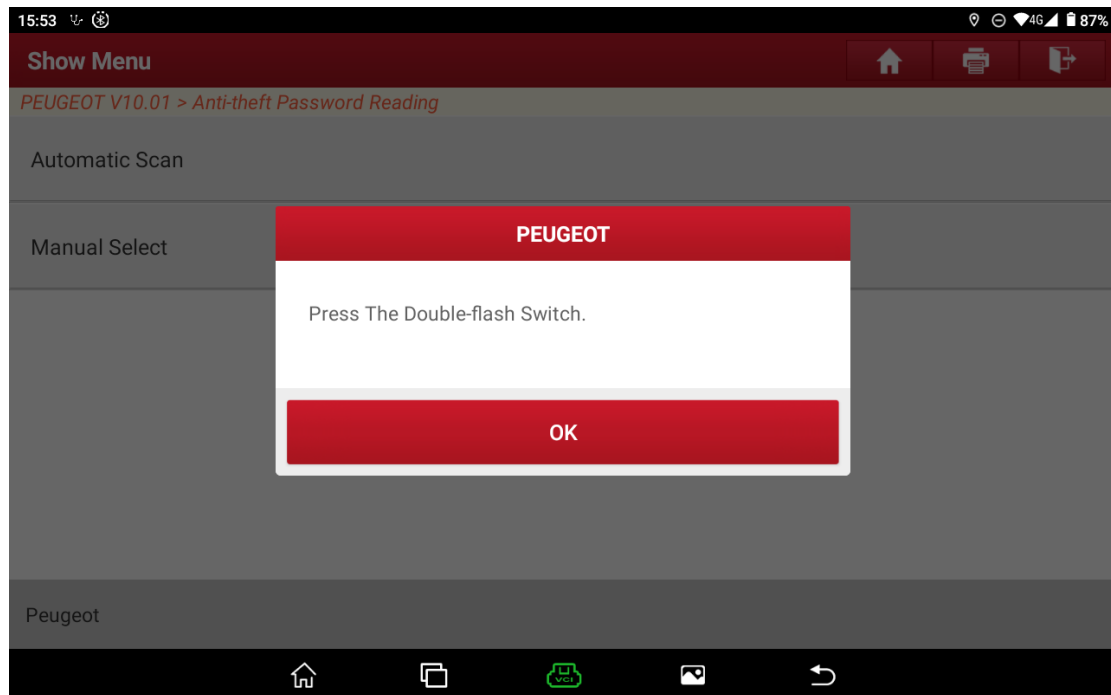


Figure 4

5. Click “OK”, as shown in Figure 5.

Note: **【Wiper start】** and **【Headlamp ON】** are normal when performing this function for some vehicle models.

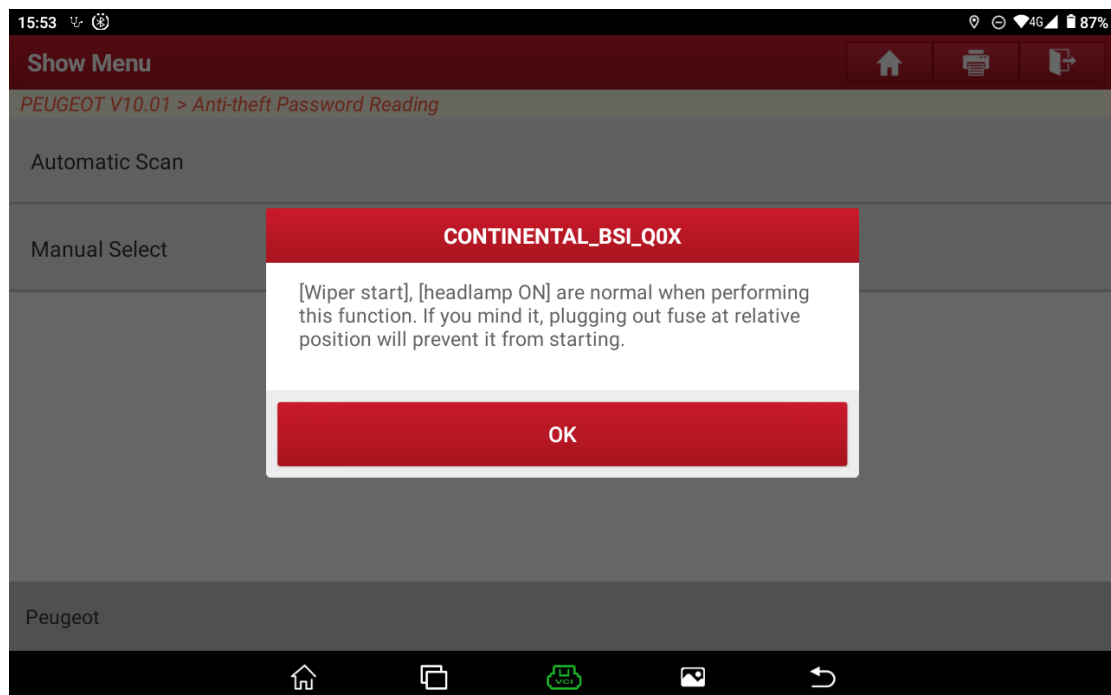


Figure 5

- Click “OK” to start the function, as shown in Figure 6, the process of logging in the system will last about 1-2 minutes, please wait patiently.

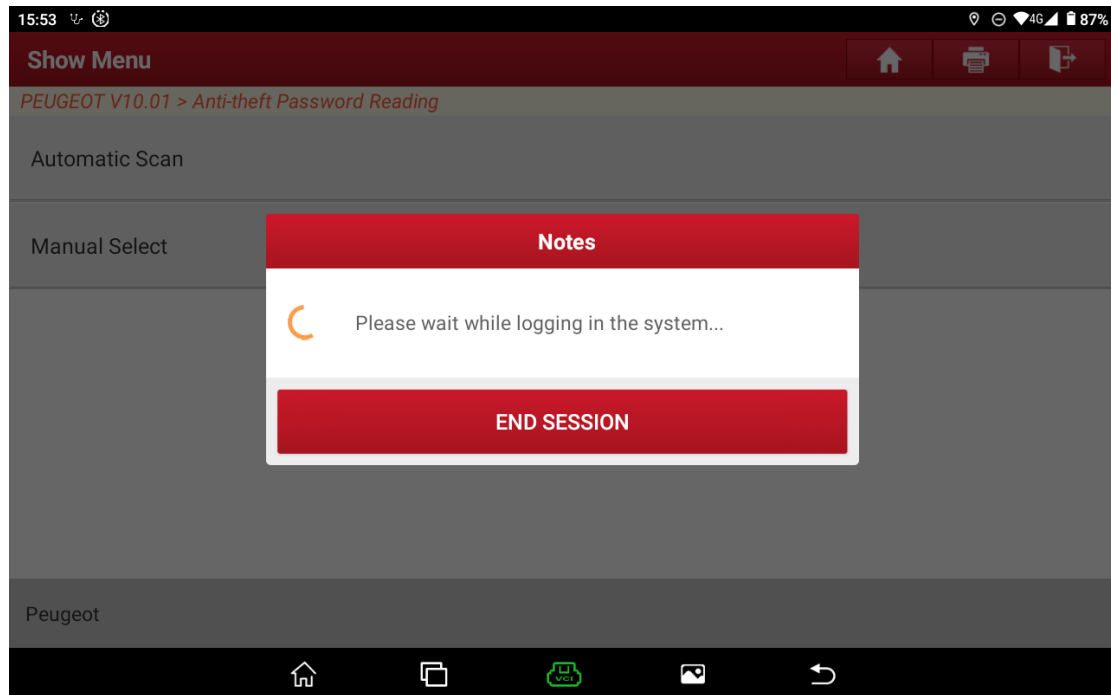


Figure 6

- Start to read EEPROM data, this process will last about 1-2 minutes, please wait patiently, as shown in Figure 7.

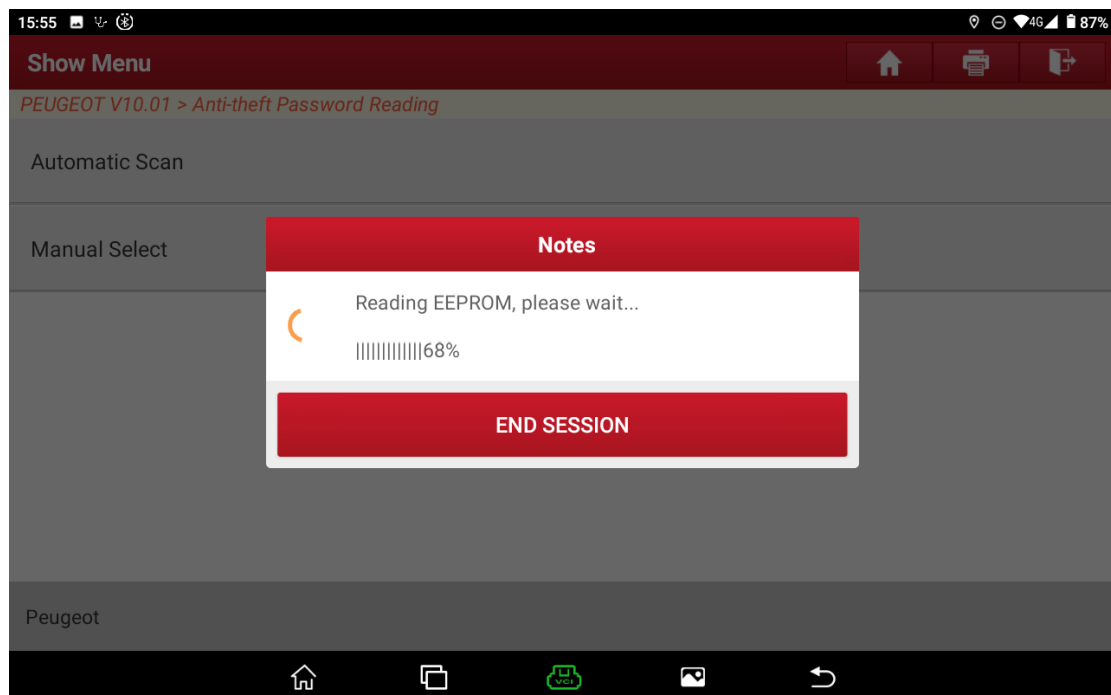


Figure 7

8. After the data is read, the result of the password reading is displayed, as shown in Figure 8. It is recommended to take a screenshot to record the Anti-theft password to facilitate subsequent key matching operations.

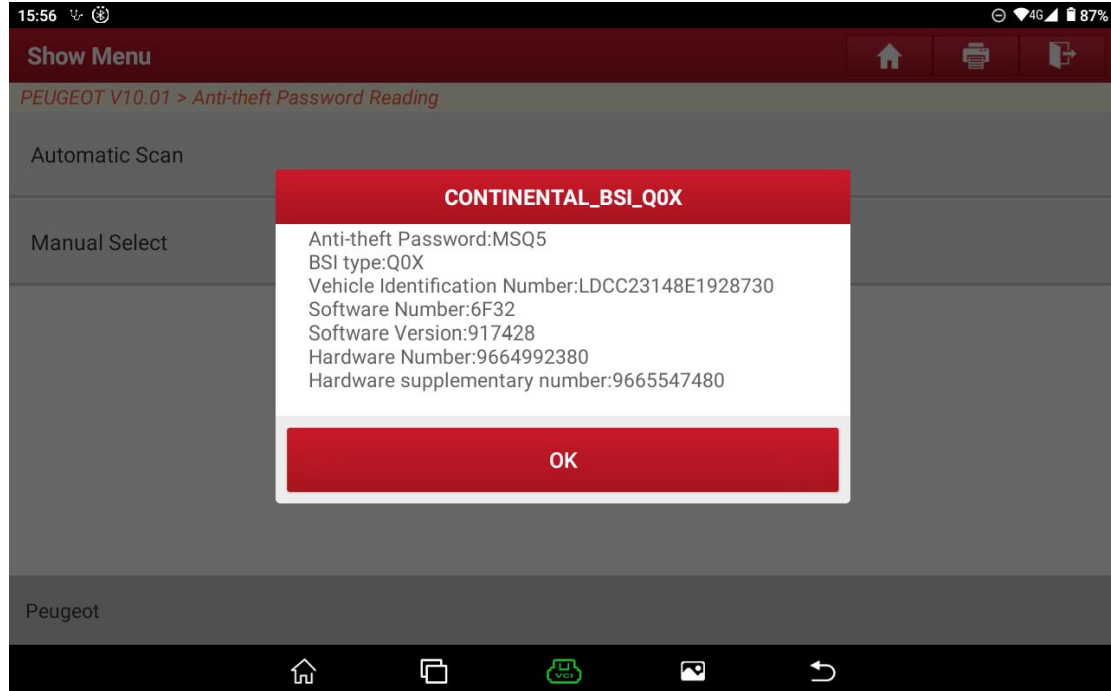


Figure 8

Statement:

The content of this document belongs to Shenzhen Launch Tech Co., Ltd. All rights reserved. Any individual or unit shall not quote or reprint without consent.